

## Oster 002523-013-00

# Oster 002523-013-00 Soda Fountain Instruction Manual

Model: 002523-013-00 | Brand: Oster

## INTRODUCTION

---

This manual provides essential instructions for the safe and efficient use of your Oster 002523-013-00 Soda Fountain. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

## SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse the motor base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the appliance with the cup securely in place.

## COMPONENTS

---

Familiarize yourself with the parts of your Oster Soda Fountain:

- Motor Housing (Chrome finish)
- Mixing Spindle with Agitator
- Cup Rest

- Base (Green)
- Stainless Steel Mixing Cup
- Speed Selector Switch (2 speeds)





Image: The Oster Soda Fountain with its main components: the motor unit with mixing spindle and the separate aluminum mixing cup.

## SETUP

---

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or shipping if needed.
2. **Placement:** Place the soda fountain on a stable, flat, and dry surface. Ensure there is adequate space around the unit for ventilation and operation.
3. **Initial Cleaning:** Before first use, wash the stainless steel mixing cup and mixing spindle (if removable) with warm, soapy water. Rinse thoroughly and dry. Wipe the motor housing and base with a damp cloth.
4. **Power Connection:** Ensure the speed selector switch is in the "OFF" position before plugging the unit into a 127V AC electrical outlet.





Image: The Oster Soda Fountain fully assembled and ready for use.

## OPERATING INSTRUCTIONS

---

1. **Prepare Ingredients:** Add your desired ingredients (milk, ice cream, syrup, etc.) into the stainless steel mixing cup. Do not overfill; ensure ingredients are below the top rim to prevent spills during mixing. The capacity of the cup is 750 milliliters.
2. **Position Mixing Cup:** Place the mixing cup onto the cup rest, ensuring it is securely seated and the mixing spindle is properly inserted into the ingredients. The unit is designed to only operate when the cup is correctly attached and locked into place.
3. **Select Speed:** Turn the speed selector switch to your desired speed setting (Speed 1 or Speed 2). Speed 1 is suitable for lighter mixing, while Speed 2 provides higher power for thicker mixtures or faster blending.
4. **Mix:** Allow the soda fountain to mix until your desired consistency is achieved.
5. **Stop Operation:** Once mixing is complete, turn the speed selector switch to the "OFF" position.

6. **Remove Cup:** Carefully remove the mixing cup from the unit.
7. **Serve:** Pour your mixed beverage into a serving glass.

**Note:** The appliance will only power on when the mixing cup is correctly attached and locked in place. This is a safety feature.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your soda fountain.

1. **Unplug:** Always unplug the appliance from the electrical outlet before cleaning.
2. **Mixing Cup:** Hand wash the stainless steel mixing cup with warm, soapy water. Rinse thoroughly and dry immediately to prevent oxidation. **Do not wash the mixing cup in a dishwasher**, as this may cause discoloration or damage.
3. **Mixing Spindle:** Wipe the mixing spindle and agitator with a damp cloth. For thorough cleaning, you may carefully remove the spindle if your model allows, following specific instructions if provided with the unit. Ensure it is dry before reassembly.
4. **Motor Housing and Base:** Wipe the exterior of the motor housing and base with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the motor housing or base in water or any other liquid.
5. **Storage:** Store the soda fountain in a clean, dry place when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in.	Ensure the power cord is firmly plugged into a 127V AC outlet.
	Mixing cup not securely in place.	Verify the mixing cup is correctly attached and locked into position.
	Power outlet malfunction.	Test the outlet with another appliance or check your circuit breaker.
Motor sounds strained or slows down.	Ingredients are too thick or frozen.	Add more liquid (e.g., milk) to thin the mixture.
	Overfilling the mixing cup.	Reduce the amount of ingredients in the cup. Use Speed 2 for thicker mixtures.
Mixing is uneven.	Insufficient liquid. Ingredients stuck to the bottom/sides.	Add more liquid. Stop the unit, remove the cup, stir ingredients manually, then resume mixing.

## SPECIFICATIONS

Model Number	002523-013-00
Brand	Oster
Capacity	750 Milliliters
Power Source	Corded Electric

Number of Speeds	2
Voltage	127V
Blade Material	Stainless Steel
Container Material	Aluminum
Product Dimensions	8.86 x 11.22 x 19.96 inches
Item Weight	14.3 pounds
UPC	034264445352








Image: Dimensional overview of the Oster Soda Fountain.

## WARRANTY AND SUPPORT

This Oster 002523-013-00 Soda Fountain comes with a full warranty. For specific details regarding the warranty period, coverage, and terms, please refer to the warranty card included with your product or visit the official Oster website. For technical assistance, troubleshooting not covered in this manual, or to inquire about replacement parts, please contact Oster Customer Service. Contact information can typically be found on the manufacturer's website or on the product packaging.

You can visit the official Oster store for more information:[Oster Store](#)

 <p>Oster User Manual Blender Manual de instrucciones Licenciatura Mélangeur</p> <p>MODELS/MODELLES OSTER® BLSTDG SERIES</p> <p>Visit us at <a href="http://www.oster.com">www.oster.com</a></p> <p>P.N. 11114</p>	<p><a href="#">Oster BLSTDG Series Blender User Manual and Recipes</a></p> <p>Comprehensive user manual for the Oster BLSTDG Series Blender, covering important safeguards, features, operating instructions, cleaning, storage, recipes, and warranty information.</p>
 <p>Oster</p> <p>CAFFÈ LATTE AUTOMATICO ESPRESSO LATTE CAPPUCCINO MAKER</p> <p>CAFFÈ LATTE AUTOMATICO ESPRESSO LATTE CAPPUCCINO MAKER</p> <p>CAFFÈ LATTE AUTOMATICO ESPRESSO LATTE CAPPUCCINO MAKER</p>	<p><a href="#">Oster PrimaLATTE Automatic Espresso Latte Cappuccino Maker Instruction Manual</a></p> <p>Discover the Oster PrimaLATTE Automatic Espresso Latte Cappuccino Maker (models BVSTEM6601R, BVSTEM6601W, BVSTEM6601S, BVSTEM6601C, BVSTEM6602SS). This comprehensive instruction manual provides essential safety precautions, detailed operating procedures, cleaning guidelines, and troubleshooting tips for optimal performance and delicious coffee beverages.</p>
 <p>Oster</p> <p>Oster® Pro Series Blender with High Performance Motor</p> <p>Model: BLSTEPH Oster® Pro Series Blender with High Performance Motor</p> <p>Don't Blend!</p> <p>BLSTEPH</p>	<p><a href="#">Oster Pro Series Blender with High Performance Motor User Manual</a></p> <p>User manual for the Oster Pro Series Blender with High Performance Motor (Model BLSTEPH), providing detailed instructions on safety, operation, assembly, cleaning, maintenance, and warranty information.</p>
 <p>Oster</p> <p>TEXTURE SELECT MASTER SERIES TEXTURE SELECT SÉRIE MASTER</p> <p>BLENDER   MÉLANGEUR</p> <p>Don't Blend / Ne pas mélanger</p> <p>Visit us at <a href="http://www.oster.com">www.oster.com</a></p> <p>P.N. 200247</p>	<p><a href="#">Oster Texture Select Master Series Blender User Manual</a></p> <p>User manual for the Oster Texture Select Master Series Blender, providing instructions on operation, care, cleaning, troubleshooting, and recipes. Learn how to use pre-programmed settings and manual controls for optimal blending.</p>
 <p>NINJA</p> <p>OWNER'S GUIDE</p> <p>IMPORTANT SAFETY INSTRUCTIONS</p> <p>SAVE THESE INSTRUCTIONS</p>	<p><a href="#">Oster BL660 Owner's Guide: Refurbished Product Information and Support</a></p> <p>Comprehensive owner's guide for the Oster BL660 blender, detailing accessory variations, important notes on refurbished units, and product support contact information.</p>



### [Oster Kitchen Center Cookbook and Instructions: Versatile Food Preparation](#)

Explore the capabilities of the Oster Kitchen Center with this comprehensive cookbook and instruction manual. Learn to use its blender, mixer, grinder, and salad maker attachments, and discover hundreds of recipes for appetizers, entrees, baked goods, and more.