

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [HP](#) /

› HP 63 Black and Tri-Color Ink Cartridge (L0R46AN) User Manual

HP L0R46AN

HP 63 Black and Tri-Color Ink Cartridge (L0R46AN) User Manual

Model: L0R46AN

[Overview](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

The HP 63 Black and Tri-Color Ink Cartridge pack (L0R46AN) is designed to deliver consistent quality and reliable performance for compatible HP printers. This package includes one black ink cartridge and one tri-color ink cartridge, providing essential supplies for everyday printing needs.

Package Contents:

- 1 x HP 63 Black Ink Cartridge
- 1 x HP 63 Tri-Color Ink Cartridge

Compatible Printer Models:

This ink cartridge pack is compatible with a range of HP DeskJet, ENVY, and OfficeJet printers. Refer to your printer's manual for specific cartridge compatibility. Compatible models include:

- **HP DeskJet Series:** 1112, 2130, 2132, 3630, 3631, 3632, 3633, 3634, 3636, 3637, 3639
- **HP ENVY Series:** 4511, 4512, 4513, 4516, 4520, 4522, 4524
- **HP OfficeJet Series:** 3830, 3831, 3833, 4650, 4652, 4654, 4655, 5212, 5222, 5230, 5232, 5255, 5260, 5264



Image: HP 63 Black and Tri-Color Ink Cartridge 2-pack packaging. The image displays the retail packaging for the HP 63 Black and Tri-Color ink cartridges, showing both cartridges and branding.

2. SETUP AND INSTALLATION

Follow these steps to properly install your new HP 63 ink cartridges into your compatible HP printer.

2.1 Unpacking the Cartridges

1. **Open the Package:** Carefully open the HP 63 ink cartridge package.
2. **Remove Protective Tape:** Locate the orange pull tab on the ink cartridge. Gently pull the tab to remove the protective tape from the nozzles. **Do not touch the copper-colored electrical contacts or the ink nozzles.** Touching these parts can cause clogs, ink failure, and poor electrical connection.



Works with HP Printers

HP DeskJet 1112, 2130, 2132, 3630, 3631,
3632, 3633, 3634, 3636, 3637, 3639

HP ENVY 4511, 4512, 4513, 4516, 4520, 4522, 4524

HP OfficeJet 3830, 3831, 3833, 4650, 4652, 4654,
4655, 5212, 5222, 5252, 5255, 5258, 5260, 5264

Image: HP 63 Black and Tri-Color Ink Cartridges with packaging. This image shows the two ink cartridges (black and tri-color) removed from their packaging, ready for installation.

2.2 Installing Cartridges into the Printer

1. **Power On Printer:** Ensure your HP printer is turned on.
2. **Open Cartridge Access Door:** Open the ink cartridge access door on your printer. The carriage will move to the center of the printer. Wait until the carriage is idle and silent before proceeding.
3. **Remove Old Cartridge (if applicable):** Press down on the old cartridge to release it, then pull it out of its slot.
4. **Insert New Cartridge:** Slide the new cartridge into its designated slot until it clicks into place. The black cartridge typically goes into the right slot, and the tri-color cartridge into the left, but this can vary by printer model. Refer to your printer's specific instructions.
5. **Close Access Door:** Close the ink cartridge access door. The printer may initiate an alignment process.

Engineered to work with
HP printers to provide
**consistent quality,
reliability, and value**

Image: HP printer printing documents with HP 63 ink. This image illustrates an HP printer actively printing documents, demonstrating the cartridges in use.

3. OPERATING INSTRUCTIONS

Once installed, your HP 63 ink cartridges are ready for use. For optimal performance, ensure your printer software is up-to-date and follow general printing guidelines.

3.1 Printing Documents

- **Select Print:** From your computer or device, select the print option in your application.
- **Choose Printer:** Ensure your HP printer is selected.
- **Adjust Settings:** Adjust print settings such as paper type, print quality (draft, normal, best), and color options as needed.
- **Initiate Print:** Click "Print" to begin the printing process.

Brilliant colors
and sharp text
**to represent
the best of you**



Image: Printed documents showing vibrant colors and sharp text. This image highlights the quality of prints, displaying documents with clear text and rich colors.

3.2 Monitoring Ink Levels

You can monitor ink levels through your printer's software utility on your computer or via the printer's control panel display. Low ink warnings will typically appear when cartridges are nearing empty.

4. MAINTENANCE

Proper maintenance of your ink cartridges and printer can extend their lifespan and ensure consistent print quality.

4.1 Cartridge Storage

- Store new, unopened cartridges in their original sealed packaging at room temperature.
- Avoid extreme temperatures and direct sunlight.

- Once opened, install cartridges promptly to prevent ink from drying out.

4.2 Printhead Cleaning

If you notice streaky or faded prints, the printheads may need cleaning. Most HP printers have a built-in printhead cleaning utility accessible through the printer software or control panel.

1. Access your printer's software on your computer.
2. Navigate to "Printer Maintenance" or "Tools."
3. Select "Clean Printheads" or a similar option. Follow the on-screen prompts.

4.3 Cartridge Recycling

HP is committed to environmental responsibility. Used HP ink cartridges can be recycled through the HP Planet Partners program. Visit hp.com/recycle for more information on how to recycle your empty cartridges.



Help protect your printer and data

Built-in security with tamper-resistant chips and firmware^{*}

* Protected by HP Wolf Cartridge Security

Image: Hand placing an empty HP ink cartridge into a recycling bag. This image demonstrates the process of recycling an empty ink cartridge using a provided HP recycling bag.

5. TROUBLESHOOTING COMMON ISSUES

If you encounter problems with your HP 63 ink cartridges, refer to the following common troubleshooting steps.

5.1 Poor Print Quality (Streaks, Fades, Missing Colors)

- **Check Ink Levels:** Verify that the ink cartridges are not empty or critically low.
- **Clean Printheads:** Run the printhead cleaning utility from your printer software (refer to Section 4.2). You may need to run it multiple times.
- **Align Printheads:** Run the printhead alignment utility from your printer software.
- **Inspect Cartridges:** Remove the cartridges and check for any protective tape that might still be covering the nozzles. Ensure no debris is on the electrical contacts.

5.2 Cartridge Not Recognized

- **Reinstall Cartridge:** Remove the cartridge and reinstall it, ensuring it clicks firmly into place.
- **Clean Contacts:** Gently wipe the copper-colored electrical contacts on the cartridge and inside the printer carriage with a lint-free cloth slightly dampened with distilled water. Allow to dry completely before reinserting.
- **Restart Printer:** Turn off the printer, unplug it from the power source for 60 seconds, then plug it back in and turn it on.
- **Verify Authenticity:** Ensure you are using genuine HP cartridges. Non-HP cartridges may not be recognized or may cause issues.



Easy
to recycle¹



¹ HP recycling Planet Partners program availability varies.
4AA6-4523ENW, March 2024, Rev. 5.

Image: HP printer displaying an error message. This image shows a printer's display screen with an error icon, indicating a potential issue that requires attention.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	L0R46AN
Ink Type	Original HP Ink
Cartridge Colors	Black, Tri-Color (Cyan, Magenta, Yellow)
Page Yield (Black)	Approx. 170 pages

Feature	Detail
Page Yield (Tri-Color)	Approx. 150 pages
Product Dimensions	4 x 1 x 10 inches
Item Weight	3.2 ounces
Recycled Content	88% of HP ink cartridges are manufactured with recycled plastic.
Compatible Printers	HP DeskJet 1112, 2130, 2132, 3630, 3631, 3632, 3633, 3634, 3636, 3637, 3639; HP ENVY 4511, 4512, 4513, 4516, 4520, 4522, 4524; HP OfficeJet 3830, 3831, 3833, 4650, 4652, 4654, 4655, 5212, 5222, 5230, 5232, 5255, 5260, 5264

7. WARRANTY AND SUPPORT

7.1 HP Limited Warranty

HP ink cartridges are covered by a limited warranty. This warranty ensures that the cartridges are free from defects in materials and workmanship during the warranty period. For detailed warranty information, please refer to the documentation included with your printer or visit the official HP support website.

7.2 Customer Support

For further assistance, technical support, or to report issues, please contact HP Customer Support. You can find contact information and additional resources on the official HP website:

- **HP Support Website:** support.hp.com
- **HP Instant Ink Program:** For information on ink subscription services, visit instantink.hpconnected.com

