

[Manuals.plus](#) /

> [MILANIX](#) /

> Milanix 14.1" Portable Widescreen LED TV User Manual

MILANIX Milanix 14.1" Portable Widescreen LED TV

Milanix 14.1" Portable Widescreen LED TV User Manual

Model: Milanix 14.1" Portable Widescreen LED TV

1. INTRODUCTION

Thank you for purchasing the Milanix 14.1" Portable Widescreen LED TV. This device is designed for versatile entertainment, offering a clear display, multiple input options, and portability with its built-in rechargeable battery. This manual provides essential information for safe operation, setup, and maintenance of your television.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the product. Keep this manual for future reference.

- **Power Source:** Use only the provided AC/DC adapter. Ensure the power outlet voltage matches the adapter's requirements.
- **Battery Care:** The TV contains a rechargeable lithium-ion battery. Do not expose the battery to excessive heat, direct sunlight, or fire. Do not attempt to disassemble or replace the battery.
- **Placement:** Place the TV on a stable, flat surface. Avoid placing it in direct sunlight, near heat sources, or in areas with high humidity or dust. Ensure adequate ventilation around the unit.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol sprays.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on or near the TV.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Milanix 14.1" Digital LED Display
- Full Function Remote Control
- High Power Antenna
- AC Wall Charger

- AV Cable
- Removable Stand
- Batteries (for remote control)
- Instruction Manual (this document)

COMPLETE ENTERTAINMENT KIT EVERYTHING INCLUDED

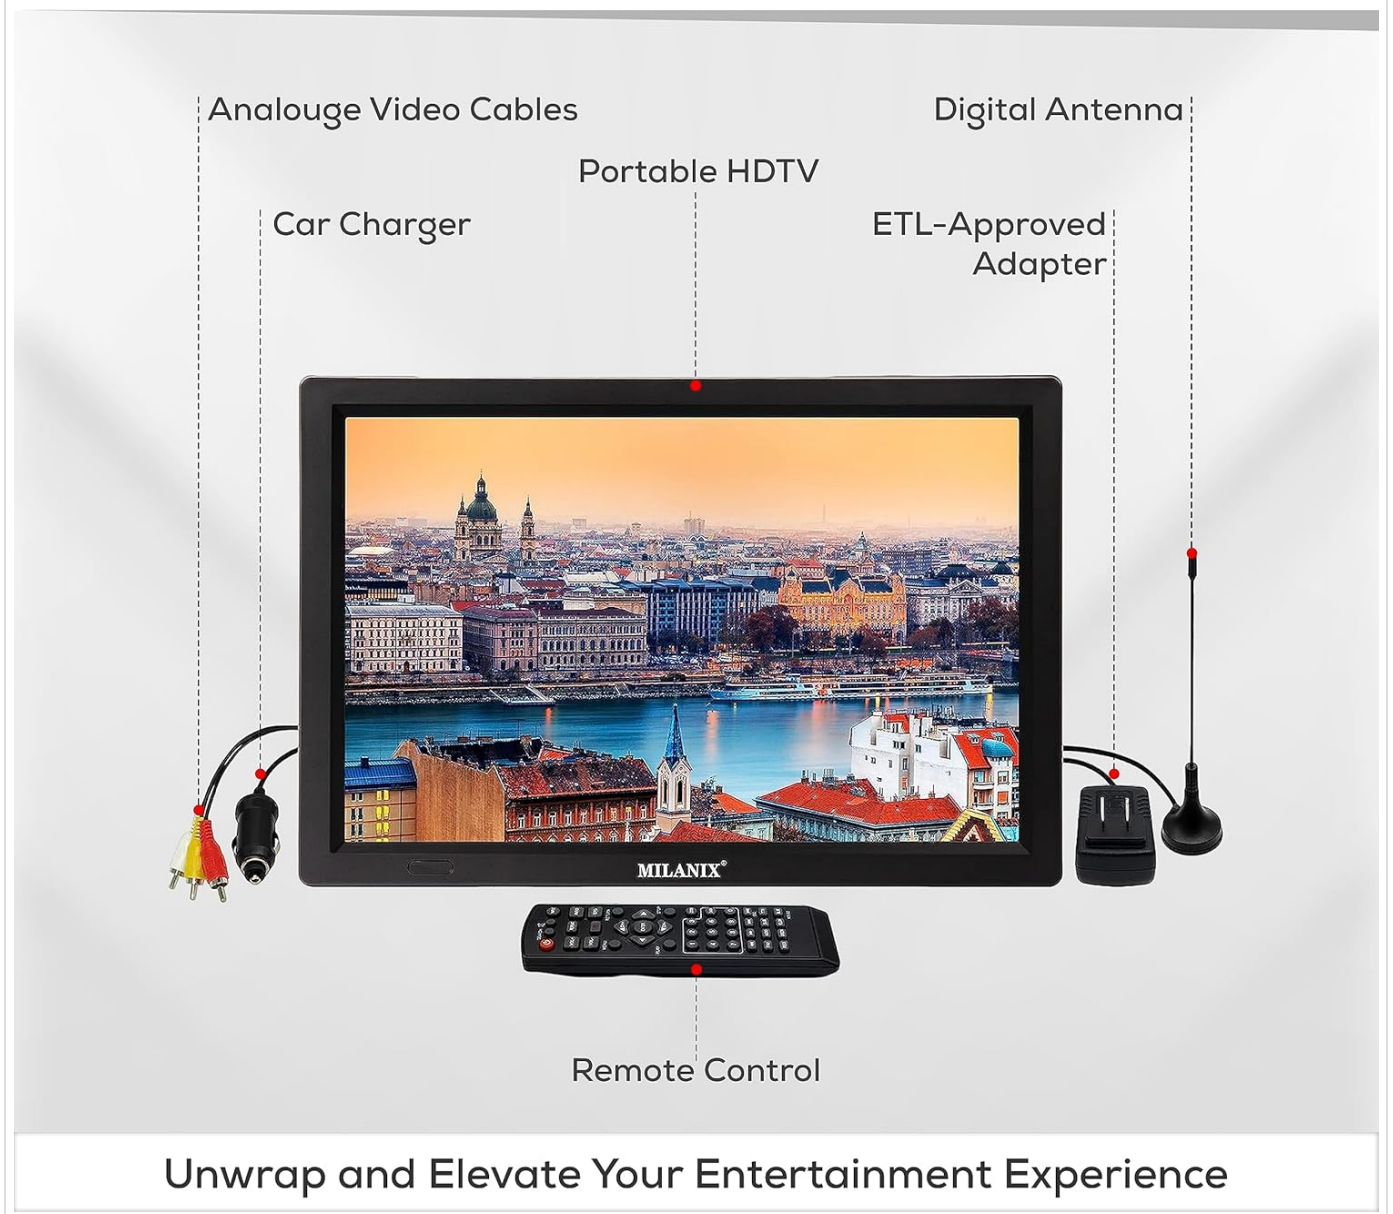


Image: The Milanix 14.1 inch Portable LED TV shown with its complete entertainment kit, including the remote control, digital antenna, AV cables, car charger, and ETL-approved adapter.

4. PRODUCT OVERVIEW

4.1 Front and Rear View

ELEVATE YOUR VIEW

Steadfast Support for Ultimate Entertainment

The Perfect Stand

- ✓ **SECURE STABILITY**
The stand provides a solid foundation, keeping your portable HDTV steady & secure
- ✓ **OPTIMAL VIEWING ANGLE**
Adjustable angle for extended comfort during viewing.
- ✓ **SLEEK DESIGN**
Sleek design seamlessly complements any space.



Image: Rear view of the Milanix 14.1 inch Portable LED TV, highlighting the adjustable stand for stable support and optimal viewing angles. The top panel shows control buttons for SOURCE, MENU, VOL+/-, CH+/-, and POWER.

IMMERSIVE AUDIO

Dynamic Built-in Speaker

▶ BUILT IN TWO SPEAKER

CINEMATIC SOUND

▶ HEADPHONE JACK

POWERFUL PERFORMANCE



Sound That Matches the Visual Splendor

Image: Back view of the Milanix 14.1 inch Portable LED TV, illustrating the built-in dual speakers for immersive audio and the headphone jack for private listening.

4.2 Side Panel Ports

SIMPLIFIED CONTROL NAVIGATE YOUR WAY

SD CARD Port _____

VGA Video Graphics Array _____

AV Analogue Video _____

2.55MM Port _____

HDMI Digital Video & Audio Port _____

USB Universal Serial Bus _____

POWER Input _____



Image: Side view of the Milanix 14.1 inch Portable LED TV, detailing the various input ports including SD Card, VGA, AV, 2.55mm (Headphone), HDMI, USB, and Power Input.

- **SD Card Port:** For playing media from an SD memory card.
- **VGA:** Video Graphics Array input for connecting to a computer.
- **AV In:** Analog Video input for connecting external devices like DVD players.
- **2.55mm Port:** Headphone jack for private listening.
- **HDMI:** High-Definition Multimedia Interface for digital audio and video input.
- **USB:** Universal Serial Bus port for media playback from USB drives.
- **Power Input:** Connect the AC/DC adapter here.
- **Antenna Input:** Coaxial input for connecting the external antenna.

5. SETUP

5.1 Attaching the Stand

1. Carefully remove the TV from its packaging.
2. Locate the removable stand.
3. Align the stand with the mounting points on the back of the TV and secure it firmly.

5.2 Connecting Power

Your TV can be powered by the included AC wall charger or its internal rechargeable battery.

- **AC Power:** Connect the AC wall charger to the Power Input port on the TV and then plug it into a standard electrical outlet.
- **Battery Charging:** The internal battery will charge automatically when the TV is connected to AC power. Ensure the TV is fully charged before initial portable use.

5.3 Connecting the Antenna

1. Screw the provided high-power antenna into the Antenna Input port on the side of the TV.
2. Adjust the antenna's position for optimal signal reception.

5.4 Connecting External Devices

Use the appropriate cables (not all included) to connect external devices:

- **HDMI:** Connect a device like a streaming stick, game console, or Blu-ray player to the HDMI port.
- **VGA:** Connect a computer to the VGA port for use as a monitor.
- **AV In:** Use the included AV cable to connect older devices with composite video and stereo audio outputs.
- **USB/SD Card:** Insert a USB flash drive into the USB port or an SD card into the SD card slot for media playback.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **POWER** button on the TV or the remote control to turn the unit on or off.

6.2 Initial Setup and Channel Scan

1. Upon first power-on, the TV may guide you through an initial setup process.
2. Select your language and country/region.
3. Initiate an automatic channel scan to find available digital (ATSC/NTSC) and analog TV channels. This may take several minutes.

6.3 Input Source Selection

Press the **SOURCE** button on the TV or remote control to cycle through available input sources (TV, AV, HDMI, VGA, USB, SD).

6.4 Volume and Channel Control

- Use the **VOL+** / **VOL-** buttons on the TV or remote to adjust the volume.
- Use the **CH+** / **CH-** buttons on the TV or remote to change channels in TV mode.

6.5 Media Playback (USB/SD)

Insert a USB drive or SD card containing compatible media files. Select the USB or SD source from the input menu. The TV supports the following formats:

- **Video:** MPEG2_HD, MPEG4, MPEG4_HD, H.264, FLV, MVC, AVI, MOV, MPEG 1, MPEG 2, MPEG 3, XVID, AVC,

MP4, MKV, 3GP, WMV, RMVB

- **Audio:** MP3
- **Image:** JPG, JPEG

6.6 FM Radio

In TV mode, you may be able to switch to FM radio mode if supported by the tuner. Refer to the on-screen menu for specific instructions.

7. MAINTENANCE

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution (do not spray directly onto the screen).
- **General Cleaning:** Wipe the exterior of the TV with a soft, dry cloth.
- **Storage:** If storing the TV for an extended period, ensure it is fully charged, then power it off and store it in a cool, dry place away from direct sunlight.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; Battery depleted; Power outlet issue.	Ensure power adapter is securely connected. Charge the battery. Test the power outlet with another device.
No signal / Poor picture in TV mode	Antenna not connected or positioned correctly; No channels scanned; Weak signal.	Check antenna connection. Adjust antenna position. Perform a channel scan. Try a different location for better reception.
No sound	Volume too low or muted; External device audio issue.	Increase volume. Check if mute is active. Ensure external device audio output is correct.
Remote control not working	Batteries depleted or incorrectly inserted; Obstruction between remote and TV.	Replace remote batteries. Ensure correct polarity. Remove any obstructions. Point remote directly at the TV's IR sensor.
Cannot play media from USB/SD	Unsupported file format; USB drive/SD card not properly inserted or corrupted.	Ensure media files are in supported formats (see Section 6.5). Reinsert USB drive/SD card. Try a different USB drive/SD card.

9. SPECIFICATIONS

Feature	Specification
Display Size	14.1 Inches
Display Technology	LED HDTV
Resolution	1080p
Aspect Ratio	16:9
Refresh Rate	60 Hz

Feature	Specification
Tuner Technology	ATSC/NTSC Digital TV Tuner, FM
Hardware Interface	HDMI, VGA, USB, Secure Digital Card (SD), AV Input, Coaxial Antenna
Audio Output	Earphone Jack, Built-in Stereo Speakers
Battery	Rechargeable Lithium Ion (1 included)
Power Source	AC/DC Adapter (ETL Approved) or Internal Battery
Product Dimensions	35.56 x 2.54 x 22.86 cm (14.0 x 1.0 x 9.0 inches)
Product Weight	1.61 kg (3.55 lbs)
Remote Control Technology	Infrared

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.