

Epson L 360

Epson L360 Multi-Function Ink Tank Colour Printer User Manual

Model: L 360

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Epson L360 Multi-Function Ink Tank Colour Printer. The Epson L360 is an all-in-one device designed for printing, scanning, and copying, suitable for home and small office environments. It features an integrated ink tank system for high-volume printing.

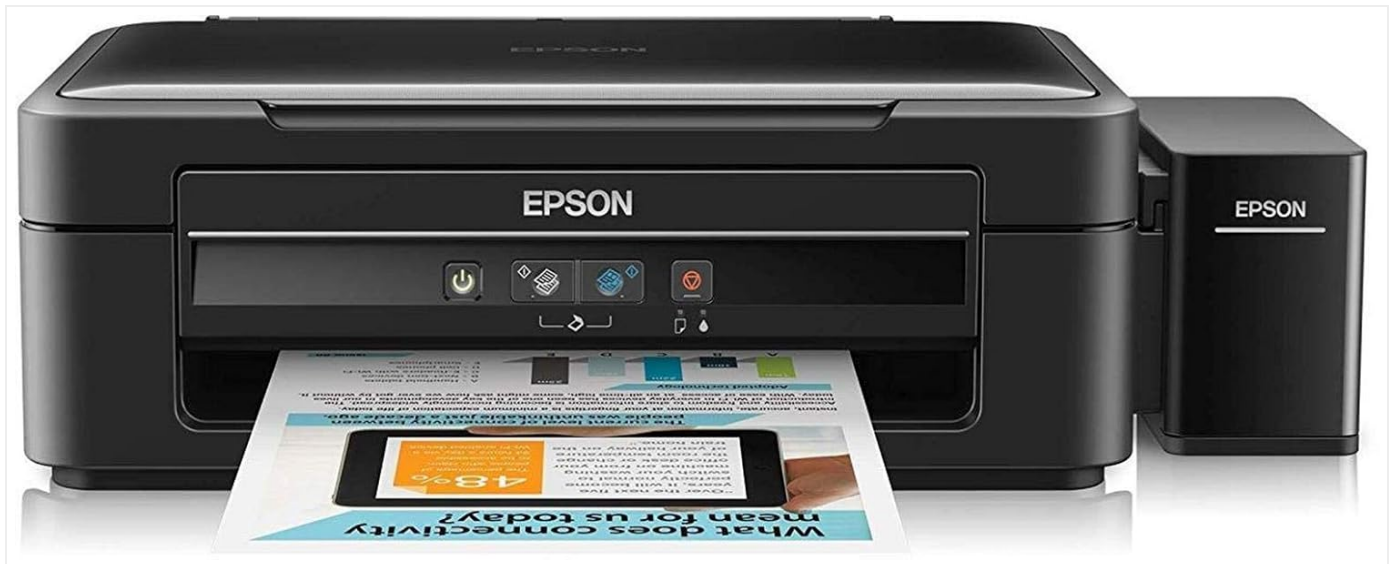


Figure 1.1: Front view of the Epson L360 Multi-Function Ink Tank Colour Printer.

2. IMPORTANT SAFETY INFORMATION

- Always place the printer on a stable, level surface to prevent damage or injury.
- Do not block or cover the ventilation slots on the printer.
- Use only the power cord supplied with the printer.
- Keep ink bottles out of reach of children and do not ingest ink. In case of accidental ingestion, seek medical attention immediately.

- Avoid touching the internal components of the printer, especially during operation, to prevent electric shock or injury.
- Disconnect the power cord from the electrical outlet before cleaning or performing maintenance.

3. WHAT'S IN THE BOX

Upon unpacking your Epson L360 printer, ensure all the following items are present:

- Epson L360 Multi-Function Ink Tank Colour Printer
- Ink Bottle - T6641 (Black)
- Ink Bottle - T6642 (Cyan)
- Ink Bottle - T6643 (Magenta)
- Ink Bottle - T6644 (Yellow)
- Power Cable
- USB Cable
- Setup Guide / Documentation



Figure 3.1: The Epson L360 printer alongside its compatible ink bottles (Black, Cyan, Magenta, Yellow).

4. SETUP INSTRUCTIONS

4.1 Unpacking and Placement

1. Remove the printer from its packaging and remove all protective tapes and materials.
2. Place the printer on a flat, stable surface with adequate space around it for ventilation and paper handling.

4.2 Filling the Ink Tanks

The Epson L360 uses an integrated ink tank system. Follow these steps carefully to fill the ink tanks:

1. Open the ink tank unit cover on the side of the printer.
2. Open the cap for the black ink tank (marked 'BK').
3. Carefully uncap the T6641 Black ink bottle and invert it into the black ink tank's filling port. Allow the ink to drain completely into the tank.
4. Replace the black ink tank cap securely.
5. Repeat steps 2-4 for the Cyan (T6642), Magenta (T6643), and Yellow (T6644) ink tanks, ensuring each color is filled into its corresponding tank.
6. Close the ink tank unit cover.

Important: Use only genuine Epson ink bottles to prevent damage to the printer and ensure optimal print quality.

4.3 Power Connection and Initial Ink Charging

1. Connect the power cord to the printer and then to a power outlet.
2. Press the power button to turn on the printer.
3. The printer will begin an initial ink charging process. This may take several minutes. Do not turn off the printer or disconnect the power during this process.
4. Once ink charging is complete, the power light will stop flashing and remain steady.

4.4 Software Installation

1. Connect the printer to your computer using the supplied USB cable.
2. Insert the software CD-ROM (if provided) into your computer's CD/DVD drive and follow the on-screen instructions. If no CD-ROM is provided, download the latest drivers and software from the official Epson support website.
3. Follow the installation wizard to complete the driver and software setup.

5. OPERATING THE PRINTER

5.1 Loading Paper

1. Open the paper support and pull out the extension.
2. Fan the edges of the paper and load it into the sheet feeder, printable side up.
3. Adjust the edge guides to fit the width of your paper. The printer supports various paper sizes including A4, A5, A6, B5, C6, and DL.



Figure 5.1: Paper loaded into the input tray of the Epson L360 printer.

5.2 Printing Documents

1. Open the document or image you wish to print on your computer.
2. Select **Print** from the application's menu.
3. Choose **Epson L360 Series** as your printer.
4. Adjust print settings such as paper size, print quality, and number of copies. The printer offers a maximum print resolution of 5760 x 1440 dpi.
5. Click **Print**.

The printer can achieve speeds of up to 33 pages per minute for black and white documents and 15 pages per minute for color documents (ISO standards).

5.3 Scanning Documents

1. Lift the scanner lid.

2. Place the document face-down on the scanner glass, aligning it with the corner mark.
3. Close the scanner lid gently.
4. On your computer, open the Epson Scan software or use a compatible scanning application.
5. Select your scanning preferences (e.g., color, grayscale, resolution) and initiate the scan.



Figure 5.2: The Epson L360 printer with its scanner lid open, ready for document placement.

5.4 Copying Documents

1. Place the document on the scanner glass as described in Section 5.3.
2. On the printer's control panel, press the **Color Copy** button for a color copy or the **Black & White Copy** button for a monochrome copy.
3. To make multiple copies, press the respective copy button multiple times for the desired number of copies.

6. MAINTENANCE

6.1 Refilling Ink Tanks

When an ink tank level is low, refill it using the corresponding genuine Epson ink bottle (T6641 Black, T6642 Cyan, T6643 Magenta, T6644 Yellow). Refer to Section 4.2 for detailed ink filling instructions. Regular monitoring of ink levels is recommended to avoid running out during print jobs.

6.2 Print Head Cleaning

If print quality declines (e.g., missing lines, faded colors), perform a print head cleaning. This can be done through the printer's utility software on your computer. Regular printing, even a small black and white or color page every 2-3 days, helps prevent ink from drying in the print head nozzles.

6.3 General Cleaning

Wipe the exterior of the printer with a soft, damp cloth. For the scanner glass, use a lint-free cloth and a non-abrasive glass cleaner. Avoid using alcohol or strong solvents. Keep the printer covered when not in use to protect it from dust.

7. TROUBLESHOOTING

7.1 Printer Not Responding

- Ensure the printer is powered on and the power cable is securely connected.
- Check the USB cable connection between the printer and the computer.
- Verify that the correct printer driver is installed and selected on your computer.

7.2 Poor Print Quality

- Check ink levels and refill any low tanks.
- Perform a print head cleaning (refer to Section 6.2).
- Ensure you are using appropriate paper for your print settings.
- If vertical lines appear in black and white copies, or if the print head is not working properly after extended use, contact customer support.

7.3 Paper Jams

- Turn off the printer and carefully remove any jammed paper from the input tray, output tray, or inside the printer.
- Ensure paper is loaded correctly and not creased or curled.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Printer Type	Ink Tank Multi-Function (Print, Scan, Copy)
Connectivity	USB
Printer Output	Colour
Max Print Speed (Black)	33 ppm

Feature	Specification
Max Print Speed (Colour)	15 ppm
Print Resolution	5760 x 1440 dpi
Scanner Type	Flatbed
Supported Page Sizes	A4, A5, A6, B5, C6, DL
Duplex Print	Manual
Compatible Ink Bottles	T6641 (Black), T6642 (Cyan), T6643 (Magenta), T6644 (Yellow)
Page Yield (Black)	Up to 4500 pages
Page Yield (Colour)	Up to 7500 pages
Item Dimensions (LxWxH)	22.2 x 14.5 x 48.2 cm
Item Weight	4.4 kg
Model Number	L 360
Manufacturer	Epson

9. WARRANTY AND CUSTOMER SUPPORT

9.1 Warranty Information

The Epson L360 printer comes with a 1-year or 30,000 pages (whichever is earlier) on-site warranty from the date of purchase. Please retain your purchase receipt for warranty claims.

9.2 Customer Support and Installation

For free installation assistance or any product-related queries, you may contact Epson customer care. It is recommended to avail the free installation service, especially for new users, to ensure proper setup.

- **Epson Customer Care:** 1860 3000 1600
- **Timings:** 9 am - 6 pm

Contact customer care post receipt of the product to book and schedule free installation and support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question