

tectake 401423-10

tectake Garden Bench, Wood and Cast Iron, Model 401423-10

Instruction Manual

1. INTRODUCTION

Thank you for choosing the tectake Garden Bench, Model 401423-10. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your new garden bench. Please read these instructions carefully before assembly and retain them for future reference.

2. SAFETY INFORMATION

- This bench is designed for a maximum load of 200 kg (approximately 440 lbs). Do not exceed this weight limit.
- Ensure the bench is placed on a stable, level surface to prevent tipping.
- Protect the bench from strong winds or storms by securing it or moving it to a sheltered location.
- Keep children and pets away from the assembly area.
- Regularly inspect all bolts and connections to ensure they remain tight.
- Do not stand on the bench.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 2 x Cast Iron Side Frames
- Wooden Slats for Seat
- Wooden Slats for Backrest
- 1 x Woven Plastic Backrest Insert

- 1 x Hardware Pack (bolts, nuts, washers, Allen key)
- 1 x Assembly Instruction Manual

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow these steps carefully. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Seat Slats:** Secure the wooden seat slats to the designated areas on the cast iron side frames using the provided hardware. Do not fully tighten bolts yet.
3. **Attach Backrest Slats and Insert:** Position the wooden backrest slats and the woven plastic backrest insert between the cast iron side frames. Secure them with the remaining hardware.
4. **Tighten All Connections:** Once all components are in place, gradually tighten all bolts evenly. Do not overtighten.
5. **Final Check:** Ensure the bench is stable and all connections are secure before use.



This diagram illustrates the overall dimensions of the tectake garden bench: approximately 128 cm total length, 51 cm total width, and 73 cm total height. The seat height is approximately 38 cm. The bench has a maximum load capacity of 250 kg and weighs approximately 13 kg.



Key features of the bench include painted wooden slats that repel water and are easy to clean, a sturdy cast iron frame with a decorative design, a backrest with a woven plastic motif, a high load capacity of 250 kg, quick assembly, and easy cleaning.

5. OPERATING INSTRUCTIONS

The tectake Garden Bench is designed for outdoor seating. Once assembled and placed on a stable surface, it is ready for use. It comfortably accommodates two adults.

- Use the bench for seating purposes only.
- Do not use the bench as a step stool or climbing apparatus.
- Avoid placing excessively hot or sharp objects directly on the wooden surfaces to prevent damage.

6. MAINTENANCE

Proper maintenance will extend the life and appearance of your garden bench.

- **Cleaning:** Regularly clean the wood and cast iron components with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid abrasive cleaners.
- **Wood Protection:** To protect the natural wood from weathering and maintain its appearance, periodically apply a suitable wood sealant or varnish.
- **Weather Protection:** If necessary, use a protective cover during harsh weather conditions (heavy rain, snow, prolonged direct sunlight) or store the bench indoors during winter months.
- **Hardware Check:** Periodically check all bolts and nuts and tighten them if necessary to ensure structural integrity.



This image shows a detailed view of the decorative cast iron frame and curved armrests, which contribute to the bench's elegant design and require regular cleaning.



A close-up of the backrest, featuring wooden slats and a green woven plastic motif. Ensure these parts are kept clean and the wood is protected from the elements.

7. TROUBLESHOOTING

If you encounter any issues with your tectake Garden Bench, refer to the following common solutions:

- **Bench feels wobbly:** Check all assembly bolts and nuts. Tighten any loose connections. Ensure the bench is on a flat, even surface.
- **Wood appears faded or dry:** Apply a suitable wood oil, stain, or varnish to restore and protect the wood.
- **Squeaking noises:** Apply a small amount of lubricant to the joints where components meet, if necessary.

For issues not covered here, please contact customer support.

8. SPECIFICATIONS

Attribute	Value
Brand	tectake
Model Number	401423-10
Product Dimensions (L x W x H)	128 cm x 51 cm x 73 cm
Material	Wood
Frame Material	Cast Iron, Wood
Color	Brown
Style	Simple, Natural
Maximum Recommended Weight	200 kg
Item Weight	13 kg

Seat Height	38 cm
Number of Seats	2
Assembly Required	Yes

9. WARRANTY

This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation for specific warranty terms and duration. Keep your proof of purchase for any warranty claims.

10. SUPPORT

For further assistance, missing parts, or warranty inquiries, please contact tectake customer support through the retailer where you purchased the product or visit the official tectake website for contact information.

Website: www.tectake.it (Please note: This link is an example and may not be the exact support page.)