

Lampa 92321

CP.Pedali PD-11 Folding Aluminum Bicycle Pedals Instruction Manual

Model: 92321 | Brand: Lampa

INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your new CP.Pedali PD-11 Folding Aluminum Bicycle Pedals. Please read this manual thoroughly before use to ensure proper function and safety.

PRODUCT OVERVIEW



The CP.Pedali PD-11 pedals are designed for bicycles, offering a durable and convenient folding mechanism. They feature a robust construction of nylon and aluminum, equipped with non-slip PVC footrests for enhanced grip. Each pedal includes a 'K' approved rear reflector, ensuring compliance with road traffic regulations and improving visibility.

Key Features:

- Durable nylon and aluminum construction.
- Folding mechanism for compact storage and transport.
- Non-slip PVC footrests for secure pedaling.
- Integrated 'K' approved rear reflectors for road safety.
- Smooth bearing system for efficient rotation.

SETUP AND INSTALLATION

Tools Required:

- 15mm Pedal Wrench or Adjustable Wrench
- Grease (optional, for pedal threads)

Installation Steps:

1. **Identify Left and Right Pedals:** Pedals are typically marked with 'L' for left and 'R' for right. The right pedal (R) has a standard thread and tightens clockwise. The left pedal (L) has a reverse thread and tightens counter-clockwise.
2. **Prepare Crank Arms:** Ensure the pedal threads on your bicycle's crank arms are clean. Apply a small amount of grease to the pedal threads if desired, to prevent seizing and facilitate future removal.
3. **Install Right Pedal:** Insert the 'R' pedal into the right crank arm. Turn the pedal clockwise by hand to start threading it. Once hand-tight, use your 15mm pedal wrench to fully tighten the pedal. Ensure it is securely fastened but do not overtighten.
4. **Install Left Pedal:** Insert the 'L' pedal into the left crank arm. Turn the pedal counter-clockwise by hand to start threading it. Once hand-tight, use your 15mm pedal wrench to fully tighten the pedal. Ensure it is securely fastened but do not overtighten.
5. **Check for Security:** After installation, gently push and pull on each pedal to ensure it is firmly attached to the crank arm and does not wobble.

Important: Incorrect installation can damage the pedal threads on your crank arms. If you are unsure, consult a professional bicycle mechanic.

OPERATING INSTRUCTIONS

Folding the Pedals:

1. Locate the folding mechanism release button or lever on the pedal body, typically near the spindle.
2. Press or pull the release mechanism firmly.
3. While holding the release, fold the pedal platform downwards or inwards until it locks into the folded position. You should hear a click or feel it secure.
4. Ensure the pedal is fully locked in the folded position before moving or storing the bicycle.

Unfolding the Pedals:

1. Locate the folding mechanism.
2. Press or pull the release mechanism.
3. Unfold the pedal platform outwards until it clicks securely into the open, riding position.
4. Verify that the pedal is fully extended and locked before riding.

Safety Note: Always ensure pedals are fully locked in either the folded or unfolded position before riding or transporting the bicycle. Failure to do so can lead to injury.

MAINTENANCE

Regular maintenance will extend the life and performance of your pedals.

- **Cleaning:** Wipe down pedals with a damp cloth after rides, especially in dirty or wet conditions. Avoid using harsh chemicals that could damage the plastic or paint.
- **Inspection:** Periodically check the pedals for any signs of wear, damage, or looseness. Ensure the reflectors are clean and intact.

- Lubrication:** The internal bearings are typically sealed and do not require regular lubrication. If you notice any grinding or excessive play, it may indicate bearing wear, and professional inspection is recommended.
- Folding Mechanism:** Keep the folding mechanism clean and free of debris. A small amount of light lubricant (e.g., silicone spray) can be applied to the pivot points if the folding action becomes stiff.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pedal feels loose or wobbly.	Pedal not tightened sufficiently to crank arm.	Retighten pedal with a 15mm pedal wrench. Ensure correct threading (left pedal is reverse threaded).
Pedal does not fold/unfold smoothly.	Debris in mechanism; lack of lubrication.	Clean the folding mechanism. Apply a small amount of light lubricant to pivot points.
Grinding noise from pedal.	Worn or damaged internal bearings.	This typically requires professional service or pedal replacement.
Reflector is damaged or missing.	Impact or wear.	Replace the pedal if the reflector cannot be reattached or replaced. Safety is paramount.

SPECIFICATIONS


Attribute	Detail
Model Number	92321
Brand	Lampa
Material	Nylon, PVC, Aluminum
Dimensions (L x W x H)	Approximately 30 x 20 x 10 cm (packaging dimensions, actual pedal dimensions will be smaller)
Color	Multicolor (typically black with orange reflectors)
Bike Type Compatibility	Road Bike (also suitable for folding bikes and city bikes)
Reflector Type	'K' Approved Rear Reflector

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the manufacturer's official website or contact your point of purchase. Keep your proof of purchase for any warranty claims.

Manufacturer: Lampa

Website: www.lampa.it (Note: This is a placeholder URL, please verify the actual manufacturer website for support)

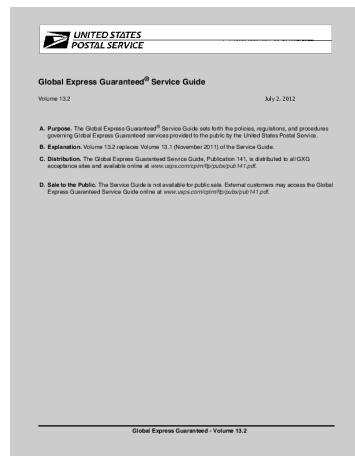

[Global Express Guaranteed Service Guide - International Shipping Policies](#)

Comprehensive guide detailing policies, regulations, and procedures for Global Express Guaranteed (GXG) international expedited delivery services offered by the United States Postal Service in partnership with FedEx Express. Covers shipping requirements, prohibited items, insurance, and form instructions.

lang:en score:23 filesize: 19.87 M page_count: 1159 document date: 2012-06-12