

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CUCKOO](#) /

› [CUCKOO CRP-HV0667F IH Pressure Rice Cooker User Manual](#)

CUCKOO CRP-HV0667F

CUCKOO CRP-HV0667F IH Pressure Rice Cooker User Manual

Model: CRP-HV0667F

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your CUCKOO CRP-HV0667F Induction Heating Pressure Rice Cooker. Please read all instructions carefully before use and retain this manual for future reference.



Image: Front-angled view of the CUCKOO CRP-HV0667F IH Pressure Rice Cooker, showcasing its white and silver design with an orange LED display.

IMPORTANT SAFETY PRECAUTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the power cord is not damaged and is properly connected to a grounded outlet (120 Volts).
- Keep hands and face clear of the steam vent during operation.
- Do not operate the appliance if it is damaged or malfunctioning. Contact customer service for assistance.
- This appliance is for household use only.

SETUP AND FIRST USE

1. Unpacking and Component Check

Carefully remove all packaging materials. Verify that all components are present:

- CUCKOO CRP-HV0667F Rice Cooker Unit
- Stainless Steel Inner Pot with X-Wall Nonstick Coating
- Rice Spatula
- Rice Measuring Cup
- Steam Plate
- Product Manual (this document)



Image: The CUCKOO CRP-HV0667F rice cooker's accessories, including the inner pot, rice spatula, measuring cup, and instruction manual.

2. Initial Cleaning

Before first use, wash the inner pot, rice spatula, and measuring cup with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the rice cooker with a damp cloth. Do not use abrasive cleaners.

3. Placement

Place the rice cooker on a stable, level surface away from direct heat sources and moisture. Ensure adequate ventilation around the unit. The dimensions are approximately 14.3 inches (D) x 10 inches (W) x 10.4 inches (H).

4. Power Connection

Plug the power cord into a standard 120-Volt grounded electrical outlet. The unit will typically emit a sound and the LED display will illuminate.

OPERATING INSTRUCTIONS

1. Preparing Rice

1. Measure the desired amount of rice using the provided measuring cup. One cup of uncooked rice typically yields about 2-3 cups of cooked rice.
2. Rinse the rice thoroughly under cold water until the water runs clear.
3. Place the rinsed rice into the stainless steel inner pot.
4. Add water according to the markings inside the inner pot or refer to the cooking chart below. For optimal results, use the water level corresponding to the type and quantity of rice.
5. Place the inner pot into the main unit and close the lid securely.

2. Selecting a Menu Option

The CRP-HV0667F offers 12 menu options. Use the **Menu/Selection** button to cycle through options displayed on the LED screen. Common options include:

- Glutinous/White Rice
- GABA/Brown Rice
- Sushi Rice
- Mixed Rice
- Pressure Cook
- Nu Rung Ji (Scorched Rice)
- Multi-Cook
- Turbo (for faster white rice cooking)

Once your desired menu option is selected, press the **Pressure Cook** button to begin cooking. The smart algorithm will detect the grain type and internal temperature for optimal results.

3. Special Functions

- **Preset Timer:** Use this function to set a delayed cooking start time, allowing you to have freshly cooked rice ready at a specific hour.
- **Reheat:** This option is designed to warm up leftover rice without overcooking it.
- **Keep Warm:** After cooking, the unit automatically switches to a keep-warm mode to maintain the rice at an ideal serving temperature.
- **My Mode:** Customize cooking settings for specific preferences. Refer to the detailed instructions in the full manual for programming My Mode.

4. Grain Cooking Time / Ratio Chart

Refer to the following chart for estimated cooking times for various grain types. Water ratios are typically indicated by the inner pot's markings.



Image: A chart detailing estimated cooking times for different grain types on the CUCKOO CRP-HV0667F, including Glutinous, Turbo, Mixed Rice, GABA Rice, and Porridge.

Grain Type	Estimated Cooking Time
Glutinous Rice	20-33 minutes
Turbo (White Rice)	14-20 minutes
Mixed Rice	46-50 minutes
GABA Rice	51-55 minutes
Porridge	79-92 minutes

CARE AND MAINTENANCE

1. Daily Cleaning

- Always unplug the rice cooker and allow it to cool completely before cleaning.

- Remove the inner pot and wash it by hand with warm, soapy water. The X-Wall nonstick coating is designed for easy cleaning.
- Wipe the interior of the lid and the main unit with a damp cloth. Ensure no food particles are left around the sealing gasket or steam vent.
- Wipe the exterior of the unit with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.



Image: The CUCKOO CRP-HV0667F rice cooker with its lid open, revealing the stainless steel inner pot and the lid's interior components.



Image: A close-up view of the CUCKOO CRP-HV0667F rice cooker's lid interior, highlighting the removable parts for cleaning.

2. Auto-Clean Function

The CRP-HV0667F features an auto-clean function for effortless deep cleaning of the interior. To use:

1. Fill the inner pot with water up to the designated auto-clean line (refer to inner pot markings).
2. Close the lid securely.
3. Select the **Auto-Clean** option from the menu.
4. Press the **Pressure Cook** button to start the cycle. The unit will steam the interior to loosen food residue.
5. Once complete, unplug the unit and wipe down the interior with a damp cloth.

TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common solutions. For problems not listed here, contact CUCKOO customer support.

Problem	Possible Cause	Solution
Rice is too hard or undercooked.	Insufficient water, incorrect rice type selection, or lid not properly sealed.	Ensure correct water-to-rice ratio. Select the appropriate menu option. Check that the lid is fully closed and sealed.
Rice is too soft or mushy.	Too much water, incorrect rice type selection.	Reduce water slightly for future cooking. Select the appropriate menu option.
Unit does not power on.	Power cord not properly connected, power outage.	Check power cord connection to both the unit and the outlet. Verify the outlet has power.
Steam leaks from the lid.	Lid not properly closed, sealing gasket dirty or damaged.	Ensure the lid is securely closed. Clean the sealing gasket. If damaged, contact customer service for replacement.

SPECIFICATIONS

- **Model:** CRP-HV0667F
- **Brand:** CUCKOO
- **Capacity:** 6 Cups (Uncooked) / 1.5 Quarts
- **Product Dimensions:** 14.3" (Depth) x 10" (Width) x 10.4" (Height)
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Color:** White/Silver (as pictured)
- **Material:** Aluminum body, Stainless Steel inner pot and lid
- **Inner Pot Coating:** X-Wall Nonstick Diamond Coating
- **Weight:** Approximately 12.4 Pounds
- **Special Features:** Induction Heating, Pressure Cooking, Automatic Keep Warm, Preset Timer, Reheat Function, Auto-Clean, LED Display, My Mode.

WARRANTY AND CUSTOMER SUPPORT

Warranty Information

Specific warranty terms and conditions for the CUCKOO CRP-HV0667F are typically provided with the product documentation or can be found on the official CUCKOO website. Please refer to these resources for details regarding warranty coverage, duration, and claims procedures.

Customer Support

For technical assistance, troubleshooting guidance, or to inquire about replacement parts, please contact CUCKOO customer support. Contact information can usually be found on the CUCKOO official website or in the included product manual.



[CUCKOO CRP-G10 Fuzzy Series Electric Rice Cooker/Warmer: Operating Instructions and Limited Warranty](#)

Explore the CUCKOO CRP-G10 Fuzzy Series Electric Pressure Rice Cooker/Warmer with this comprehensive guide. It details operating instructions, safety warnings, maintenance tips, and the limited warranty provided by CUCKOO ELECTRONICS CO.,LTD.



[CUCKOO CRP-HR08 Fuzzy Series IH Pressure Jar Cooker Operating Instructions](#)

This document provides comprehensive operating instructions for the CUCKOO CRP-HR08 Fuzzy Series IH Pressure Jar Cooker, covering safety precautions, usage guides, cleaning procedures, and troubleshooting tips.



[CUCKOO CRP-HN10 Fuzzy Series Electric Pressure Rice Cooker/Warmer Operating Instructions](#)

This document provides comprehensive operating instructions and safety guidelines for the CUCKOO CRP-HN10 Fuzzy Series Electric Pressure Rice Cooker/Warmer. It covers essential information on safe usage, various cooking functions, maintenance, and troubleshooting to ensure optimal performance.



[CUCKOO IH Pressure Rice Cooker CRP-JH10 FUZZY Series Operating Instructions](#)

This document provides comprehensive operating instructions and cooking guidance for the CUCKOO IH Pressure Rice Cooker, model CRP-JH10 FUZZY Series. It covers safety precautions, product specifications, cooking methods, and troubleshooting tips to ensure optimal use of the appliance.



[CUCKOO CRP-P1009S Series Electric Pressure Rice Cooker/Warmer User Manual](#)

Comprehensive operating instructions and user manual for the CUCKOO CRP-P1009S Series electric pressure rice cooker/warmer. Includes safety precautions, operating guide, cooking methods, cleaning instructions, and troubleshooting.



[CUCKOO CRP-DH06 Fuzzy Series IH Pressure Jar Cooker Operating Instructions](#)

Comprehensive operating instructions and safety guidelines for the CUCKOO CRP-DH06 Fuzzy Series IH Pressure Jar Cooker. This manual covers setup, usage, cleaning, maintenance, troubleshooting, and warranty information.