

[Manuals.plus](#) /

› [Invicta](#) /

› Invicta S1 Rally Model 19289 Quartz Watch User Manual

Invicta 19289

Invicta S1 Rally Model 19289 Quartz Watch User Manual

Comprehensive instructions for your Invicta S1 Rally Model 19289 timepiece.

[Setup](#)[Operating Instructions](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Invicta S1 Rally Model 19289 Quartz Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



Image: Front view of the Invicta S1 Rally Model 19289 watch, showcasing its black dial with gold chronograph sub-dials and a black

perforated leather strap.

SETUP

1. Unboxing Your Watch

Your Invicta S1 Rally watch comes securely packaged. Carefully open the box to reveal your new timepiece.

Your browser does not support the video tag.

Video: A demonstration of unboxing the Invicta S1 Rally watch, showing the packaging and initial presentation of the watch.

2. Setting the Time

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to the second click position.
2. **Adjust the time:** Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. **Push in the crown:** Once the time is set, push the crown back into its normal position to start the watch movement.



Image: Diagram illustrating the watch crown, bezel, case size, and crystal type, highlighting the crown for time adjustment.

OPERATING INSTRUCTIONS

Using the Chronograph Function

Your Invicta S1 Rally watch features a functional chronograph with 60-minute, 60-second, and 24-hour subdials. This allows you to measure elapsed time independently of the main time display.

1. **Start:** Press the upper pusher button to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher button again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** Press the lower pusher button to reset the chronograph hands to their zero positions.



Image: Diagram detailing the watch's quartz chronograph movement and timekeeping functions, including the subdials.

Water Resistance

This watch is water resistant to 100 meters (330 feet). This makes it suitable for recreational surfing, swimming, snorkeling, sailing, and other water sports. It is **not** suitable for diving.

Important: Do not operate the crown or pushers while the watch is wet or submerged in water, as this can compromise the water resistance.



Image: An Invicta watch with visual indicators for various water resistance levels, showing 100M suitability for swimming and snorkeling.

MAINTENANCE

Cleaning Your Watch

- Wipe the watch case and crystal with a soft, dry cloth to remove dust and fingerprints.
- For the leather strap, avoid prolonged exposure to water, direct sunlight, and harsh chemicals to prevent damage and discoloration.

Battery Replacement

Your watch is powered by an SR920SW lithium metal battery. When the watch stops or the second hand begins to jump erratically (indicating low battery), it's time for a replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight and extreme temperatures. The original Invicta watch box is ideal for storage.



Image: The Invicta S1 Rally watch presented in its distinctive yellow Invicta box, suitable for storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Depleted battery.	Replace the battery (SR920SW) by a qualified technician.
Time is incorrect.	Crown not pushed in completely after setting, or accidental adjustment.	Reset the time and ensure the crown is fully pushed in.
Chronograph hands do not reset to zero.	Requires calibration or internal issue.	Consult a qualified watch technician for adjustment or repair.
Moisture under the crystal.	Compromised water resistance seal.	Immediately take the watch to a qualified technician to prevent further damage.

SPECIFICATIONS

- Model Number:** 19289
- Movement:** Japanese Quartz (VD54 Caliber)
- Case Material:** Black Stainless Steel
- Case Diameter:** 48mm
- Case Thickness:** 13.5mm (approx. 14mm)
- Dial Color:** Black with Gold Accents
- Crystal Type:** Mineral
- Band Material:** Black Leather
- Band Length:** 210mm
- Band Width:** 22mm
- Clasp Type:** Buckle
- Water Resistance:** 100 meters (330 feet)
- Functions:** Chronograph (60min, 60sec, 24hr subdials), Time (Hour, Minute, Second)
- Battery:** SR920SW (included)
- Weight:** 100 grams (approx. 0.01 ounces)

WARRANTY & SUPPORT

Manufacturer's Warranty

Your Invicta S1 Rally Model 19289 watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects in materials and workmanship under normal use.

Customer Support

For any questions, service requests, or warranty claims, please contact Invicta customer support through their official website or the contact information provided in your warranty documentation. When contacting support, please have your watch model number (19289) and proof of purchase readily available.

Your browser does not support the video tag.

Video: An official video showcasing the Invicta S1 Rally 19289 watch, providing a general overview of its design and features.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question