

Koss KSC32i GRY

Koss KSC32iGry In-Ear Sport Clip Headphones User Manual

Model: KSC32i GRY | Brand: Koss

1. INTRODUCTION

Thank you for choosing the Koss KSC32iGry In-Ear Sport Clip Headphones. These headphones are designed for active lifestyles, featuring a secure sport clip fit, sweat resistance, and an in-line microphone for convenient communication. This manual provides essential information for setting up, operating, and maintaining your headphones to ensure optimal performance and longevity.



Image 1.1: The Koss KSC32iGry In-Ear Sport Clip Headphones in Gray, showcasing the earbud and sport clip design.

2. PACKAGE CONTENTS

Ensure all items are present in your package:

- Koss KSC32i Fitclips Earbuds with Microphone (Gray)
- Multiple sizes of silicone ear cushions (small, medium, large)



Image 2.1: Included ear cushions in three different sizes to ensure a comfortable and secure fit.

3. SETUP AND FIT

Proper fit is crucial for both comfort and sound quality, especially during physical activity. The KSC32i headphones feature a unique sport clip design that rests securely over your ear.

1. **Select Ear Cushions:** Choose the ear cushion size (small, medium, or large) that provides the most comfortable and secure seal within your ear canal. A good seal enhances bass response and noise isolation.
2. **Positioning the Sport Clip:** Gently place the earbud into your ear canal. Then, guide the flexible sport clip over the top and behind your ear. The clip is designed to conform to the shape of your ear, holding the earbud firmly in place without discomfort.
3. **Cable Management:** The cable runs through the back of the sport clip. Allow gravity to assist in creating a perfect fit as the cable hangs naturally.
4. **Connect to Device:** Plug the 3.5mm audio jack into your audio source (smartphone, MP3 player, etc.).

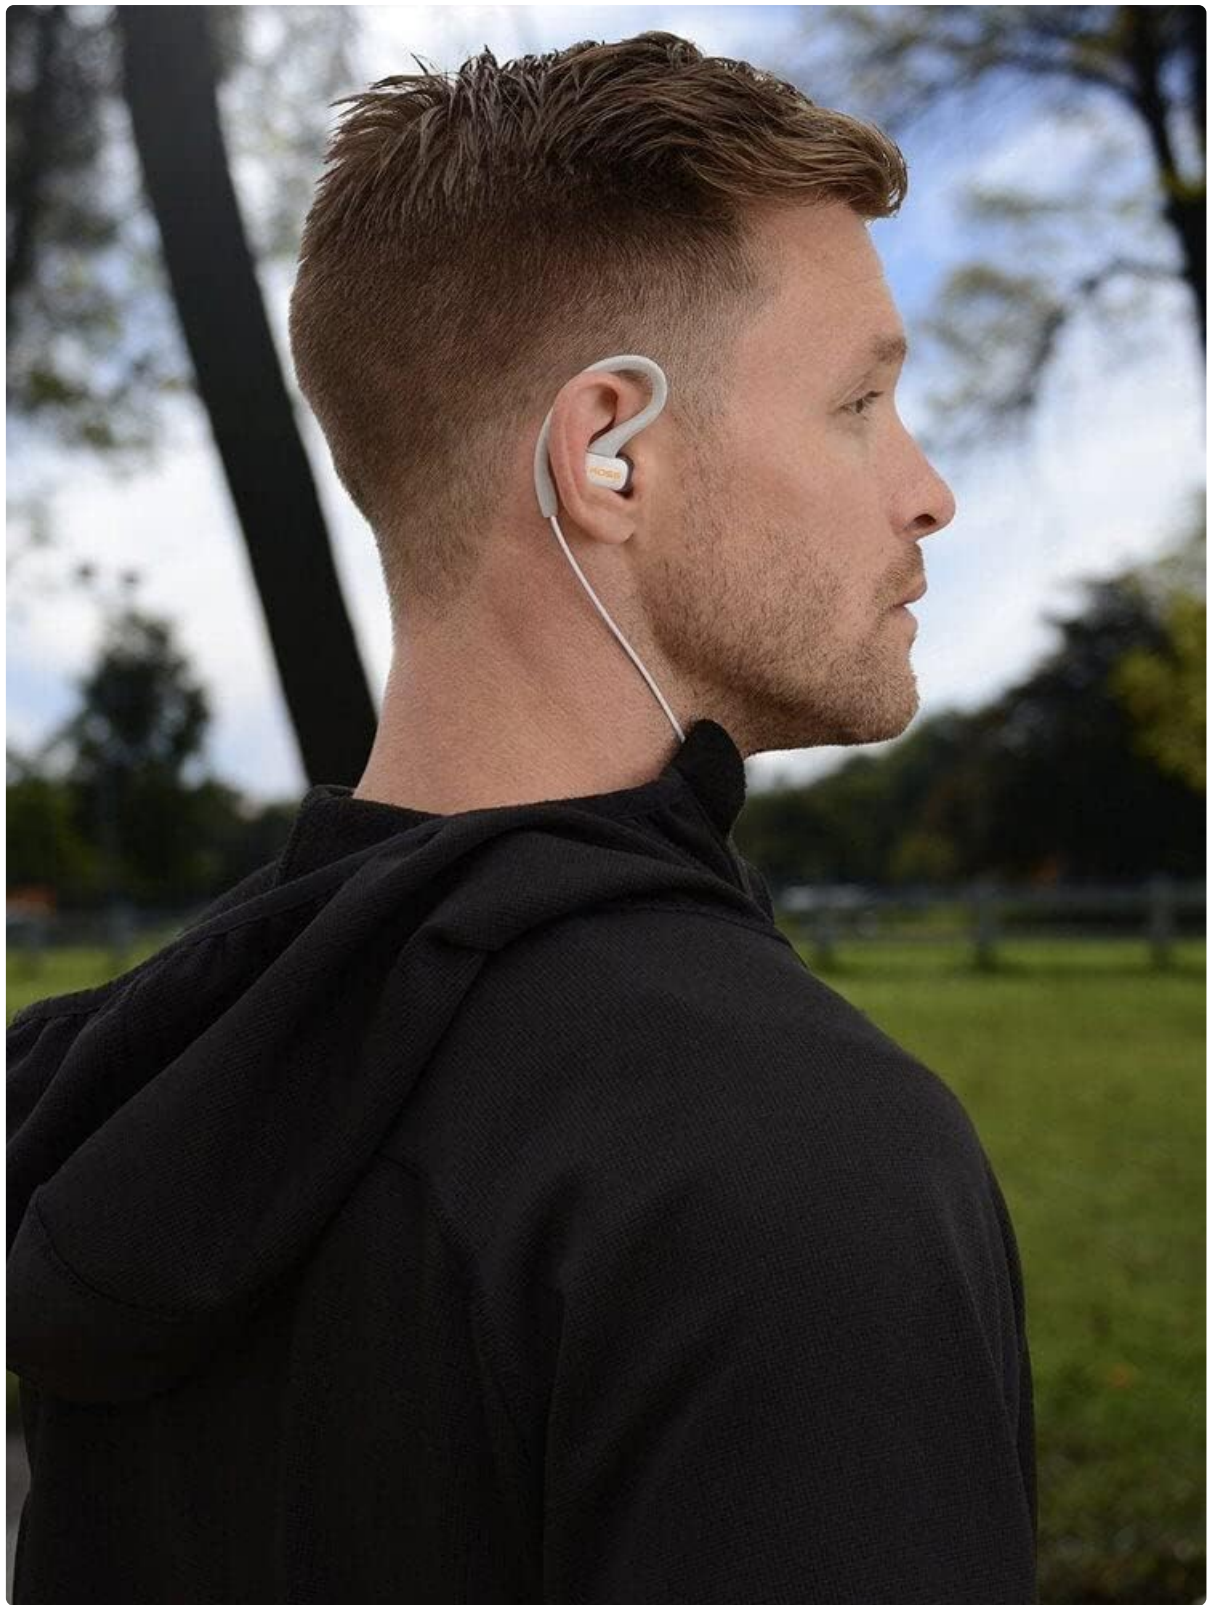 


Image 3.1: A person demonstrating the secure and comfortable fit of the Koss KSC32i headphones during an outdoor activity.



4. OPERATING INSTRUCTIONS

The KSC32i headphones feature an in-line microphone with a one-touch control button for managing audio and calls.

- **Audio Playback:** Once connected to your device, audio will play through the headphones. Use your device's volume controls to adjust the listening level.
- **Play/Pause:** Press the button on the in-line microphone once to play or pause audio.
- **Answer/End Call:** When a call comes in, press the button once to answer. Press it again to end the call.
- **Microphone Usage:** The integrated microphone allows for hands-free communication during calls. Ensure the microphone is positioned appropriately for clear voice pickup.



Image 4.1: The in-line one-touch microphone, providing convenient control for audio and calls.

Your browser does not support the video tag.

Video 4.1: An official product video demonstrating the features and fit of the Koss KSC32i Sport Clip Headphones, including the flexible design, ear cushion sizes, sweat resistance, and in-line microphone.

5. MAINTENANCE AND CARE

To ensure the longevity and performance of your Koss KSC32i headphones, follow these care guidelines:

- **Cleaning:** The headphones are sweat resistant. After intense workouts, gently wipe the earbuds and sport clips with a soft, damp cloth. Ensure they are dry before storage. Do not submerge in water.
- **Ear Cushions:** Remove ear cushions periodically and clean them with mild soap and water. Rinse thoroughly and allow them to air dry completely before reattaching.
- **Storage:** Store your headphones in a clean, dry place away from extreme temperatures and direct sunlight. Avoid tangling the cable by coiling it loosely.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong detergents, as these can damage the materials.

6. TROUBLESHOOTING

If you encounter issues with your headphones, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound or low volume	Cable not fully plugged in. Device volume too low or muted. Incorrect ear cushion size/poor seal. Damaged cable or connector.	Ensure 3.5mm jack is fully inserted into your device. Increase volume on your device and check for mute settings. Try different ear cushion sizes to achieve a proper seal. Test with another audio device or cable if possible.
Poor sound quality (tinny, distorted)	Poor earbud seal. Audio source quality.	Adjust earbud position and try different ear cushion sizes for a better seal. Test with high-quality audio files or another device.
Microphone not working	Device settings. Microphone port issue.	Check your device's audio input settings to ensure the external microphone is selected. Ensure the 3.5mm jack is fully inserted.
Headphones fall out during activity	Improper fit of sport clip or ear cushion.	Experiment with different ear cushion sizes. Adjust the sport clip to ensure it sits snugly over and behind your ear.

7. SPECIFICATIONS

Feature	Detail
Model Name	KSC32i
Connectivity Technology	Wired
Headphones Jack	3.5 mm Jack
Frequency Response	15 Hz - 25 kHz
Impedance	16 Ohm
Noise Control	Sound Isolation
Water Resistance Level	Water Resistant (Sweat Resistant)
Control Type	Touch Control (One-touch in-line microphone)
Ear Placement	In Ear
Form Factor	In Ear (with Sport Clip)

Feature	Detail
Item Weight	25 Grams (0.882 ounces)
Product Dimensions	6 x 1 x 2.6 inches
Manufacturer	Koss
Country of Origin	China

8. WARRANTY INFORMATION

Koss products are known for their durability and quality. For detailed warranty information regarding your KSC32i headphones, please refer to the official Koss website or the warranty card included with your purchase. Typically, Koss offers a limited lifetime warranty on many of its products, covering defects in materials or workmanship.

Please retain your proof of purchase for any warranty claims.

9. SUPPORT AND CONTACT

For further assistance, technical support, or to explore other Koss products, please visit the official Koss website:

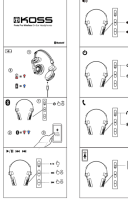 
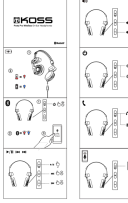 
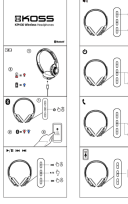 
www.koss.com

You may also find helpful resources and frequently asked questions on their support page.

© 2025 Koss Corporation. All rights reserved.

Koss and the Koss logo are registered trademarks of Koss Corporation.

Related Documents

<div data-bbox="143 100 271 123">USER GUIDE</div> <div data-bbox="143 123 271 145"><div>FRONT</div><div>BACK</div></div> <div data-bbox="143 145 271 347"></div>	<div data-bbox="341 246 1000 275">Koss Porta Pro Wireless On-Ear Headphones User Guide</div> <div data-bbox="341 286 1461 356"><p>User guide for the Koss Porta Pro Wireless On-Ear Headphones, covering front and back controls, charging, Bluetooth pairing, and music/call functions.</p></div>
<div data-bbox="143 553 271 575">USER GUIDE</div> <div data-bbox="143 575 271 598"><div>FRONT</div><div>BACK</div></div> <div data-bbox="143 598 271 799"></div>	<div data-bbox="341 633 1000 663">Koss Porta Pro Wireless On-Ear Headphones User Guide</div> <div data-bbox="341 674 1398 743"><p>User guide for the Koss Porta Pro Wireless On-Ear Headphones, covering features, controls, safety warnings, specifications, and compliance information.</p></div>
<div data-bbox="143 875 271 898">USER GUIDE</div> <div data-bbox="143 898 271 920"><div>FRONT</div><div>BACK</div></div> <div data-bbox="143 920 271 1122"></div>	<div data-bbox="341 956 884 985">Koss KPH30 Wireless Headphones User Guide</div> <div data-bbox="341 996 1401 1066"><p>User guide for the Koss KPH30 Wireless Headphones, covering setup, operation, safety, and specifications.</p></div>
<div data-bbox="143 1198 271 1220">USER GUIDE</div> <div data-bbox="143 1220 271 1243"><div>FRONT</div><div>BACK</div></div> <div data-bbox="143 1243 271 1444"></div>	<div data-bbox="341 1292 1000 1321">Koss Porta Pro Wireless On-Ear Headphones User Guide</div> <div data-bbox="341 1332 1426 1402"><p>User guide for Koss Porta Pro Wireless On-Ear Headphones, detailing setup, Bluetooth pairing, music playback, call management, and controls.</p></div>