

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Keurig](#) /
- › [Keurig 2.0 K200 Brewer User Manual](#)

## Keurig K200

# Keurig 2.0 K200 Brewer User Manual

Model: K200

## INTRODUCTION

Welcome to the Keurig 2.0 K200 Brewer user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new Keurig K200 brewing system. Please read this manual thoroughly before first use to ensure optimal performance and longevity of your brewer.





Image: The Keurig 2.0 K200 Brewer in white, with a white coffee mug placed on the drip tray, ready for brewing. The touch display is visible at the top.

## SETUP

---

### 1. Unpacking and Placement

- Carefully remove all packaging materials from the brewer.
- Place the brewer on a stable, flat surface. Ensure there is adequate space around the brewer for proper ventilation.
- Remove the drip tray and set it aside.

### 2. Initial Rinse

- Remove the water reservoir from the brewer.
- Rinse the water reservoir and its lid with fresh water.
- Do not use soap, as it may leave a residue.

### 3. Water Reservoir Filling and Filter Installation

- Fill the water reservoir with fresh, filtered water up to the "MAX" fill line.
- If using the included water filter handle and charcoal filter, install the charcoal filter into the handle according to the filter instructions.
- Place the assembled filter into the water reservoir.
- Replace the water reservoir onto the brewer, ensuring it is seated correctly.





Image: The Keurig 2.0 K200 Brewer in white, showcasing its compact design and the water reservoir on the right side. The drip tray is in place, and the brewer is ready for use.

#### 4. Cleansing Brew

- Plug the brewer into a grounded outlet. The brewer will automatically power on.
- Place a large mug (at least 10 oz.) on the drip tray.
- Lift and lower the brewer handle to close the K-Cup holder. Do not insert a K-Cup pod.
- On the touch display, select the largest brew size available (e.g., 10 oz.).
- Press the brew button. Hot water will dispense.
- Discard the hot water. Your brewer is now ready for use.

## OPERATING INSTRUCTIONS

---

### 1. Brewing a Single K-Cup Pod

1. Ensure the water reservoir is filled with fresh water.
2. Place a mug on the drip tray.
3. Lift the brewer handle. Insert a K-Cup pod into the K-Cup holder.
4. Lower the handle completely to close the K-Cup holder.
5. On the touch display, select your desired brew size (e.g., 6 oz., 8 oz., 10 oz.). The K200 offers 9 brew sizes, including carafe sizes.
6. Optionally, select your desired brew strength using the strength control feature on the display.
7. Press the brew button. The brewer will begin dispensing your beverage.
8. Once brewing is complete, lift the handle and carefully remove and discard the used K-Cup pod.

### 2. Brewing with a K-Carafe Pod

1. Ensure the water reservoir is filled.
2. Place a Keurig carafe (sold separately) on the drip tray.
3. Lift the brewer handle. Insert a K-Carafe pod into the K-Cup holder.
4. Lower the handle completely.
5. On the touch display, select a K-Carafe brew size (e.g., 2-3 cups, 3-4 cups, 4-5 cups).
6. Press the brew button. The brewer will dispense into the carafe.
7. Once brewing is complete, lift the handle and carefully remove and discard the used K-Carafe pod.

### 3. Strength Control

The Keurig K200 Brewer features strength control, allowing you to customize your beverage. After inserting a pod and selecting a brew size, an option for "Strength" may appear on the black and white touch display. Select this option to choose between regular or strong brew settings, if available for your selected pod.

## MAINTENANCE

---

Regular cleaning and maintenance will ensure your Keurig K200 Brewer continues to perform optimally.

### 1. Cleaning the Exterior

- Wipe the exterior of the brewer with a damp, non-abrasive cloth.
- Do not immerse the brewer in water or other liquids.

### 2. Cleaning the Drip Tray

- The drip tray can accumulate spills and coffee residue. Remove the drip tray and empty any liquid.
- Wash the drip tray and its cover with warm, soapy water. Rinse thoroughly and dry.
- The drip tray is top-rack dishwasher safe.

### 3. Cleaning the K-Cup Pod Holder

- The K-Cup pod holder can be removed for cleaning. Lift the brewer handle and grasp the top of the K-Cup pod holder with one hand while pushing up on the bottom of the K-Cup pod holder from underneath with the other hand until it releases.
- Wash the K-Cup pod holder with warm, soapy water. Rinse thoroughly.
- To replace, align the K-Cup pod holder with the opening and snap it back into place.

### 4. Descaling

Over time, calcium deposits (scale) can build up in your brewer and affect performance. Descaling should be performed every 3 to 6 months, or when the descaling indicator appears on the display. Use a Keurig descaling solution or a vinegar solution as recommended by Keurig. Follow the specific descaling instructions provided by Keurig, typically involving running several cycles of the descaling solution followed by fresh water.

### 5. Water Filter Replacement

For best results, replace your water filter every 2 months or 60 tank refills. Refer to the water filter instructions for proper replacement procedures.

## TROUBLESHOOTING

---

If you encounter issues with your Keurig K200 Brewer, consult the following common troubleshooting tips. For more complex problems, contact Keurig Customer Service.

| Problem                                   | Possible Cause                                 | Solution   |
|---|--|--|
| Brewer not turning on                     | Not plugged in; power outlet issue.            | Ensure brewer is securely plugged into a grounded outlet. Check if the outlet is functional.     |
| No water dispensing / "Add Water" message | Water reservoir empty or not seated correctly. | Fill water reservoir to the MAX fill line. Ensure it is firmly seated in its base.               |
| Brewing stops mid-cycle                   | Low water level; air in lines; scale buildup.  | Refill water reservoir. Perform a cleansing brew without a pod. Descale the brewer if necessary. |

| Problem   | Possible Cause                                     | Solution  |
|---|--|---|
| Coffee tastes weak or watery                              | Incorrect brew size selected; clogged exit needle. | Select a smaller brew size. Clean the exit needle using a paper clip (refer to Keurig's cleaning instructions). |
| "Oops! This pod was not designed for this brewer" message | Using an incompatible K-Cup pod.                   | Ensure you are using genuine Keurig K-Cup or K-Carafe pods.   |

## SPECIFICATIONS

|                          |   |
|--------------------------|---|
| Brand                    | Keurig  |
| Model                    | K200 (Model Number: 117646)   |
| Color                    | White   |
| Dimensions (L x W x H)   | 15 x 9 x 13.7 inches  |
| Item Weight              | 7.5 pounds  |
| Water Reservoir Capacity | 40 oz.  |
| Voltage                  | 120V AC   |
| Coffee Input Type        | K-Cup Packs, K-Carafe   |
| Special Features         | 9 Brew Sizes, Strength Control, Black and White Touch Display, Compact Size, Water Filter |
| Included Components      | Water filter handle, charcoal filter  |

## WARRANTY AND SUPPORT

For detailed warranty information, please refer to the official Keurig website or the warranty card included with your product at the time of purchase. Keurig typically offers a limited one-year warranty on its brewers.

For customer support, technical assistance, or to purchase replacement parts and accessories, please visit the official Keurig website or contact their customer service department directly. Contact information can usually be found on the Keurig website or on the product packaging.

*Note: This product (Keurig 2.0 K200 Brewer) has been discontinued. Support and parts availability may vary.*