

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Keurig](#) /
- › [Keurig 2.0 Brewer K200 Instruction Manual](#)

## Keurig K200

# Keurig 2.0 Brewer K200 Instruction Manual

Model: K200 (117644)

## INTRODUCTION

---

The Keurig K2.0 K200 Brewer is designed to provide a wide variety of beverage options, allowing you to brew from over 500 varieties across more than 60 brands. This brewer supports both K-Cup Packs for single servings and K-Carafe pods for larger batches, offering convenience and quality. It includes a water filter handle and a charcoal filter for optimal water quality.



Front view of the Keurig 2.0 K200 Brewer with a coffee mug.

## SETUP

---

1. **Unboxing:** Carefully remove all packaging materials from the brewer and its components. Ensure all parts are present, including the water reservoir, drip tray, and power cord.
2. **Placement:** Place the brewer on a stable, flat surface. Ensure there is adequate clearance around the brewer for proper ventilation and access to the water reservoir.
3. **Water Reservoir Setup:** The 40 oz. water reservoir is located at the back of the brewer. Remove the reservoir lid and fill it with fresh, filtered water up to the 'MAX' fill line. The brewer includes a water filter handle and a charcoal filter; install these according to the separate filter instructions for best taste.

4. **Power Connection:** Plug the brewer into a grounded electrical outlet. The touch display will illuminate, indicating the brewer is powered on.
5. **Initial Rinse Brew:** Before first use, perform a rinse brew. Lift the handle to open the K-Cup pod holder, then close it without inserting a pod. Place a large mug on the drip tray. Select the largest brew size (e.g., 10 oz.) and press the brew button. Discard the hot water. This cleans the internal components.



The water reservoir is located on the left side of the brewer.

## OPERATING INSTRUCTIONS

---

1. **Power On:** Ensure the brewer is plugged in and the water reservoir is filled. The touch display will show "Lift to Begin".

2. **Insert Pod:** Lift the brewer handle. Insert a K-Cup or K-Carafe pod into the pod holder. Ensure the pod is seated correctly.
3. **Close Handle:** Lower the handle firmly until it clicks into place. The display will show "Just a moment..." as it recognizes the pod.
4. **Select Brew Size:** On the touch display, select your desired brew size. Options typically include 4 oz., 6 oz., 8 oz., and 10 oz. for K-Cup pods, and larger sizes for K-Carafe pods (if applicable). You may also have options for "Strong" brew or "Hot Cocoa/Other" settings depending on the pod.
5. **Start Brewing:** Place your mug or carafe on the drip tray. Press the illuminated "Brew" button on the display to start the brewing process.
6. **Enjoy:** Your beverage will dispense into your mug. Once brewing is complete, carefully remove your mug. Lift the handle to eject the used pod into the discard bin.

Your browser does not support the video tag.

Official Keurig video demonstrating the features and operation of the 2.0 series brewer.

Your browser does not support the video tag.

Demonstration of the Keurig 2.0 Brewer, K200 in Black, highlighting its features and ease of use.

## MAINTENANCE

---

- **Drip Tray Cleaning:** The drip tray can be removed for easy cleaning. Simply slide it out from the base of the brewer, empty any accumulated liquid, and wash with warm, soapy water. Rinse thoroughly and replace.
- **Water Filter Replacement:** The charcoal water filter should be replaced approximately every 2 months or after 60 full-tank refills to ensure optimal water quality and taste. Replacement filters are widely available.
- **Descaling:** Over time, mineral deposits can build up inside the brewer, affecting performance. Descale your brewer every 3-6 months using a Keurig descaling solution or a vinegar solution as per the detailed descaling instructions provided in the full manual.
- **Exterior Cleaning:** Wipe down the exterior of the brewer with a damp, soft cloth. Do not use abrasive cleaners or immerse the brewer in water.



**CARAFE SOLD  
SEPARATELY**

The brewer can accommodate a carafe, which is sold separately.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Brewer not plugged in; circuit breaker tripped.	Ensure power cord is securely plugged into a grounded outlet. Check household circuit breaker.
"Add Water" message	Water reservoir is low or empty.	Refill the water reservoir with fresh water up to the MAX fill line.

Problem	Possible Cause	Solution
Partial Brew / Slow Brew	Mineral buildup (scale); clogged exit needle.	Perform a descaling procedure. Clean the exit needle using a paper clip (refer to full manual for detailed instructions).
Plastic Taste/Smell	New brewer odor; residual manufacturing oils.	Perform several rinse brews with plain water. If persistent, try a vinegar rinse (1 part white vinegar to 2 parts water, followed by several plain water rinses).

## SPECIFICATIONS

---

- **Brand:** Keurig
- **Model Name:** K200
- **Item Model Number:** 117644
- **Color:** Black
- **Product Dimensions:** 9"D x 15"W x 13.7"H
- **Item Weight:** 7.5 pounds
- **Water Reservoir Capacity:** 40 oz.
- **Brew Sizes:** 9 (including carafe sizes)
- **Display:** Black and White Touch Display
- **Special Feature:** Water Filter
- **Filter Type:** Reusable (compatible with reusable K-Cup filters, sold separately)
- **Operation Mode:** Fully Automatic
- **Voltage:** 2.4E+2 Volts
- **UPC:** 649645202907

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the official Keurig website or contact Keurig customer service directly. Keep your proof of purchase for warranty claims. Detailed contact information can typically be found on the product packaging or the manufacturer's official website.