

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Munchkin](#) /

› [Munchkin Any Angle Weighted Straw Sippy Cup: Instruction Manual](#)

Munchkin Any Angle Weighted Straw Sippy Cup

Munchkin Any Angle Weighted Straw Sippy Cup: Instruction Manual

Model: Any Angle Weighted Straw Sippy Cup

PRODUCT OVERVIEW

The Munchkin Any Angle Weighted Straw Sippy Cup is designed to assist toddlers in transitioning from bottles to straw cups. Its unique weighted straw allows children to sip from any angle, ensuring they can drink all the liquid. The cup features spill-proof technology and easy-grip handles, making it suitable for babies 6 months and up.



Image: Front view of the Munchkin Any Angle Weighted Straw Sippy Cup in blue.

KEY FEATURES

- **Any Angle Drinking:** The weighted straw base allows toddlers to sip from any angle, making it easy to drink even when tilted.
- **Sippy-to-Straw Transition:** Specifically designed to help children transition from sippy cups to straw cups.
- **Spill-Proof Seal:** Features patented Click Lock Technology; twist the lid until you hear a click to ensure a secure, spill-proof seal.
- **Easy-Grip Handles:** Perfectly sized handles for little ones to hold, suitable for children 6 months and up.
- **Gentle on Gums:** Equipped with a soft, flexible straw that is gentle on delicate gums.
- **Travel-Friendly:** Designed for portability with an integrated flip-top lid that keeps drinks secure.
- **BPA-Free & Easy to Clean:** Made from BPA-free materials and includes a straw cleaner for convenient maintenance.
- **Liquid Level Monitoring:** Transparent base design allows parents to easily monitor the liquid level.



Image: Exploded view highlighting key features like the weighted straw, easy-grip handles, and spill-proof lid.

SETUP & ASSEMBLY

Initial Assembly

1. Ensure all components (cup base, lid with straw, weighted straw attachment, and straw cleaner) are clean and dry before first use.
2. Attach the weighted straw to the bottom of the straw integrated into the lid. Ensure it is securely fastened.
3. If present, remove any plastic film or protective covers from the weighted straw component.

Filling the Cup

1. Fill the cup base with your desired liquid (water, juice, milk). Do not overfill.
2. Align the lid with the cup base and twist clockwise until you hear a distinct "click." This indicates the Click Lock seal is secure and helps prevent leaks.



Image: A front view of the fully assembled sippy cup, ready for use.

OPERATING INSTRUCTIONS

Drinking from the Cup

The unique weighted straw design ensures that the straw always remains submerged in the liquid, regardless of the cup's angle. This allows your child to drink comfortably whether sitting upright, reclining, or even lying down. The easy-grip handles are designed for small hands, promoting independent drinking.



Image: A toddler demonstrating the "any angle" drinking feature while lying down.

Video: Product Demonstration

Your browser does not support the video tag.

Video: A demonstration of the weighted straw's functionality, showing how it moves with the liquid to allow drinking from any angle. Also highlights the secure click-lock lid.

MAINTENANCE & CLEANING

Disassembly for Cleaning

For thorough cleaning, the cup can be easily disassembled. Unscrew the lid from the cup base. The weighted straw can be detached from the lid's straw by gently pulling. The straw itself can be separated from the lid by pushing it through the top opening.

Your browser does not support the video tag.

Video: Step-by-step guide on how to disassemble the sippy cup for cleaning, including detaching the weighted straw and removing the straw from the lid.

Cleaning Instructions

All parts of the Munchkin Any Angle Weighted Straw Sippy Cup are top-rack dishwasher safe. For manual cleaning, use warm, soapy water. The included straw cleaner is essential for thoroughly cleaning the inside of the straw and the valve to prevent mold buildup. Ensure all parts are completely dry before reassembly to maintain hygiene.

Your browser does not support the video tag.

Video: Demonstrates the ease of cleaning the sippy cup components, including using the provided straw cleaner for thorough hygiene.

TROUBLESHOOTING

Addressing Leaks

If your sippy cup is leaking, please check the following:

- **Lid Seal:** Ensure the lid is twisted securely onto the cup base until you hear the "click" sound, indicating the Click Lock Technology is engaged.
- **Straw Valve:** Verify that the small valve at the top of the straw is fully pushed into place. If it's not properly seated, it can cause leaks.
- **Component Integrity:** Inspect all parts for any cracks, tears, or damage. Replace any damaged components immediately.

Your browser does not support the video tag.

Video: Demonstrates proper assembly and highlights key areas to check for potential leaks, such as the straw valve and lid seal.

PRODUCT SPECIFICATIONS

Brand	Munchkin
Material	Plastic
Capacity	7 ounces (207 ml)
Special Feature	Weighted straw allows kids to hold cup at any angle
Age Recommendation	6 months and up



Image: Visual representation of the sippy cup's dimensions.

IMPORTANT SAFETY INFORMATION

- Always supervise children while they are using the sippy cup.
- Do not use with carbonated beverages, as pressure buildup may cause leaks.
- Do not microwave or boil the cup, as this may damage the materials.
- Ensure all parts are correctly assembled before each use.
- This product is BPA-free.

WARRANTY & SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official Munchkin

website or contact their customer service department. Refer to the product packaging for specific contact details.

© 2026 Munchkin. All rights reserved.