



Manuals.plus /

› Breville /

› Breville Handy Mixer BHM800SIL Instruction Manual

## Breville BHM800SIL

# Breville Handy Mixer BHM800SIL Instruction Manual

Model: BHM800SIL

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Breville Handy Mixer BHM800SIL. Please read all instructions thoroughly before first use and retain for future reference.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the appliance.
- Do not immerse the mixer body, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils away from the mixing bowl during operation to reduce the risk of injury to persons or damage to the mixer.
- Always operate the mixer on a dry, stable surface.

## COMPONENTS

The Breville Handy Mixer BHM800SIL includes the following components:

- Mixer Body with ergonomic handle

- 2 Scraper Beaters
- 2 Dough Hooks
- 2 Balloon Whisks
- Detachable compact storage compartment
- Swivel cord



Image: Breville Handy Mixer BHM800SIL with Scraper Beaters attached, showcasing its silver finish and black handle.



## Detachable compact storage compartment houses all the attachments & swivel cord

Image: The Breville Handy Mixer BHM800SIL with its detachable clear storage compartment, holding all accessories and the coiled power cord.

### SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the mixer.
2. **Cleaning:** Before first use, wash the attachments (Scraper Beaters, Dough Hooks, Balloon Whisks) in warm, soapy water. Rinse thoroughly and dry. Wipe the mixer body with a damp cloth.
3. **Attaching Accessories:**
  - Select the appropriate attachments for your task.
  - Insert the attachments into the openings on the underside of the mixer until they click securely into place. Ensure both attachments are fully inserted.
4. **Power Connection:** Ensure the mixer is in the "OFF" position before plugging the power cord into a 120V electrical outlet.

### OPERATING INSTRUCTIONS

## 1. Power On/Off and Speed Control

- To turn the mixer ON, slide the ON/OFF switch forward. The digital display will illuminate.
- To adjust speed, use the speed control buttons. The mixer features 9 speed settings.
- The "Boost" function provides a momentary increase to the highest speed setting.
- To turn the mixer OFF, slide the ON/OFF switch backward.



9-speed settings plus boost to ensure the precise speed to match your mixing load

Image: Close-up of the Breville Handy Mixer BHM800SIL's digital display, showing speed setting '9' and a timer '3:25', along with 'PAUSE' and 'ON/OFF' buttons.

## 2. Beater IQ Technology

The Beater IQ Technology automatically detects the type of attachment inserted (Scraper Beaters, Dough Hooks, or Balloon Whisks) and recalibrates the motor to optimize speed and power for the specific mixing task. This ensures consistent performance across various ingredients and recipes.



**Beater IQ™ technology automatically recalibrates the accessory being used to the perfect speed**

Image: Scraper Beaters of the Breville Handy Mixer BHM800SIL actively mixing a thick brown batter in a bowl, demonstrating the Beater IQ technology.

### **3. Quiet Scraper Beaters**

The Scraper Beaters are designed with rubberized edges to maximize contact with the bowl's surface, ensuring thorough mixing and minimizing noise during operation. This design helps to incorporate all ingredients effectively.

### **4. Mixing Light**

The integrated mixing light illuminates the contents of your mixing bowl, providing better visibility of ingredients during the mixing process.

### **5. Ergonomic Design**

The mixer features an ergonomic handle designed for comfortable grip and natural hand positioning, reducing fatigue during extended use.



## 250W mixer replicates the planetary action of a commercial mixer

Image: A hand holding the Breville Handy Mixer BHM800SIL over a glass bowl containing a light brown dough, illustrating its ergonomic design and use.

### MAINTENANCE AND CLEANING

- **Before Cleaning:** Always unplug the mixer from the power outlet before cleaning.
- **Mixer Body:** Wipe the exterior of the mixer body with a soft, damp cloth. Do not immerse the mixer body in water or any other liquid.
- **Attachments:** The Scraper Beaters, Dough Hooks, and Balloon Whisks are dishwasher safe (top rack recommended) or can be washed by hand in warm, soapy water. Rinse thoroughly and dry completely before storing.
- **Storage:** The detachable compact storage compartment is designed to house all attachments and the swivel cord. Ensure all parts are clean and dry before storing them in the compartment. Attach the compartment to the mixer for compact storage.

### TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power switch is off; power outage.	Ensure the mixer is securely plugged into a working 120V outlet. Check the ON/OFF switch. Verify power to the outlet.
Attachments are difficult to insert or remove.	Attachments not aligned correctly; debris in openings.	Ensure attachments are aligned with the correct openings. Clean any debris from the attachment openings.
Mixer slows down or struggles during mixing.	Too much load; incorrect speed setting for ingredients.	Reduce the amount of ingredients. Increase the speed setting or use the Boost function for thick mixtures.
Attachments make excessive noise or wobble.	Attachments not fully inserted; damaged attachments.	Ensure attachments are fully clicked into place. Inspect attachments for damage and replace if necessary.

## SPECIFICATIONS

- **Model:** BHM800SIL
- **Power:** 150 Watts
- **Voltage:** 120V
- **Dimensions:** 3.5"D x 8.5"W x 10.25"H
- **Item Weight:** 3.9 pounds
- **Construction Materials:** Plastic external housing with chrome accents
- **Special Features:** Beater IQ Technology, 9 Speed Settings, Mixing Light, Compact Storage



## Product Dimensions 13.7" High x 11.5" Wide x 11" Deep

Image: Diagram illustrating the dimensions of the Breville Handy Mixer BHM800SIL, showing a height of 10.25 inches, width of 8.5 inches, and depth of 3.5 inches.

### WARRANTY AND SUPPORT

This Breville Handy Mixer BHM800SIL comes with a **1 Year Limited Product Warranty** from the date of purchase. For warranty claims, technical support, or service inquiries, please contact Breville customer service.

Please visit the official Breville website for the most up-to-date contact information and detailed warranty terms:  
[www.breville.com](http://www.breville.com)

