

[manuals.plus](#) /› [mabe](#) /› [Mabe MCL1740PSBB0 17 kg Washing Center User Manual](#)**mabe MCL1740PSBB0**

Mabe MCL1740PSBB0 17 kg Washing Center User Manual

Model: MCL1740PSBB0

INTRODUCTION

Thank you for choosing the Mabe MCL1740PSBB0 17 kg Washing Center. This appliance combines a washer and a dryer into a single unit, designed for efficient laundry care. This manual provides essential information for the safe and effective installation, operation, and maintenance of your washing center. Please read these instructions carefully before using the appliance and keep them for future reference.



Image: Front view of the Mabe MCL1740PSBB0 17 kg Washing Center, showcasing its compact, stacked design with the dryer on top and washer below, both in white finish.

SETUP AND INSTALLATION

Proper installation is crucial for the safe and optimal performance of your washing center. Ensure all connections are secure and the unit is level before operation.

Unpacking

- Carefully remove all packaging materials, including any shipping bolts or restraints.

- Inspect the appliance for any damage incurred during transit. Contact your retailer immediately if damage is found.

Location Requirements

- Place the washing center on a firm, level floor capable of supporting its weight (approximately 112 kg).
- Ensure adequate clearance around the unit for ventilation and maintenance.
- The appliance requires access to a cold water supply, a drain, an electrical outlet, and an LP gas connection for the dryer.

Connections

- **Water Supply:** Connect the cold water inlet hose to a cold water tap. Ensure the connection is tight to prevent leaks.
- **Drainage:** Securely attach the drain hose to a standpipe or laundry tub, ensuring it is properly routed to prevent kinks.
- **Electrical:** Plug the power cord into a grounded electrical outlet. Do not use extension cords.
- **Gas Supply (Dryer):** The dryer operates on LP Gas. Installation of the gas line must be performed by a qualified technician in accordance with local codes and regulations.

Leveling

- Use a level to ensure the washing center is perfectly balanced.
- Adjust the leveling feet at the bottom of the unit by turning them clockwise or counter-clockwise until the appliance is stable and level.

OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Mabe Washing Center.

Ficha técnica de producto



Especificaciones

Producto: Centro de lavado mabe

Nomenclatura: MCL1740PSBB

UPC: 757638512824

Capacidad: 17 kg

Color: B: Blanco

Principales beneficios

- Optimización del tiempo, ya que puedes lavar y secar al mismo tiempo.
- Tamaño perfecto para colocarse en cualquier espacio.
- Sistema de lavado por infusor que brinda una limpieza eficiente y un mayor cuidado de las prendas.

Características

En lavadora:

- Sistema de lavado por infusor
- 7 Programas automáticos (*manchas difíciles, ropa blanca, ropa de color, jeans, prendas voluminosas, ciclo rápido, ropa delicada, ciclo de exprimido extra*)
- 4 Niveles de agua + automático
- 4 niveles de temperatura + automático
- Canasta de acero inoxidable
- Seguro en tapa
- Sistema de suspensión autobalance

En secadora:

- Sistema de secado: Gas LP
- 4 ciclos de secado + timer
- Sensor de temperatura
- Filtro atrapa pelusa



Medidas y pesos
sin empaque



Medidas y pesos
con empaque

Alto: 192.28 cm
Ancho: 68 cm
Profundo: 78.36 cm
Peso: 112 kg

Alto: 199.13 cm
Ancho: 73.4 cm
Profundo: 82.55 cm
Peso: 126 kg

Image: Detailed view of the Mabe MCL1740PSBB0 Washing Center's control panel, showing the rotary knobs for wash and dry cycles, temperature, and water levels, along with indicator lights.

Washer Operation

1. **Load Laundry:** Open the washer lid and load clothes loosely into the stainless steel drum. Do not overload.
2. **Add Detergent:** Dispense appropriate detergent into the designated dispenser.
3. **Select Wash Program:** Use the control knob to select one of the 7 automatic wash programs:
 - Tough Stains
 - Whites
 - Colors
 - Jeans

- Bulky Items
- Quick Cycle
- Delicates
- Extra Spin Cycle (separate option)

4. **Select Water Level and Temperature:** Adjust the water level (4 options) and temperature (4 options) using the respective knobs, or select an automatic setting.
5. **Start Cycle:** Close the lid and press the Start button to begin the wash cycle. The infusor wash system will provide efficient cleaning.

Dryer Operation

1. **Load Laundry:** Transfer washed clothes from the washer to the dryer drum.
2. **Clean Lint Filter:** Always clean the lint filter before each drying cycle to ensure optimal performance and safety.
3. **Select Drying Cycle:** Use the control knob to select one of the 4 drying cycles. You can also set a timer for specific drying durations.
4. **Start Cycle:** Close the dryer door and press the Start button. The temperature sensor will help prevent over-drying.

MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your Mabe Washing Center.

Cleaning the Lint Filter

- The lint filter is located inside the dryer. Pull it out to remove.
- Remove all accumulated lint by hand or with a soft brush.
- Rinse the filter under running water if necessary, and ensure it is completely dry before reinserting.
- **Important:** Clean the lint filter before every drying cycle to prevent fire hazards and maintain drying efficiency.

Cleaning the Washer Drum

- Periodically run a cleaning cycle with a washing machine cleaner or a mixture of white vinegar and baking soda to remove detergent residue and odors.
- Wipe down the stainless steel drum with a soft, damp cloth after each use to prevent water spots and buildup.

Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth and mild soap.
- Avoid abrasive cleaners or solvents that could damage the finish.

TROUBLESHOOTING

Before calling for service, please refer to the following common issues and solutions.

Problem	Possible Cause	Solution
Washer does not start	Power cord unplugged; Lid not closed; Circuit breaker tripped.	Ensure power cord is securely plugged in; Close the lid completely; Reset the circuit breaker.

Problem	Possible Cause	Solution
Washer not filling with water	Water supply turned off; Water inlet hose kinked.	Turn on the water supply; Straighten the water inlet hose.
Dryer not heating	Gas supply off; Lint filter clogged; Circuit breaker tripped.	Ensure gas supply is on; Clean the lint filter; Reset the circuit breaker.
Excessive vibration/noise	Appliance not level; Overloaded or unbalanced load.	Adjust leveling feet; Redistribute laundry evenly; Reduce load size.
Clothes not drying completely	Lint filter clogged; Overloaded dryer; Incorrect cycle selected.	Clean lint filter; Reduce load size; Select appropriate drying cycle.

SPECIFICATIONS

Technical details for the Mabe MCL1740PSBB0 17 kg Washing Center.

Feature	Detail
Model	MCL1740PSBB0
Brand	Mabe
Capacity (Washer)	17 kg
Color	White
Dimensions (H x W x D)	192.28 cm x 68 cm x 78.36 cm (75.7 in x 26.8 in x 30.8 in)
Product Weight	112 kg (247 lbs)
Washer Drum Material	Stainless Steel
Washer Control Type	Knob (Perilla)
Number of Wash Cycles	8 (including extra spin)
Dryer System	LP Gas
Number of Drying Cycles	5 (including timer option)
Special Features	Time optimization (wash and dry simultaneously), Infusor wash system, Temperature sensor (dryer)
UPC	757638512824

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. Mabe offers customer support for product inquiries and service requests.

Customer Service

If you encounter issues not covered in the troubleshooting section or require professional assistance, please contact Mabe customer service. Have your model number (MCL1740PSBB0) and serial number ready when you call.

Contact details for Mabe customer service can typically be found on the manufacturer's official website or on the product's warranty card.