

[Manuals.plus](#) /

› [Toastermaster](#) /

› Toastermaster TM-122CM 12-Cup Pause/Serve Coffeemaker User Manual

Toastermaster TM-122CM

Toastermaster TM-122CM 12-Cup Pause/Serve Coffeemaker User Manual

Model: TM-122CM

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or coffeemaker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.
- For household use only.

PRODUCT OVERVIEW

The Toastermaster TM-122CM is a 12-cup capacity coffeemaker designed for ease of use and convenience. It features a pause and serve function, a swing-out brew basket, an illuminated power light, and built-in cord storage for a tidy countertop.



Figure 1: Front view of the Toastmaster TM-122CM 12-Cup Coffeemaker. This image shows the main body of the coffeemaker, including the water reservoir, brew basket area, and the glass carafe with its handle and lid. The Toastmaster logo is visible on the top front.

SETUP

Before First Use

1. Carefully unpack the coffeemaker and remove all packaging materials.
2. Wash the glass carafe, its lid, and the removable filter basket in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffeemaker with a soft, damp cloth.
4. Before brewing coffee for the first time, it is recommended to run a full cycle with only water to clean the internal components. Fill the water reservoir to the 12-cup mark with cold water and press the power button. Discard the water after the cycle is complete.

Placement

Place the coffeemaker on a flat, stable, heat-resistant surface near an electrical outlet. Ensure there is enough clearance above the unit to open the lid for filling water and adding coffee grounds.



Figure 2: Rear view of the Toastmaster TM-122CM Coffeemaker showing the built-in cord storage compartment. This feature allows excess power cord to be neatly tucked away, promoting a cleaner countertop and easier storage.

OPERATING INSTRUCTIONS

1. **Fill Water Reservoir:** Open the top lid of the coffeemaker and fill the water reservoir with cold, fresh water to the desired number of cups indicated on the water level indicator. Do not exceed the 12-cup maximum fill line.
2. **Insert Filter and Coffee Grounds:** Place a standard basket-style paper filter into the removable filter basket. Add the desired amount of ground coffee into the filter. A general guideline is one level tablespoon of coffee grounds per cup.
3. **Position Filter Basket:** Ensure the filter basket is securely seated in its position within the coffeemaker.
4. **Close Lid and Place Carafe:** Close the top lid firmly. Place the empty glass carafe with its lid on the warming plate, ensuring it is properly aligned to activate the pause and serve mechanism.
5. **Start Brewing:** Plug the coffeemaker into a standard electrical outlet. Press the power button. The illuminated power light will turn on, indicating that the brewing cycle has begun.
6. **Pause and Serve Feature:** The coffeemaker is equipped with a pause and serve feature, allowing you to temporarily remove the carafe during the brewing cycle to pour a cup of coffee. The flow of coffee will stop automatically. Replace the carafe within 20 seconds to prevent overflow.
7. **After Brewing:** Once the brewing cycle is complete, the coffeemaker will automatically switch to a "keep warm" mode. The illuminated power light will remain on.
8. **Serving:** Carefully remove the carafe from the warming plate to serve coffee.
9. **Turn Off:** To turn off the coffeemaker, press the power button again. Unplug the coffeemaker from the outlet when not in use.



Figure 3: Top view of the Toastmaster TM-122CM Coffeemaker with the swing-out brew basket extended. This image highlights the ease of access for placing coffee filters and grounds, simplifying the brewing process.

MAINTENANCE

Daily Cleaning

- Always unplug the coffeemaker before cleaning and allow it to cool completely.
- Wash the glass carafe, its lid, and the removable filter basket in warm, soapy water after each use. These parts are top-rack dishwasher safe.
- Wipe the exterior of the coffeemaker, including the warming plate, with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the main unit of the coffeemaker in water or any other liquid.

Decalcification (Mineral Deposit Removal)

Mineral deposits (calcium) can build up in your coffeemaker over time, affecting its performance and the taste of your coffee. Decalcify your coffeemaker regularly, depending on the hardness of your water and frequency of use (e.g., every 2-3 months).

1. Fill the water reservoir with a mixture of white vinegar and cold water. A common ratio is 1 part white vinegar to 2 parts water. For a 12-cup coffeemaker, use approximately 4 cups of vinegar and 8 cups of water.
2. Place a paper filter in the filter basket (no coffee grounds).
3. Place the empty carafe on the warming plate.
4. Turn on the coffeemaker and allow half of the mixture to brew through.
5. Turn off the coffeemaker and let it soak for at least 15 minutes to allow the vinegar to work on the deposits.
6. Turn the coffeemaker back on and brew the remaining mixture.
7. Discard the vinegar solution from the carafe and filter.
8. Run 2-3 full cycles with fresh, cold water only to rinse out any remaining vinegar taste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffeemaker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the coffeemaker is securely plugged into a working electrical outlet. Check your circuit breaker.

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir; carafe not properly placed; power button not pressed.	Fill water reservoir. Ensure carafe is correctly seated on the warming plate. Press the power button.
Coffee overflows from filter basket.	Too much coffee grounds; filter not properly seated; carafe removed too long during pause and serve.	Use correct amount of coffee. Ensure filter is flat and centered. Replace carafe quickly (within 20 seconds) when using pause and serve.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; coffee grind too coarse/fine; coffeemaker needs decalcifying.	Adjust coffee amount. Use medium grind coffee. Decalcify the coffeemaker as per maintenance instructions.
Brewing is slow.	Mineral buildup.	Decalcify the coffeemaker as per maintenance instructions.

SPECIFICATIONS

- Model:** TM-122CM
- Capacity:** 12 Cups
- Power:** 900 Watts
- Dimensions (assembled):** 10.43 x 7.17 x 12.13 inches (26.5 x 18.2 x 30.8 cm)
- Weight:** Approximately 1.59 kg (3.5 lbs)
- Color:** Black
- Special Features:** Pause and Serve, Swing-out Brew Basket, Illuminated Power Light, Built-in Cord Storage

WARRANTY AND SUPPORT

The Toastmaster TM-122CM 12-Cup Pause/Serve Coffeemaker carries a **one-year limited manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. This warranty does not cover damage resulting from misuse, abuse, accident, alteration, or commercial use. It also does not cover normal wear and tear, such as scratches, dents, or discoloration. For warranty service or technical support, please contact Toastmaster customer service. Keep your original purchase receipt as proof of purchase for warranty claims. *Please refer to the official Toastmaster website or your product packaging for the most current contact information and detailed warranty terms.*

