

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JVC](#) /

› [JVC HR-XVC15 DVD VHS Combo Player User Manual](#)

JVC HR-XVC15

JVC HR-XVC15 DVD VHS Combo Player User Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your JVC HR-XVC15 DVD/VCR Combo Player. Please read this manual thoroughly before using the unit to ensure proper functionality and to maximize your enjoyment of its features.

KEY FEATURES

- **Progressive Scan:** Enhances picture quality for compatible televisions.
- **Multi-Format Playback:** Supports DVD-Video, DVD-R/W, DVD+R/W, CD, and MP3 formats.
- **4-Head VHS Recorder:** Provides high-quality VHS playback and recording.
- **One-Touch Recording:** Simplifies the process of recording from VHS to DVD.
- **Dolby Digital Encoders:** Delivers immersive surround sound for compatible media.
- **DivX Support:** Allows playback of DivX encoded video files.
- **Versatile Connectivity:** Includes Component video output, S-Video, and RCA connections for audio and video.

SETUP

1. Unpacking and Placement

Carefully remove the unit from its packaging. Place the JVC HR-XVC15 on a stable, level surface with adequate ventilation. Avoid placing it near heat sources or in direct sunlight.

2. Connecting to a Television

The JVC HR-XVC15 offers several options for connecting to your television. Choose the connection type that provides the best quality supported by your TV.



This image displays the rear panel of the JVC HR-XVC15, highlighting the VCR IN (Line 1), DVD/VCR OUT, Component/Progressive Scan Video OUT, and Audio OUT connections, along with Coaxial and DVD Exclusive Out ports.

- **Component Video (Progressive Scan):** For the highest quality video, connect the red (Pr), blue (Pb), and green (Y) component video cables from the unit's "COMPONENT/PROGRESSIVE SCAN VIDEO OUT" to the corresponding inputs on your TV. Connect separate audio cables (red for R, white for L) from the "AUDIO OUT" section to your TV's audio inputs.
- **RCA Video/Audio:** Connect a yellow RCA video cable from the unit's "DVD/VCR OUT" (Video) to your TV's video input. Connect red (R) and white (L) RCA audio cables from the unit's "DVD/VCR OUT" (Audio) to your TV's audio inputs.
- **Coaxial Digital Audio:** For digital audio output, connect a coaxial digital audio cable from the unit's "COAXIAL" output to a compatible input on your audio receiver or TV.
- **VCR Line In:** To connect an external device for recording to VHS, use the "VCR IN LINE 1" (Audio L/R and Video) ports.

3. Power Connection

After all audio/video connections are made, plug the power cord into a standard AC outlet.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the **STANDBY-ON** button on the front panel to turn the unit on or off.

2. Selecting Source (DVD/VCR)

Press the **VCR SOURCE DVD** button on the front panel to switch between DVD and VCR modes. The indicator light will show the currently selected source.

3. DVD Playback

1. Ensure the unit is in DVD mode.
2. Press the **OPEN/CLOSE** button to open the disc tray.
3. Place a DVD or CD onto the disc tray with the label side facing up.
4. Press **OPEN/CLOSE** again to close the tray.
5. Playback should begin automatically. If not, press the **PLAY** button.

4. VHS Playback

1. Ensure the unit is in VCR mode.
2. Insert a VHS tape into the VCR slot. The unit will automatically load the tape.
3. Playback should begin automatically. If not, press the **PLAY** button.
4. Use the **REW** (Rewind), **F.FWD** (Fast Forward), and **STOP/EJECT** buttons for tape control.

5. Recording VHS to DVD (One-Touch Recording)

This feature allows for easy transfer of VHS content to a recordable DVD.

1. Insert a recordable DVD (DVD-R/W or DVD+R/W) into the DVD tray.
2. Insert the VHS tape you wish to record into the VCR slot.
3. Ensure the unit is in VCR mode.
4. Press the **RECORD** button. The unit will begin playing the VHS tape and simultaneously recording it to the DVD.
5. To stop recording, press the **STOP** button.

MAINTENANCE

1. Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. For internal cleaning, especially of the VCR heads or DVD lens, it is recommended to use specialized cleaning kits or consult a professional.

2. Media Handling

Handle DVDs and VHS tapes by their edges to avoid fingerprints and scratches. Store media in their cases away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------|--|--|
| No power | Power cord not connected; unit not plugged in. | Ensure power cord is securely connected and plugged into a working outlet. |
| No picture/sound | Incorrect input selected on TV; loose A/V cables; incorrect source selected on unit. | Select correct input on TV. Check all A/V cable connections. Press VCR SOURCE DVD to select correct source. |

| Problem | Possible Cause | Solution |
|----------------------|--|---|
| Disc won't play | Disc is dirty or scratched; disc is inserted incorrectly; unsupported disc format. | Clean the disc. Insert disc with label side up. Ensure disc format is supported (DVD-Video, CD, MP3). |
| VHS tape won't eject | Tape jammed; power interruption. | Press STOP/EJECT multiple times. If issue persists, power cycle the unit. Do not force the tape out. |

SPECIFICATIONS

- **Brand:** JVC
- **Model Name:** HR-XVC15
- **Media Type:** CD, DVD, VHS
- **Special Feature:** Multi-Format Playback, Progressive Scan
- **Resolution:** 1280x720 (Output)
- **Connector Type:** RCA, Coaxial, Component
- **Connectivity Technology:** RCA
- **Audio Output Mode:** Surround
- **Color:** Silver
- **Item Weight:** Approximately 5 pounds
- **Package Dimensions:** Approximately 17.8 x 10.9 x 4 inches

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official JVC website. Specific warranty terms may vary by region and retailer.