

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bostitch](#) /

› [BOSTITCH FC9725 Driver-FC95 New Instruction Manual](#)

### Bostitch FC9725

# BOSTITCH FC9725 Driver-FC95 New Instruction Manual

Official Product Guide

## 1. INTRODUCTION

---

This manual provides essential information for the proper handling, installation, and maintenance of the BOSTITCH FC9725 Driver-FC95 replacement part. This component is an O.E.M. (Original Equipment Manufacturer) authorized part, designed to fit various BOSTITCH models, ensuring compatibility and optimal performance.

The BOSTITCH FC9725 is a critical replacement part for your power tool, manufactured in the USA to meet high-quality standards. It is essential to follow these instructions carefully to ensure safe and effective use, and to maintain the longevity of your equipment.



This image displays the BOSTITCH FC9725 Driver-FC95 replacement part. It is a dark, rectangular component, likely made of rubber or a similar durable material, featuring an oval-shaped opening near the top. The word 'FRONT' is subtly embossed on its surface, indicating orientation for installation.

## 2. SAFETY INFORMATION

---

Always observe the following safety precautions when handling or installing the FC9725 replacement part:

- **Disconnect Power:** Before attempting any installation or maintenance, ensure the power tool is disconnected from its power source (unplugged or battery removed).
- **Wear Protective Gear:** Use appropriate personal protective equipment (PPE), such as safety glasses and gloves, to prevent injury.
- **Refer to Tool Manual:** Always consult the original power tool's instruction manual for specific disassembly and reassembly procedures.
- **Use Correct Tools:** Employ only the recommended tools for installation to avoid damaging the part or the tool.
- **Keep Children Away:** Ensure children and unauthorized persons are kept away from the work area.

### 3. INSTALLATION (SETUP)

---

The FC9725 is an OEM replacement driver part. Installation typically involves replacing a worn or damaged existing driver. Follow these general steps, but always refer to your specific BOSTITCH tool's service manual for detailed instructions:

1. **Preparation:** Ensure the power tool is completely de-energized and secured. Clear your workspace.
2. **Access the Driver Assembly:** Carefully disassemble the relevant section of your BOSTITCH tool to gain access to the driver assembly. This may involve removing covers, screws, or other fasteners.
3. **Remove Old Driver:** Identify the worn or broken driver. Carefully remove it, noting its orientation and how it connects to other components.
4. **Install New FC9725 Driver:** Position the new FC9725 driver in the exact orientation as the old one. Ensure it seats correctly and aligns with all connecting parts. The "FRONT" marking on the part may assist with correct orientation.
5. **Reassemble Tool:** Carefully reassemble the power tool, ensuring all screws and fasteners are tightened securely. Do not overtighten.
6. **Test Functionality:** After reassembly, perform a functional test of the tool in a safe environment, without material, to ensure the new driver operates correctly and smoothly.

If you are unsure about any step, it is recommended to seek assistance from a qualified technician or refer to official BOSTITCH service documentation.

### 4. OPERATION

---

The BOSTITCH FC9725 is a replacement component and does not have standalone operational controls. Its function is integral to the overall operation of the BOSTITCH power tool it is installed in. Once correctly installed, the tool should operate as intended by the manufacturer.

Refer to your specific BOSTITCH power tool's user manual for instructions on its safe and proper operation. The FC9725 part contributes to the tool's driving mechanism, ensuring consistent and reliable performance when fastening materials.

### 5. MAINTENANCE

---

Proper maintenance of your power tool, including its internal components like the FC9725 driver, will extend its lifespan and ensure continued performance.

- **Regular Inspection:** Periodically inspect the FC9725 driver for signs of wear, cracks, or damage. Replace if any significant wear is observed.
- **Cleaning:** Keep the internal mechanisms of your tool clean from debris, dust, and foreign particles that could impede the driver's movement. Use compressed air or a soft brush.
- **Lubrication:** If your tool's manual recommends lubrication for the driver assembly, use only the specified lubricants and apply them sparingly.
- **Storage:** Store the power tool in a clean, dry environment when not in use to prevent corrosion and material degradation.

### 6. TROUBLESHOOTING

---

If you experience issues after replacing the driver, consider the following common troubleshooting steps:

- **Tool Not Firing/Cycling:**
  - **Incorrect Installation:** Re-check that the FC9725 driver is installed correctly and fully seated. Ensure all components are properly aligned.
  - **Obstruction:** Inspect for any debris or foreign objects obstructing the driver's path.

- **Other Tool Issues:** The problem might not be with the new driver. Check other common issues for your specific tool, such as air pressure (for pneumatic tools), battery charge, or magazine issues.
- **Excessive Wear on New Part:**
  - **Improper Use:** Ensure the tool is being used within its specified operating parameters and for its intended purpose.
  - **Underlying Tool Issue:** Excessive wear on a new part could indicate a deeper issue with the tool's mechanics or alignment. Consult a professional.
- **Part Does Not Fit:**
  - **Incorrect Model:** Double-check that the FC9725 is the correct replacement part for your specific BOSTITCH tool model.
  - **Manufacturing Defect:** If the part is confirmed correct and still does not fit, it may have a manufacturing defect. Contact the supplier or BOSTITCH support.

For persistent issues, it is advisable to contact BOSTITCH customer support or a certified service center.

## 7. SPECIFICATIONS

---

Key specifications for the BOSTITCH FC9725 Driver-FC95 replacement part:

<b>Part Number</b>	FC9725
<b>Item Model Number</b>	FC9725
<b>Manufacturer</b>	Stanley Tools
<b>Item Weight</b>	0.16 ounces
<b>Product Dimensions</b>	1 x 1 x 1 inches
<b>Item Package Quantity</b>	1
<b>Batteries Included?</b>	No
<b>Batteries Required?</b>	No
<b>ASIN</b>	B00XEKPM2
<b>Date First Available</b>	May 8, 2015

## 8. WARRANTY AND SUPPORT

---

As an O.E.M. authorized part, the BOSTITCH FC9725 Driver-FC95 is manufactured to high standards. For specific warranty information regarding this replacement part, please refer to the warranty policy provided with your original BOSTITCH power tool or contact BOSTITCH directly.

For technical support, service, or to inquire about other genuine BOSTITCH replacement parts, please visit the official Bostitch website or contact their customer service department. Using genuine OEM parts ensures compatibility and maintains the integrity of your BOSTITCH tools.

**Bostitch Official Website:** [Visit the Bostitch Store on Amazon](#)

