

**Manuals+**

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER 62140000 Chuck Key Instruction Manual](#)

**BLACK+DECKER 62140000**

# BLACK+DECKER 62140000 Chuck Key Instruction Manual

Model: 62140000

## INTRODUCTION

---

This manual provides essential instructions for the proper use and maintenance of your BLACK+DECKER 62140000 Chuck Key. This is an Original Equipment Manufacturer (OEM) authorized replacement part designed to fit various BLACK+DECKER drill models. Please read these instructions carefully before use to ensure safe and effective operation.



Image of the BLACK+DECKER 62140000 Chuck Key, showing its metal construction and gear teeth. This key is used to tighten and loosen drill chucks.

## SETUP

---

The BLACK+DECKER 62140000 Chuck Key is designed for use with compatible drill chucks. Ensure your drill is unplugged or its battery removed before attempting to attach or detach any accessories.

1. **Identify Chuck Key Hole:** Locate the small hole on the side of your drill's chuck. This is where the chuck key's pinion gear engages with the chuck's teeth.
2. **Insert Chuck Key:** Insert the pinion gear of the 62140000 chuck key into the corresponding hole on the drill chuck. Ensure the gear teeth are fully engaged.
3. **Verify Fit:** The chuck key should fit snugly without excessive play. If the key does not fit or feels loose, it may not be the correct key for your drill chuck.

## OPERATING INSTRUCTIONS

---

Follow these steps to safely tighten or loosen your drill chuck using the 62140000 Chuck Key:

- **To Tighten the Chuck:**

- a. Insert the drill bit or accessory into the chuck jaws.
- b. Insert the chuck key into the chuck key hole.
- c. Rotate the chuck key clockwise to close the chuck jaws and firmly secure the drill bit. Ensure the bit is centered and held tightly to prevent slippage during operation.
- d. Remove the chuck key immediately after tightening. Never leave the chuck key in the chuck when operating the drill.

- **To Loosen the Chuck:**

- a. Ensure the drill is unplugged or battery removed.
- b. Insert the chuck key into the chuck key hole.
- c. Rotate the chuck key counter-clockwise to open the chuck jaws and release the drill bit or accessory.
- d. Remove the chuck key.

**Safety Warning: Always remove the chuck key from the drill chuck before operating the drill. Failure to do so can result in serious injury.**

## MAINTENANCE

---

Proper maintenance ensures the longevity and reliable performance of your chuck key.

- **Cleaning:** Wipe the chuck key with a clean, dry cloth after each use to remove any dust, debris, or grease. Avoid using harsh chemicals that could damage the metal.
- **Lubrication:** Periodically apply a small amount of light machine oil to the pinion gear to ensure smooth operation and prevent rust.
- **Storage:** Store the chuck key in a dry place, away from moisture and corrosive materials. Keep it in a designated spot to prevent loss.
- **Inspection:** Regularly inspect the chuck key for signs of wear, damage, or bent teeth. Replace the key if any damage is observed to prevent damage to your drill chuck.

## TROUBLESHOOTING

---

If you encounter issues with your chuck key, consider the following:

- **Chuck Key Does Not Fit:**

Ensure the chuck key's pinion gear size matches the key hole on your drill chuck. The 62140000 is an OEM part for specific BLACK+DECKER models. If it does not fit, you may have an incompatible drill chuck or a different model of chuck key is required.

- **Difficulty Tightening/Loosening Chuck:**

Check for debris or rust in the chuck key hole or on the chuck's gear teeth. Clean and lubricate as necessary. If the issue persists, the drill chuck itself may require maintenance or replacement.

- **Chuck Key Slipping:**

This indicates either worn teeth on the chuck key, worn teeth on the drill chuck, or improper engagement. Ensure the key is fully inserted and engaged before applying force. Replace the chuck key if its teeth are visibly worn.

## SPECIFICATIONS

---

Attribute	Detail
Brand	BLACK+DECKER
Model Number	62140000
Part Number	62140000
Item Weight	1.28 ounces
Product Dimensions	1 x 1 x 1 inches
Material	Metal
Power Source	Manual
Included Components	Chuck Key

## WARRANTY AND SUPPORT

---

This BLACK+DECKER 62140000 Chuck Key is an OEM authorized part. For specific warranty information or support regarding this product, please refer to the documentation provided with your original BLACK+DECKER drill or visit the official BLACK+DECKER website. Keep your purchase receipt for warranty claims.

For further assistance, you may contact BLACK+DECKER customer service directly.