



Manuals.plus /

› Wildgame /

› Wildgame I6I20 6.0 Megapixel Illusion 6 Micro Digital Trail Camera User Manual

## Wildgame 10

# Wildgame I6I20 6.0 Megapixel Illusion 6 Micro Digital Trail Camera User Manual

Model: 10

## INTRODUCTION

---

Thank you for choosing the Wildgame I6I20 Illusion 6 Micro Digital Trail Camera. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance. The Illusion 6 features 6.0 megapixel resolution, an IR flash, Flextime Plus™ technology, a wide-angle lens, and a 21-piece high-intensity LED array, all housed in a durable casing with a TRUtreeback texture finish for discreet placement.

## SETUP

---

Follow these steps to prepare your Wildgame Illusion 6 camera for use.

### 1. Battery Installation

The camera requires a specific number of AA batteries (typically 8, though not specified in the provided data, it's standard for trail cameras).

1. Locate the battery compartment on the camera.
2. Open the compartment door.
3. Insert the batteries, ensuring correct polarity (+/-).
4. Close the battery compartment door securely.

### 2. SD Card Insertion

A compatible SD card (not included) is required to store images and videos.

1. Locate the SD card slot, usually near the battery compartment or on the side.
2. Insert the SD card with the metal contacts facing down (or as indicated by the slot).
3. Push the card in until it clicks into place. To remove, push again to release.

### 3. Mounting the Camera

The TRUtreeback texture finish helps the camera blend into its environment.

1. Choose a suitable location, such as a tree or post, that provides a clear view of the desired area.
2. Use the included mounting strap or a compatible mounting accessory to secure the camera firmly.
3. Adjust the camera's angle to ensure proper coverage.



**Figure 1:** The Wildgame I6120 Illusion 6 Micro Digital Trail Camera, featuring its distinctive camouflage pattern and front-facing lens and IR LEDs. The camera is designed to blend seamlessly into natural environments.

## OPERATING INSTRUCTIONS

---

Learn how to operate your Wildgame Illusion 6 camera for effective wildlife monitoring.

### Powering On/Off

- To power on, locate the power switch (usually inside the camera housing) and slide it to the "ON" position.
- The camera may display a startup screen or indicator light.
- To power off, slide the switch to the "OFF" position.

### Mode Selection and Settings

The Illusion 6 offers various settings to customize its operation.

- **Photo Mode:** Captures still images at 6.0 megapixel resolution.
- **Video Mode:** (If available) Records video clips.
- **Flextime Plus™ Technology:** Allows for time-lapse photography at user-defined intervals. Refer to the camera's internal menu for specific settings.
- **IR Flash:** The 21-piece high-intensity LED array provides illumination for night captures. The camera automatically activates the IR flash in low-light conditions.
- **Wide-Angle Lens:** Provides a broader field of view, capturing more of the surrounding area.
- Access the camera's internal menu (via buttons and LCD screen, if present) to adjust settings such as delay time, multi-shot, and date/time stamp.

### Retrieving Images and Videos

- Power off the camera.
- Remove the SD card from its slot.
- Insert the SD card into a compatible card reader connected to a computer or other viewing device.
- Access the files on the SD card to view or transfer your captured media.

## MAINTENANCE

---

Proper maintenance ensures the longevity and performance of your trail camera.

- **Cleaning:** Gently wipe the lens and IR LED array with a soft, lint-free cloth. Avoid abrasive materials or harsh chemicals. Clean the camera housing with a damp cloth as needed.
- **Battery Replacement:** Replace batteries when the low battery indicator appears or when performance degrades. Always use fresh, high-quality batteries.
- **SD Card Management:** Regularly format your SD card (after backing up important files) to maintain optimal performance and prevent data corruption. Consider using multiple SD cards for continuous monitoring.
- **Storage:** When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.

## TROUBLESHOOTING

---

If you encounter issues with your Wildgame Illusion 6 camera, refer to the following common problems and solutions.

Problem	Possible Cause / Solution
Camera not powering on	<ul style="list-style-type: none"> <li>• Check battery polarity.</li> <li>• Replace with fresh batteries.</li> <li>• Ensure power switch is in "ON" position.</li> </ul>
No images/videos captured	<ul style="list-style-type: none"> <li>• Verify SD card is inserted correctly and not full.</li> <li>• Format the SD card.</li> <li>• Check camera settings (e.g., delay time, sensitivity).</li> <li>• Ensure camera is placed in an area with activity.</li> </ul>
Poor image/video quality	<ul style="list-style-type: none"> <li>• Clean the camera lens and IR LEDs.</li> <li>• Check battery level (low power can affect flash).</li> <li>• Ensure camera is stable and not moving.</li> <li>• Adjust camera placement relative to subject distance.</li> </ul>

## SPECIFICATIONS

---

Detailed specifications for the Wildgame I6I20 Illusion 6 Micro Digital Trail Camera.

- **Model:** 10 (I6I20 Illusion 6)
- **Resolution:** 6.0 Megapixel
- **Flash Type:** IR Flash (Infrared)
- **LED Array:** 21-piece high-intensity LED array
- **Lens:** Wide-angle lens
- **Technology:** Flextime Plus™
- **Finish:** TRUtreeback texture finish
- **Product Dimensions:** 10 x 0.01 x 10 inches (L x W x H)

- **Item Weight:** 0.16 ounces
- **Manufacturer:** Wildgame
- **ASIN:** B00XG9JIB4
- **First Available:** May 10, 2015

