

## Step2 8521KR

# Step2 Lifestyle Dream Kids Kitchen Playset User Manual

Model: 8521KR

## INTRODUCTION

The Step2 Lifestyle Dream Kids Kitchen Playset is designed to provide an immersive and interactive play experience for children aged 2 years and older. This versatile playset features realistic kitchen elements such as a molded-in sink with a faucet, a countertop, a refrigerator, and an oven with functional doors. It encourages imaginative role-play, helping children develop social skills and critical thinking. The playset includes 37 accessory pieces to enhance playtime.



Figure 1: The Step2 Lifestyle Dream Kids Kitchen Playset, showcasing its main features and design.

## SAFETY INFORMATION

Please read and understand all safety information before assembly and use of the playset. Keep these instructions for future reference.

- **Choking Hazard:** This product contains small parts and sharp points. Adult assembly is required. Keep small parts away from children during assembly.
- **Age Recommendation:** Suitable for toddlers aged 24 months to 6 years.

- **Battery Safety:** The playset requires 5 AAA batteries (not supplied) for electronic features. Ensure batteries are inserted with correct polarity. Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly.
- **Supervision:** Adult supervision is recommended during playtime.
- **Placement:** Ensure the playset is placed on a stable, flat surface to prevent tipping.

## WHAT'S IN THE BOX

---

The Step2 Lifestyle Dream Kids Kitchen Playset comes with the following components:

- Kitchen playset main structure
- 37-piece accessory set, including:
  - Pots and pans
  - Utensils (forks, spoons, knives)
  - Plates and bowls
  - Cups and mugs
  - Coffee pot
  - Storage bins
  - Assorted play food items
  - Play phone
- Assembly hardware

# ACCESSORIES INCLUDED



Figure 2: A selection of the 37 accessory pieces included with the playset.

## SETUP AND ASSEMBLY

Adult assembly is required for this playset. While the main structure is largely pre-assembled, some components and accessories need to be attached. A Phillips screwdriver is necessary for assembly. For easier assembly, particularly when attaching components to the durable plastic, using a power drill or screw machine with pilot holes is recommended, as noted by some users.

1. Unpack all components and verify against the "What's in the Box" list.
2. Refer to the detailed [Installation Manual \(PDF\)](#) for step-by-step instructions.
3. Assemble the main kitchen structure, ensuring all connections are secure.
4. Attach doors, drawers, and other movable parts. Some users have noted that the oven door may not stay shut well; a small piece of Velcro or a furniture pad can help secure it.
5. Apply any included stickers according to the manual. Note that some stickers may not fit perfectly.
6. Install 5 AAA batteries (not included) into the designated compartments for the electronic features (stove, microwave, sink light).
7. Place all 37 accessory pieces into their respective storage areas or within reach for play.





Figure 3: Playset dimensions for planning placement.

## OPERATING INSTRUCTIONS

The playset features several interactive elements designed to enhance the play experience:

- **Electric Stove:** Place a pot or pan on the designated burner to activate realistic cooking sounds and lights.
- **Microwave Keypad:** The microwave features a working keypad that produces sounds when pressed, simulating real microwave operation.
- **Sink Light:** Lights located over the sink illuminate the play area, adding to the immersive cooking experience.
- **Functional Doors:** The refrigerator and oven doors open and close, allowing children to store and retrieve play food items.
- **Storage:** Utilize the various cabinets, drawers, and the recycling bin for organizing the included accessories and other play items.



Figure 4: Interactive water dispenser feature on the play refrigerator.





Figure 5: The playset offers ample storage for accessories.

## MAINTENANCE

To ensure the longevity and hygiene of your Step2 Lifestyle Dream Kids Kitchen Playset, follow these maintenance guidelines:

- **Cleaning:** The playset is made of durable double-walled plastic. It can be easily cleaned using disinfectant wipes or standard household cleaners. Wipe down all surfaces regularly to maintain a sanitary play environment.
- **Accessory Cleaning:** It is highly recommended to wash all play food accessories thoroughly before initial use. Some users have reported a chemical taste on certain plastic food items upon unboxing. Repeated washing with soap and hot water may be necessary.
- **Storage:** When not in use, store all accessories within the kitchen's designated storage areas to keep them organized and prevent loss.
- **Durability:** The playset's colors are designed not to chip, fade, crack, or peel, ensuring years of use.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your playset.

Problem	Possible Cause	Solution
Electronic features (stove, microwave, sink light) are not working.	Batteries are not installed, are dead, or are incorrectly inserted.	Ensure 5 AAA batteries are installed correctly with the proper polarity. Replace old batteries with new ones.
Oven door does not stay shut.	Minor manufacturing variation or wear over time.	Apply a small piece of Velcro or a furniture pad to the inside edge of the door and frame to help it stay closed.
Play food has a chemical taste/smell.	Residual manufacturing chemicals.	Thoroughly wash all play food items with warm water and dish soap multiple times before allowing children to play with them.
Missing or damaged parts upon arrival.	Shipping damage or packaging error.	Contact Step2 customer support for replacement parts.

## SPECIFICATIONS

- **Model Number:** 8521KR
- **Product Dimensions (Assembled):** 44.75" H x 35.5" W x 15.5" D (113.67 cm H x 90.17 cm W x 39.37 cm D)
- **Item Weight:** Approximately 9.68 pounds (4.39 kg)
- **Recommended Age:** 24 months - 6 years
- **Batteries Required:** 5 AAA batteries (not included)
- **Material:** Durable double-walled plastic construction
- **Color:** Gray

## WARRANTY AND SUPPORT

Step2 products are built to last and are designed for durability. For specific warranty information, product registration, or to contact customer support for assistance with parts or assembly, please visit the official Step2 website or refer to the contact information provided on the product packaging.

You can also find additional information and support resources on the [Step2 Store on Amazon](#).








© 2024 Step2. All rights reserved.


### Related Documents - 8521KR

	<p><a href="#">Step2 Lifestyle Dream Kitchen™ Assembly and Safety Guide</a></p> <p>Comprehensive assembly instructions, safety warnings, and care guide for the Step2 Lifestyle Dream Kitchen™ toy. Learn how to safely assemble and maintain your child's play kitchen.</p>
--	--



	<p><a href="#">Step2 Lifestyle Dream Kitchen Assembly and Safety Instructions</a></p> <p>Comprehensive assembly guide, safety warnings, and usage instructions for the Step2 Lifestyle Dream Kitchen. Includes battery information, cleaning tips, and compliance details.</p>
	<p><a href="#">Step2 Double Showers Splash Water Table: Assembly &amp; Safety Guide (Model 421500)</a></p> <p>Comprehensive assembly instructions, safety warnings, and care guide for the Step2 Double Showers Splash Water Table (Model 421500). Includes details on adult supervision, cleaning, and product specifications.</p>
	<p><a href="#">Step2 Neat &amp; Tidy Cottage Homestyle Edition Assembly Instructions</a></p> <p>Comprehensive assembly instructions for the Step2 Neat &amp; Tidy Cottage Homestyle Edition playhouse. Includes a list of parts, hardware, and step-by-step visual guides for assembly. Features multilingual support and tips for installation.</p>
	<p><a href="#">Step2 Adventure Camper 4205 Assembly Instructions and Safety Guide</a></p> <p>Detailed assembly instructions, safety guidelines, and operational information for the Step2 Adventure Camper (Model 4205). This guide covers setup, warnings, maintenance, and part identification for safe play.</p>
	<p><a href="#">Step2 Putt &amp; Splash Center Assembly Instructions and Safety Guide</a></p> <p>Comprehensive assembly instructions and safety guidelines for the Step2 Putt &amp; Splash Center, designed for children aged 1.5 years and up. Learn how to safely assemble, clean, and use the water play center.</p>

Documents - Step2 – 8521KR

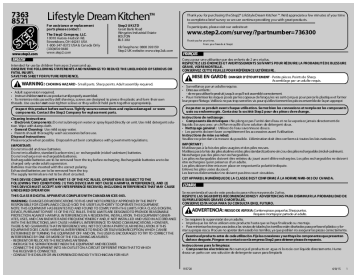

[Step2 Lifestyle Dream Kitchen Assembly and Safety Instructions](#)

Comprehensive assembly guide, safety warnings, and usage instructions for the Step2 Lifestyle Dream Kitchen. Includes battery information, cleaning tips, and compliance details.

lang:en score:36 filesize: 798.62 K page\_count: 12 document date: 2023-01-11

