

Step2 856900

Step2 Lifestyle Custom Kitchen Playset User Manual

Model: 856900

1. INTRODUCTION

Thank you for choosing the Step2 Lifestyle Custom Kitchen Playset. This playset is designed to provide an engaging and imaginative play experience for children. It features a realistic kitchen environment with various interactive elements, encouraging role-playing and the development of social skills. This manual provides essential information for safe assembly, operation, and maintenance of your playset.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Sharp points. Adult assembly required.

Please ensure all small parts are kept away from young children before and during assembly. Always supervise children during play. Inspect the playset regularly for any damage or loose components that could pose a safety risk.

3. PACKAGE CONTENTS

The Step2 Lifestyle Custom Kitchen Playset includes the main kitchen unit and a 20-piece accessory kit. Please verify that all components are present before beginning assembly.

- Main Kitchen Unit (unassembled)
- Pots and Pans
- Utensils (forks, spoons, knives)
- Plates and Bowls
- Cups
- Salt and Pepper Shakers
- Play Phone
- Recycling Container

- Assembly Hardware



Image: The complete 20-piece accessory set, including pots, pans, utensils, dishes, and a play phone.

4. ASSEMBLY INSTRUCTIONS

Adult assembly is required for this playset. All necessary hardware is included. For easier assembly, a power drill with a Phillips head bit is recommended to pre-drill pilot holes, especially for longer screws. Exercise caution to avoid overtightening screws, which can damage the plastic. Finish tightening screws manually for best results.

Follow the step-by-step instructions provided in the separate assembly guide (if applicable) or the diagrams on the packaging. Typically, assembly involves attaching the upper kitchen unit to the base, securing doors, and applying any decorative decals.



Image: A fully assembled Step2 Lifestyle Custom Kitchen Playset, showing two children engaging in play.

5. OPERATING INSTRUCTIONS

The playset features several interactive components designed to enhance the play experience:

- **Electronic Stove:** The stove burners feature realistic lights and cooking sounds when a pot or pan is placed on them. This function requires 2 AAA batteries (not included). Ensure batteries are installed correctly in the designated compartment.
- **Oven and Refrigerator:** The oven and refrigerator doors are operable, allowing children to store play food and accessories.
- **Microwave:** The microwave includes buttons for interactive play.
- **Sink and Faucet:** The molded-in sink includes a functional faucet for pretend washing.
- **Refrigerator Dispenser:** The refrigerator features a pretend water/ice dispenser with interactive buttons.



Image: A child's hand interacting with the electronic stove burner, showing the light-up feature with play food.



Image: A child pressing buttons on the refrigerator's pretend water dispenser, demonstrating interactive features.



Image: A child opening the oven door, showcasing the playset's functional compartments.



Image: A child pressing buttons on the microwave keypad, highlighting the interactive elements.

6. MAINTENANCE AND CLEANING

The Step2 Lifestyle Custom Kitchen Playset is constructed from durable, double-walled plastic, designed for easy cleaning and long-lasting vibrant colors.

- **Cleaning the Playset:** Use disinfectant wipes or mild household cleaners with a soft cloth to clean the surfaces. Avoid abrasive cleaners or scrubbers that could scratch the plastic.
- **Cleaning Accessories:** It is highly recommended to wash all play food and accessories thoroughly with mild soap and water before initial use, and regularly thereafter.
- **Durability:** The plastic construction resists chipping, fading, cracking, and peeling, ensuring the playset maintains its appearance over time.

7. TROUBLESHOOTING

- **Stove Lights/Sounds Not Working:**
 - Ensure 2 AAA batteries are installed correctly in the battery compartment.
 - Check if the batteries are fresh. Replace if necessary.
 - Verify that a pot or pan is placed firmly on the burner.
- **Doors Not Closing Properly:**
 - Check for any obstructions around the hinges or door frame.
 - Ensure all assembly screws are securely tightened, but not overtightened.
- **Playset Instability:**
 - Confirm that the playset is placed on a flat, level surface.
 - Recheck all assembly connections to ensure they are tight.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions (H x W x D)	41.5 x 28 x 14 inches

Item Weight	26.5 pounds
Model Number	856900
Recommended Age	24 months - 6 years
Batteries Required	2 AAA batteries (for electronic stove, not included)
Material	Durable, double-walled plastic









Image: Dimensional diagram of the playset, indicating its height, width, and depth.

9. WARRANTY AND SUPPORT

For information regarding product warranty, replacement parts, or customer support, please refer to the official Step2 website or contact their customer service department directly. Contact details are typically available on the product packaging or the manufacturer's website.

Related Documents - 856900

 <p>ADVENTURE CAMPER™</p>	<p>Step2 Adventure Camper 4205 Assembly Instructions and Safety Guide</p> <p>Detailed assembly instructions, safety guidelines, and operational information for the Step2 Adventure Camper (Model 4205). This guide covers setup, warnings, maintenance, and part identification for safe play.</p>
 <p>Lifestyle Dream Kitchen™</p>	<p>Step2 Lifestyle Dream Kitchen™ Assembly and Safety Guide</p> <p>Comprehensive assembly instructions, safety warnings, and care guide for the Step2 Lifestyle Dream Kitchen™ toy. Learn how to safely assemble and maintain your child's play kitchen.</p>
 <p>DOUBLE SHOWERS SPLASH WATER TABLE™</p>	<p>Step2 Double Showers Splash Water Table: Assembly & Safety Guide (Model 421500)</p> <p>Comprehensive assembly instructions, safety warnings, and care guide for the Step2 Double Showers Splash Water Table (Model 421500). Includes details on adult supervision, cleaning, and product specifications.</p>
 <p>Clubhouse Climber™ 8012/8023</p>	<p>Step2 Clubhouse Climber 8012/8023 Assembly and Safety Instructions</p> <p>Comprehensive assembly, safety warnings, operation, and maintenance instructions for the Step2 Clubhouse Climber 8012/8023 playset. Includes parts list, installation guide, and safety guidelines.</p>
 <p>PUTT & SPLASH CENTER™</p>	<p>Step2 Putt & Splash Center Assembly Instructions and Safety Guide</p> <p>Comprehensive assembly instructions and safety guidelines for the Step2 Putt & Splash Center, designed for children aged 1.5 years and up. Learn how to safely assemble, clean, and use the water play center.</p>
 <p>Lifestyle Dream Kitchen™</p>	<p>Step2 Lifestyle Dream Kitchen Assembly and Safety Instructions</p> <p>Comprehensive assembly guide, safety warnings, and usage instructions for the Step2 Lifestyle Dream Kitchen. Includes battery information, cleaning tips, and compliance details.</p>