



Manuals.plus /

› Magic Wand /

› Magic Wand Original Instruction Manual

## Magic Wand Original

# Magic Wand Original Instruction Manual

Model: Original

## INTRODUCTION

---

The Magic Wand Original is a powerful and durable massager designed for external use. Trusted for over 30 years, it provides deep, powerful vibrations for comfort and relaxation. This manual provides essential information for the safe and effective operation, maintenance, and care of your Magic Wand Original.



Image: The Magic Wand Original massager, shown alongside its product packaging. The massager features a white handle, a blue flexible neck, and a soft, round head.

## SAFETY INFORMATION

Please read all safety instructions carefully before using the Magic Wand Original. Failure to do so may result in injury or damage to the product.

- **External Use Only:** This device is intended for external massage only. Do not use internally.
- **Power Source:** Only use the device with the specified power source. Ensure the voltage matches your local power supply.
- **Avoid Water:** Do not immerse the device in water or use it in wet environments. This product is not waterproof.
- **Overheating:** Discontinue use immediately if the device becomes excessively hot. Allow it to cool down before resuming use. Prolonged use at high intensity may cause heat buildup.
- **Medical Conditions:** Consult a healthcare professional before use if you have any medical conditions, are pregnant, or have sensitive skin.
- **Cord Care:** Do not pull, twist, or excessively bend the power cord. Keep the cord away from heat sources and sharp edges.
- **Storage:** Store the device in a cool, dry place, out of reach of children.
- **Legal Disclaimer:** *Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.*

## PRODUCT FEATURES

---

- **Powerful Vibrations:** Delivers deep and consistent vibrations for effective muscle relaxation and comfort.
- **Two Speed Settings:** Features approximately 6,000 vibrations per minute on high and 5,000 vibrations per minute on low, allowing for customizable intensity.
- **Corded Design:** Ensures continuous, consistent power without the need for battery charging, eliminating concerns about power fading during use.
- **Flexible Head:** The soft, squishable head is designed for comfortable application and adapts to body contours.
- **Durable Construction:** Built for longevity and reliable performance.

## SETUP

---

1. **Unpack:** Carefully remove the Magic Wand Original from its packaging.
2. **Inspect:** Check the device and power cord for any visible damage. Do not use if damaged.
3. **Plug In:** Insert the power plug firmly into a standard electrical outlet.

## OPERATING INSTRUCTIONS

---

The Magic Wand Original features a simple slide switch for operation.

1. **Turn On (Low Speed):** Slide the switch to the "I" position for the low-speed setting (approx. 5,000 RPM).
2. **Turn On (High Speed):** Slide the switch to the "II" position for the high-speed setting (approx. 6,000 RPM).
3. **Application:** Gently apply the vibrating head to the desired external area of the body. It is recommended to start with the low setting and adjust as needed. For sensitive areas, consider using a towel or soft cloth between the device and your skin.
4. **Turn Off:** Slide the switch to the "O" position to turn off the device.
5. **Unplug:** Always unplug the device from the electrical outlet after each use.

## MAINTENANCE AND CARE

---

- **Cleaning:** After each use, wipe the head and body of the massager with a clean, damp cloth and mild soap. Do not use abrasive cleaners or immerse the device in water. Ensure the device is completely dry before storing.
- **Storage:** Store the Magic Wand Original in its original packaging or a clean, dry place away from direct sunlight, extreme temperatures, and moisture.
- **Cord Maintenance:** Periodically inspect the power cord for any signs of wear or damage. If the cord is damaged, do not use the device and contact customer support.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Device does not turn on.	Not properly plugged in; power outlet issue; switch not in correct position.	Ensure the power cord is securely plugged into a working electrical outlet. Check the slide switch is set to "I" or "II". Try a different outlet.
Vibrations are weak or inconsistent.	Loose connection; internal issue.	Ensure the power cord is firmly connected. If the issue persists, discontinue use and contact customer support.
Device becomes hot during use.	Prolonged use; restricted airflow.	Discontinue use immediately and allow the device to cool down completely. Avoid prolonged continuous use. Ensure no vents are blocked.

## SPECIFICATIONS

---

- **Model:** Original
- **Manufacturer:** Hitachi
- **Speeds:** Approx. 6,000 RPM (High) / 5,000 RPM (Low)
- **Power Source:** Corded Electric
- **Package Dimensions:** 15.51 x 4.53 x 3.43 inches
- **Weight:** 4.5 ounces
- **ASIN:** B00XM1PKY0
- **First Available:** September 15, 2015

## WARRANTY AND SUPPORT

---

For warranty information, product support, or service inquiries, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Hitachi

For further assistance, you may visit the Magic Wand Store on Amazon.