

[Manuals.plus](#) /

> [TWINBIRD](#) /

> TWINBIRD SD-4546R Shoe Dryer User Manual

## TWINBIRD SD-4546R

# TWINBIRD SD-4546R Shoe Dryer User Manual

Brand: TWINBIRD | Model: SD-4546R

## 1. INTRODUCTION

Thank you for purchasing the TWINBIRD SD-4546R Shoe Dryer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and keep it for future reference.

The TWINBIRD SD-4546R is designed to quickly and effectively dry various types of footwear, helping to prevent odors and maintain shoe hygiene. It features two drying modes and a convenient timer function.

## 2. IMPORTANT SAFETY PRECAUTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Always unplug the appliance from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not block the air vents during operation. Ensure proper ventilation around the unit.
- This appliance is for household use only. Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Use only on a stable, flat, and heat-resistant surface.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Do not attempt to disassemble or repair the appliance yourself. Contact qualified service personnel.

### 3. PRODUCT OVERVIEW AND PARTS

Familiarize yourself with the components of your TWINBIRD SD-4546R Shoe Dryer.



Figure 3.1: Front view of the TWINBIRD SD-4546R Shoe Dryer, showcasing its compact red design, drying nozzles, control dial, and power cord.

- **Drying Nozzles:** Where shoes are placed for drying.
- **Mode Switch:** Selects between Standard and Leather Shoe modes.
- **Timer Dial:** Sets the drying duration (OFF, 30, 60, 90, 120 minutes).
- **Power Cord:** Connects the dryer to an electrical outlet.

### 4. SETUP

Follow these steps to set up your shoe dryer:

1. **Unpack:** Carefully remove the shoe dryer and all packaging materials.
2. **Placement:** Place the dryer on a stable, flat, and dry surface. Ensure there is adequate space around the unit for

proper air circulation. Avoid placing it near heat sources or in direct sunlight.

3. **Power Connection:** Plug the power cord into a standard electrical outlet. Ensure the outlet voltage matches the appliance's specifications (100V).

## 5. OPERATING INSTRUCTIONS

### 5.1. Drying Modes

The TWINBIRD SD-4546R offers two distinct drying modes:



Figure 5.1: The shoe dryer features two modes for different shoe types and conditions.

- **Standard Mode:** Ideal for general drying of washed sneakers, canvas shoes, and long boots.
- **Leather Shoe Mode:** Specifically designed for drying leather shoes that have become wet from rain or snow, using a gentler heat to protect the material.

### 5.2. How to Use

Operating the shoe dryer is simple:



Figure 5.2: Simple two-step operation for drying shoes.

1. **Set the Shoes:** Place your shoes onto the drying nozzles. Ensure they are securely positioned. For long boots, lay the dryer down horizontally to accommodate the boot length.
2. **Select Mode and Time:**
  - Use the mode switch to select either "Standard" or "Leather Shoe" mode.
  - Turn the timer dial to your desired drying duration (30, 60, 90, or 120 minutes). The dryer will start automatically.
3. **Completion:** The dryer will automatically shut off once the set time has elapsed. Unplug the unit after use.

### 5.3. Applicable Shoe Types

The dryer is suitable for a wide range of footwear, including:

# いろいろな靴に対応 家族みんなのくつ乾燥機



Figure 5.3: The dryer is versatile for various shoe types and conditions.

- Long boots (for rain or snow)
- Pumps (especially those that cannot be fully washed)
- Muddy sneakers
- Leather shoes (prone to odor or dampness)

## 5.4. Drying Time Guidelines

The following table provides estimated drying times. Actual times may vary depending on shoe material, thickness, and the degree of wetness.

# 乾燥時間の目安

	使用するモード	洗った場合	湿った場合
	標準	約50分	約30分
	標準	約70分	約40分
	革靴		約20分

Figure 5.4: Estimated drying times for various shoe types and conditions.

Shoe Type / Mode	Condition	Approx. Drying Time
Standard Mode (Regular Shoes)	Washed	50 minutes
Standard Mode (Regular Shoes)	Wet	30 minutes
Standard Mode (Long Boots)	Washed	70 minutes
Standard Mode (Long Boots)	Wet	40 minutes
Leather Shoe Mode	Wet	20 minutes

## 6. MAINTENANCE AND CARE

Proper care ensures the longevity and optimal performance of your shoe dryer.

- **Cleaning:** Always unplug the dryer before cleaning. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the surface.
- **Storage:** When not in use, store the dryer in a cool, dry place, away from direct sunlight and moisture. Ensure the power cord is neatly wrapped and not kinked.
- **Air Vents:** Periodically check the air intake and exhaust vents for any dust or lint accumulation. Gently remove any obstructions to ensure proper airflow.

## 7. TROUBLESHOOTING


If you encounter any issues with your shoe dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not turn on.	Not plugged in correctly. No power from outlet.	Ensure the power cord is securely plugged into a working electrical outlet. Test the outlet with another appliance.
Shoes are not drying effectively.	Incorrect mode selected. Insufficient drying time. Blocked air vents.	Ensure the correct drying mode (Standard or Leather Shoe) is selected for the footwear. Increase the drying time using the timer dial. Check and clear any obstructions from the air intake and exhaust vents.
Dryer is noisy during operation.	Normal operating noise.	The appliance operates at approximately 52 dB, which is a normal operating sound for this type of device. This is not a malfunction.

If the problem persists after trying these solutions, please contact customer support.

## 8. SPECIFICATIONS

Technical details for the TWINBIRD SD-4546R Shoe Dryer:

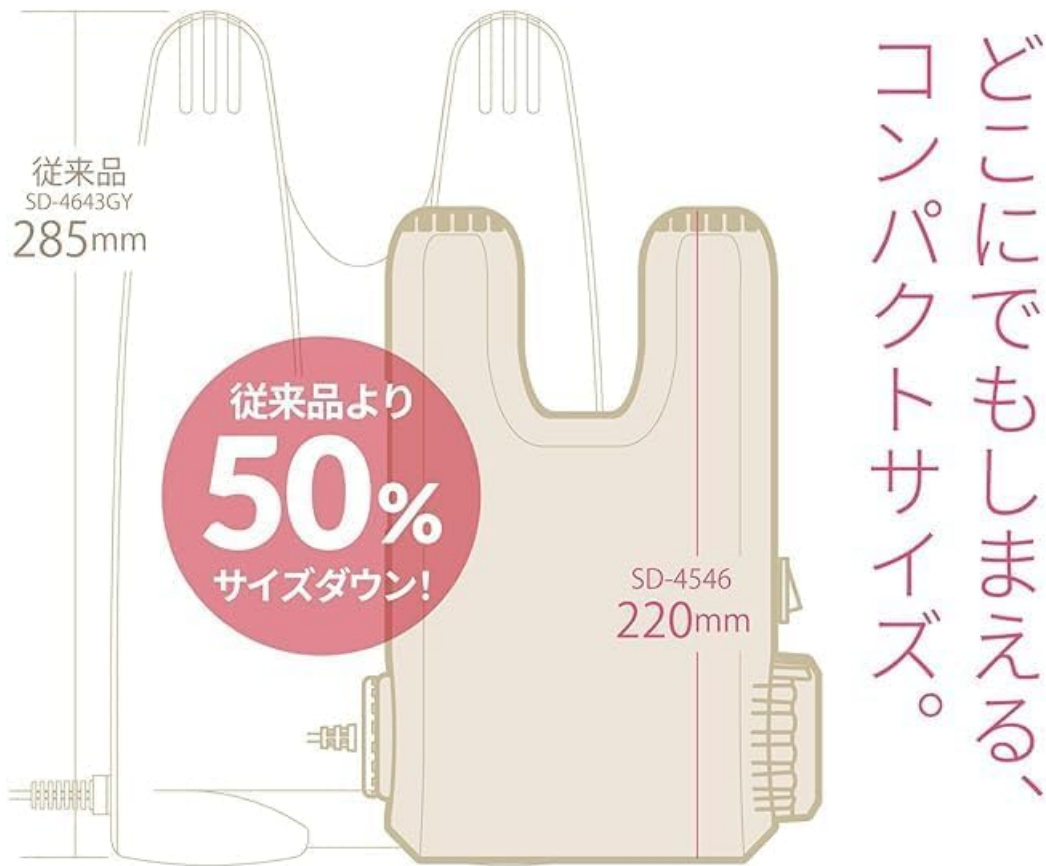

従来品のパワーはそのまま、  
靴箱にも収納しやすいサイズになりました。

(※1)SD-4546 サイズ:150×90×220mm / SD-4643GY サイズ:170×135×285mm にてサイズ比較した場合。

Figure 8.1: Dimensions of the TWINBIRD SD-4546R Shoe Dryer.

Feature	Detail
Brand	TWINBIRD
Model Number	SD-4546R
Color	Red
Item Weight	1.48 pounds (approx. 0.67 kg)
Product Dimensions (L x W x H)	3.54 x 5.91 x 8.66 inches (approx. 9 x 15 x 22 cm)
Voltage	100.0 V
Wattage	150 watts
Noise Level	52 dB
Form Factor	Freestanding

# SIZE

サイズ



Figure 8.2: The compact design of the SD-4546R, making it easy to store.

## 9. WARRANTY INFORMATION

For specific warranty details, please refer to the warranty card included with your product or the purchase

documentation. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase. Keep your proof of purchase for warranty claims.

## 10. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to report an issue that cannot be resolved using the troubleshooting guide, please contact the retailer where you purchased the product or visit the official TWINBIRD website for support information.

Please have your model number (SD-4546R) and purchase date ready when contacting support.