

## DCG MWG825N

# DCG MWG825N Combination Microwave Oven with Grill User Manual

Model: MWG825N

## 1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your DCG MWG825N combination microwave oven with grill. Please read this manual thoroughly before using the appliance and retain it for future reference.

### Important Safety Precautions:

- Always ensure the appliance is properly grounded.
- Do not operate the oven if the door seal or door is damaged. Contact qualified service personnel.
- Never heat sealed containers, as they may explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Supervise children closely when the oven is in use.
- Only use utensils suitable for microwave ovens.
- Do not attempt to service or repair the oven yourself. Refer all servicing to qualified personnel.
- Ensure adequate ventilation around the appliance.

## 2. PRODUCT OVERVIEW

The DCG MWG825N is a versatile 25-liter combination microwave oven designed for various cooking tasks, including microwave heating, grilling, and combined cooking functions. It features a manual control panel for straightforward operation.

### Key Features:

- 25-liter capacity
- 35-minute mechanical timer
- Defrost function
- End-of-cooking signal
- Manual control panel
- Integrated door handle

### Components and Control Panel:



*Image: Front view of the DCG MWG825N microwave oven, showing the door, control panel with two rotary knobs, and the DCG logo.*

### Control Panel Details:

- **Upper Rotary Knob (POWER):** Selects cooking power levels and modes.
  - M.Low (Warm/Keep Warm)
  - Low (Defrost/Softening)
  - Med (Medium Heat)
  - M.High (Medium-High Heat)
  - High (Full Power Microwave)
  - Grill (Grill Function)
  - Combi.1 (Combination Cooking Mode 1)
  - Combi.2 (Combination Cooking Mode 2)
  - Combi.3 (Combination Cooking Mode 3)
- **Lower Rotary Knob (TIMER/MIN / DEFROST(kg)):** Sets cooking time or defrost weight.
  - Timer (0-35 minutes)
  - Defrost (0.2kg - 1.0kg)
- **Door Handle:** Used to open the oven door.

### 3. SETUP

### Placement:

- Place the oven on a flat, stable surface capable of supporting its weight.
- Ensure there is at least 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2

inches) on each side for proper ventilation.

- Do not block any ventilation openings.
- Keep the oven away from heat sources, strong magnetic fields, and areas with high humidity.

### Power Connection:

- Before plugging in, ensure your household electrical supply matches the voltage specified on the oven's rating label (240 Volts AC).
- Plug the oven into a dedicated, properly grounded wall outlet. Do not use extension cords or adapters.

## 4. OPERATING INSTRUCTIONS

### General Operation:

To begin cooking, place food in a microwave-safe container on the turntable inside the oven and close the door securely.

### Power Level Selection:

Use the **Upper Rotary Knob (POWER)** to select the desired cooking power or mode:

- **High:** For fast cooking and reheating. (800 Watts)
- **M.High:** For general cooking.
- **Med:** For denser foods like roasts.
- **Low:** For defrosting or simmering.
- **M.Low:** For keeping food warm.
- **Grill:** For grilling foods.
- **Combi.1, Combi.2, Combi.3:** For combination cooking (microwave and grill). Refer to specific recipes for optimal use of these modes.

### Timer and Defrost Selection:

Use the **Lower Rotary Knob (TIMER/MIN / DEFROST(kg))** to set the cooking time or defrost weight.

### Cooking Modes:

#### Microwave Cooking:

1. Place food in a microwave-safe dish.
2. Turn the **POWER** knob to the desired microwave power level (e.g., High, M.High).
3. Turn the **TIMER/MIN** knob to set the desired cooking time (up to 35 minutes). The oven will start automatically.

#### Grill Cooking:

1. Place food on the grill rack (if provided) in a heat-resistant dish.
2. Turn the **POWER** knob to 'Grill'.
3. Turn the **TIMER/MIN** knob to set the desired grilling time. The oven will start automatically.

#### Combination Cooking:

Combination modes combine microwave and grill functions for faster cooking and browning.

1. Place food in a suitable combination-safe dish.
2. Turn the **POWER** knob to Combi.1, Combi.2, or Combi.3, depending on the recipe or desired result.
3. Turn the **TIMER/MIN** knob to set the desired cooking time. The oven will start automatically.

#### Defrosting:

1. Place frozen food in a microwave-safe dish.

2. Turn the **POWER** knob to 'Low' or 'M.Low' for gentle defrosting.
3. Turn the **DEFROST(kg)** section of the lower knob to the approximate weight of the food (e.g., 0.2kg to 1.0kg). The oven will automatically set an appropriate defrosting time.

**End of Cooking:**

When the set time expires, the oven will emit an audible signal to indicate that cooking is complete. Carefully remove the food, as dishes may be hot.

**5. MAINTENANCE AND CLEANING**

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Before Cleaning:** Always unplug the oven from the power outlet.
- **Interior:** Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or scouring pads.
- **Exterior:** Clean the exterior surface with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Door and Door Seal:** Keep the door and door seal clean to ensure proper closure. Wipe with a soft, damp cloth.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be removed for cleaning. Wash them in warm soapy water or in a dishwasher. Ensure they are dry before placing them back in the oven.

**6. TROUBLESHOOTING**

If you encounter any issues with your microwave oven, refer to the following table for common problems and solutions.

| Problem                      | Possible Cause                                                                              | Solution                                                                                    |
|------------------------------|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| Oven does not start          | Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped. | Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker. |
| Food not heating             | Power level set too low; Cooking time too short; Incorrect utensil used.                    | Increase power level or cooking time; Use microwave-safe cookware.                          |
| Turntable not rotating       | Turntable or roller ring not correctly placed; Obstruction under turntable.                 | Re-position turntable and roller ring; Remove any obstructions.                             |
| Sparks or arcing inside oven | Metal in oven; Food residue on cavity walls.                                                | Remove any metal objects; Clean oven interior thoroughly.                                   |

If the problem persists after attempting these solutions, please contact qualified service personnel.

**7. SPECIFICATIONS**

| Feature                  | Specification |
|--------------------------|---------------|
| Brand                    | DCG           |
| Model Number             | MWG825N       |
| Capacity                 | 25 Liters     |
| Power Output (Microwave) | 800 Watts     |

| Feature                | Specification          |
|------------------------|------------------------|
| Voltage                | 240 Volts (AC)         |
| Dimensions (L x W x H) | 40 x 48.5 x 29.25 cm   |
| Weight                 | 5 Kilograms            |
| Material               | Glass, Stainless Steel |
| Installation Type      | Countertop             |
| Noise Level            | 25 Decibels            |
| Human Interface Input  | Buttons (Rotary Knobs) |

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage, service, or technical support for your DCG MWG825N microwave oven, please refer to the warranty card included with your purchase or contact the retailer or manufacturer directly. Keep your proof of purchase for warranty claims.

© 2023 DCG. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

