

Frigidaire 137280300

Frigidaire 137280300 Washing Machine Inner Door Instruction Manual

Model: 137280300

INTRODUCTION

This manual provides essential instructions for the safe and correct installation, operation, and maintenance of your Frigidaire 137280300 Washing Machine Inner Door. This is a genuine replacement part designed to ensure compatibility and optimal performance with your Frigidaire washing machine. Please read this manual thoroughly before proceeding with installation or any maintenance.

SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, explosion, injury to persons, or damage when using your appliance, follow basic safety precautions, including the following:

- Always disconnect the washing machine from the power supply before attempting any installation, repair, or maintenance.
- Turn off the water supply to the washing machine before beginning any work.
- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- If you are unsure about any step, consult a qualified technician.
- Keep all parts and tools away from children.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Frigidaire 137280300 Washing Machine Inner Door (1 unit)
- *(Note: Additional hardware or tools are typically not included with this replacement part and may need to be reused from the original assembly or purchased separately.)*

SETUP (INSTALLATION)

This section outlines the general steps for replacing the inner door of your Frigidaire washing machine. Specific steps may vary slightly depending on your washing machine model. Refer to your washing machine's service

manual for detailed instructions if needed.

Tools Required:

- Screwdriver (Phillips head and/or flathead, depending on fasteners)
- Pliers (optional, for stubborn clips)
- Work gloves

Installation Steps:

1. **Prepare the Appliance:** Ensure the washing machine is unplugged from the electrical outlet and the water supply is turned off.
2. **Access the Door Assembly:** Depending on your washing machine model, you may need to remove the outer door panel or other components to access the inner door assembly. Carefully observe how the existing inner door is attached.
3. **Remove the Old Inner Door:** Locate the screws, clips, or hinges securing the old inner door. Use the appropriate screwdriver or tool to carefully detach it. Keep track of all fasteners for reassembly.
4. **Install the New Inner Door:** Position the new Frigidaire 137280300 Inner Door in the same manner as the old one. Align any tabs, hinges, or mounting points.
5. **Secure the New Inner Door:** Reattach all screws, clips, or hinges that secure the inner door. Ensure all fasteners are tightened securely but do not overtighten.
6. **Reassemble Outer Components:** If you removed any outer door panels or other parts, reattach them carefully.
7. **Test the Door:** Gently open and close the new inner door to ensure it operates smoothly and latches correctly.
8. **Restore Power and Water:** Once installation is complete and verified, plug the washing machine back into the electrical outlet and turn on the water supply.



Image: Frigidaire 137280300 Washing Machine Inner Door, a genuine replacement part.

OPERATING

The Frigidaire 137280300 Inner Door functions as a component of your washing machine's main door assembly. Proper operation primarily involves ensuring it closes and latches securely before starting a wash cycle.

- Always ensure the inner door is fully closed and latched before closing the outer door and starting a wash cycle.
- Avoid forcing the door open or closed. If resistance is met, inspect for obstructions.

MAINTENANCE

Regular maintenance helps prolong the life of your inner door and ensures optimal performance.

- **Cleaning:** Periodically wipe down the inner door with a soft, damp cloth to remove detergent residue, lint, or dirt. Avoid abrasive cleaners that could scratch the surface.
- **Inspection:** Regularly inspect the door for any signs of damage, cracks, or loose components. Check the hinges and latch mechanism for proper function.
- **Door Seal:** If your washing machine's design includes a door seal (gasket) around the inner door, inspect it for mold, mildew, or damage. Clean it as recommended by your washing machine's main instruction manual.

TROUBLESHOOTING

If you encounter issues with your inner door, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Inner door does not close or latch properly.	Obstruction, misaligned hinges, damaged latch.	Check for any items blocking the door. Inspect hinges for proper alignment and tighten if loose. Examine the latch mechanism for damage; replace if necessary.
Unusual noise when opening/closing.	Loose screws, worn hinges.	Tighten any loose screws on the door or hinges. If hinges are worn, they may need replacement.
Water leaking from door area.	Damaged door seal (gasket), improper door closure.	Ensure the inner door is fully closed and latched. Inspect the door seal for cracks, tears, or debris; clean or replace if damaged. (Note: The inner door itself typically does not contain the primary water seal, but its proper closure is essential for the main door seal to function.)

If troubleshooting steps do not resolve the issue, it is recommended to contact Frigidaire customer support or a certified appliance technician.

SPECIFICATIONS

Brand:	Frigidaire
Model Number:	137280300
Item Weight:	5.4 pounds
Product Dimensions:	23.63 x 9.8 x 21.5 inches
Part Type:	Genuine Replacement Inner Door

WARRANTY AND SUPPORT

As a genuine Frigidaire replacement part, this inner door is manufactured to high-quality standards. For specific warranty information regarding this part, please refer to the documentation that came with your original washing machine or contact Frigidaire customer support directly. For technical assistance or further inquiries, please visit the official Frigidaire website or contact their customer service department.

Note: Always ensure you are using genuine replacement parts to maintain the warranty and performance of your appliance.