

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KitchenAid](#) /

› [KitchenAid KCG0702CS Burr Coffee Grinder User Manual](#)

KitchenAid KCG0702CU

KitchenAid KCG0702CS Burr Coffee Grinder User Manual

Model: KCG0702CU

1. INTRODUCTION

Thank you for choosing the KitchenAid KCG0702CS Burr Coffee Grinder. This appliance is designed to provide consistent and precise coffee grinding for various brewing methods. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the grinder.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.

3. PARTS AND FEATURES

Familiarize yourself with the components of your KitchenAid Burr Coffee Grinder:

- **Bean Hopper:** Holds whole coffee beans. Capacity: 7 ounces (glass).
- **Grind Jar:** Collects ground coffee. (glass)
- **Grind Selector Dial:** Adjusts grind fineness (15 settings).
- **On/Off Switch:** Activates and deactivates the grinding process.
- **Stainless Steel Cutting Burrs:** Ensures consistent grinding.

- **Die-Cast Metal Design:** Provides durability and stability.



Figure 1: Front view of the KitchenAid KCG0702CS Burr Coffee Grinder. Shows the bean hopper on top, grind selector dial on the side, and grind jar at the bottom.



Figure 2: Side view of the KitchenAid KCG0702CS Burr Coffee Grinder, highlighting the sleek design and placement of the on/off switch.

4. SETUP

- 1. Unpack:** Carefully remove all parts from the packaging.
- 2. Clean:** Wash the bean hopper, grind jar, and their lids in warm, soapy water. Rinse thoroughly and dry completely. The main unit should be wiped with a damp cloth.

3. **Assemble:** Place the grind jar onto the base, ensuring it is securely seated. Position the bean hopper on top of the grinder unit.
4. **Plug In:** Connect the power cord to a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1. Adjusting Grind Settings

The grind selector dial allows you to choose from 15 grind levels, suitable for various brewing methods:

- **Fine:** Ideal for Espresso.
- **Medium:** Suitable for Automatic Drip Coffee Makers and Pour Over.
- **Coarse:** Best for French Press.

Rotate the grind selector dial to your desired setting. It is recommended to adjust the grind setting when the grinder is empty or running to prevent burr damage.



Figure 3: Close-up view of the grind selector dial, showing the numerical settings for different grind fineness levels.

5.2. Grinding Coffee

- 1. Fill Hopper:** Pour whole coffee beans into the bean hopper. Do not overfill beyond the MAX line.
- 2. Select Grind:** Choose your desired grind setting using the grind selector dial.
- 3. Start Grinding:** Flip the On/Off switch to the 'ON' position. The grinder will begin processing the beans.
- 4. Stop Grinding:** Once the desired amount of coffee is ground, flip the On/Off switch to the 'OFF' position.
- 5. Remove Grounds:** Carefully remove the grind jar from the base and use the freshly ground coffee immediately for optimal flavor.



Figure 4: The coffee grinder in operation, showing whole beans in the upper hopper and freshly ground coffee collecting in the lower grind jar.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

- Unplug:** Always unplug the grinder before cleaning.
- Disassemble:** Remove the bean hopper, grind jar, and their lids.
- Wash Parts:** Wash the bean hopper, grind jar, and lids in warm, soapy water. These parts are also dishwasher-safe (top rack only).
- Clean Burrs:** Use a soft brush or cloth to remove any residual coffee grounds from the burrs. Do not use water directly on the burrs or inside the motor housing.
- Wipe Base:** Wipe the exterior of the grinder base with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Dry and Reassemble:** Ensure all parts are completely dry before reassembling the grinder.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in; Power switch off.	Ensure grinder is plugged in; Flip power switch to 'ON'.
Beans are not grinding.	Hopper empty; Burrs clogged.	Add more beans; Clean burrs as per maintenance instructions.
Inconsistent grind.	Burrs dirty or worn; Incorrect setting.	Clean burrs; Adjust grind setting. If issue persists, burrs may need replacement.
Excessive static cling.	Dry environment.	This is common with dry coffee grounds. A slight mist of water on beans before grinding can help.

8. SPECIFICATIONS

- Model Number:** KCG0702CU
- Product Dimensions:** 5.9 x 10 x 9.8 inches
- Item Weight:** 9.9 Pounds
- Material:** Zinc (housing), Glass (hopper/jar), Stainless Steel (burrs)
- Grind Settings:** 15
- Bean Hopper Capacity:** 7 ounces
- UPC:** 883049380872

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official KitchenAid website or contact their customer service. Keep your purchase receipt for warranty claims.