

MINELAB GO-FIND 60

Minelab GO-FIND 60 Metal Detector User Manual

Model: GO-FIND 60

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

Thank you for choosing the Minelab GO-FIND 60 Metal Detector. This manual provides essential information for the proper setup, operation, and maintenance of your device. The GO-FIND 60 is designed for ease of use and portability, making treasure hunting accessible for users of all experience levels. Its lightweight and collapsible design, combined with a waterproof search coil, allows for versatile use on land and in shallow water.

The GO-FIND 60 features advanced capabilities such as precision control, maximum depth detection, and intuitive audio and visual alerts to help you identify targets efficiently. Please read this manual thoroughly before using your metal detector to ensure optimal performance and longevity.

SETUP AND ASSEMBLY

The Minelab GO-FIND 60 is designed for quick and easy setup. Follow these steps to prepare your detector for use:

1. **Unfolding the Detector:** The GO-FIND 60 features a unique collapsible design. Gently unfold the detector until it locks into its extended position. Ensure all sections are securely locked.
2. **Adjusting Length:** The detector's length is adjustable to suit users of various heights. Extend or retract the shaft to a comfortable operating position.
3. **Attaching the Armrest:** Secure the armrest to the main shaft. The armrest provides stability and comfort during prolonged use.
4. **Installing Batteries:** The GO-FIND 60 is powered by 4 x AA batteries. Locate the battery compartment, insert the batteries according to the polarity indicators, and securely close the compartment.
5. **Search Coil Orientation:** Ensure the search coil is parallel to the ground for optimal detection. The search coil is fully waterproof, allowing for use in shallow water.



Image: The Minelab GO-FIND 60 Metal Detector fully unfolded and ready for use. This image shows the ergonomic design and the search coil at the base.



Image: The Minelab GO-FIND 60 Metal Detector in its compact, folded state, highlighting its portability.

OPERATING INSTRUCTIONS

The GO-FIND 60 is designed for intuitive operation with its simple one-button press system.

Basic Operation

- **Power On/Off:** Press and hold the power button to turn the detector on or off.
- **Selecting Search Modes:** Simply press the "Find" button to cycle through the available search modes. Each mode is optimized for different target types or ground conditions.
- **Sweeping Technique:** Hold the detector with the search coil parallel to the ground, sweeping it slowly from side to side in overlapping motions. Keep the coil as close to the ground as possible without touching it.
- **Audio Alerts:** The detector provides distinct audio tones. A high tone typically indicates a high-value metal target (e.g., silver or gold), while a low tone indicates an iron target (e.g., a nail).
- **Visual Alerts:** The GO-FIND 60 features a visual icon display. Green LEDs indicate non-iron metals, and Red LEDs indicate iron targets. The visual icon will flash when a target is detected.

Advanced Features (GO-FIND 60 Specific)

- **Target ID:** The display provides visual identification of detected targets, helping you discriminate between valuable items and junk.
- **Sensitivity Adjustment:** Use the sensitivity controls to adjust the detector's responsiveness to targets. Higher sensitivity can detect smaller or deeper targets but may also pick up more ground noise.
- **Pinpoint Mode:** Activate pinpoint mode to narrow down the exact location of a detected target, making recovery easier.

- **Bluetooth Connectivity:** The GO-FIND 60 can connect to a smartphone app for enhanced features and tracking. Refer to the app's instructions for detailed usage.



Image: A close-up view of the GO-FIND 60's control panel, showing the display, buttons for mode selection, sensitivity adjustment, and target identification.



Image: A family enjoying treasure hunting on a beach with the Minelab GO-FIND 60, demonstrating its ease of use for all ages.



MAINTENANCE AND CARE

Proper maintenance will ensure the longevity and optimal performance of your Minelab GO-FIND 60.

- **Cleaning:** After each use, especially in sandy or muddy conditions, wipe down the detector with a damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Search Coil:** The search coil is waterproof, but the control box is not. Do not submerge the control box. Rinse the search coil with fresh water if used in saltwater environments.
- **Storage:** Store the detector in a cool, dry place. If storing for an extended period, remove the batteries to prevent leakage.
- **Battery Care:** Always use fresh, high-quality AA batteries. Replace batteries when the low battery indicator appears to maintain performance.
- **Avoid Impact:** While durable, avoid dropping or subjecting the detector to severe impacts, which can damage internal components.

TROUBLESHOOTING

If you encounter issues with your GO-FIND 60, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power or detector won't turn on.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh AA batteries.
Erratic signals or false positives.	High sensitivity setting, electromagnetic interference, mineralized ground.	Reduce sensitivity. Move away from power lines or other electronics. Perform ground balance if available (check manual for specific model).
Poor detection depth.	Low sensitivity, incorrect sweep technique, deeply buried target.	Increase sensitivity. Ensure search coil is parallel to the ground and swept slowly.
No audio response.	Volume too low, headphones not connected properly (if applicable), internal fault.	Adjust volume. Check headphone connection. If problem persists, contact support.

If the issue persists after attempting these solutions, please contact Minelab customer support for further assistance.

SPECIFICATIONS

Key technical specifications for the Minelab GO-FIND 60 Metal Detector:

Feature	Detail
Brand	MINELAB
Model Number	GO-FIND 60

Feature	Detail
Product Dimensions	55.88 x 12.7 x 10.16 cm (folded)
Item Weight	1.32 kg (2.9 Pounds)
Power Source	Battery Powered (4 x AA batteries)
Material	Plastic
Colour	Green
Adjustable Length	Yes
International Protection Rating	IPX7 (Search coil is waterproof)
Recommended Product Uses	Treasure Hunting, Metal Detection
Display Type	LED

WARRANTY AND SUPPORT

Minelab provides support for its products. For specific warranty details, please refer to the warranty card included with your product or visit the official Minelab website. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Minelab customer support. Contact information can typically be found on the Minelab official website or in the product packaging.

Online Resources: Visit the official Minelab website for FAQs, software updates, and additional resources related to your GO-FIND 60 metal detector.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question