

Ducati 96880141A

Ducati Scrambler Full Throttle Racing Seat

Model: 96880141A

1. PRODUCT OVERVIEW

This manual provides essential information for the installation, use, and maintenance of your Ducati Scrambler Full Throttle Racing Seat. Designed specifically for the Ducati Scrambler Full Throttle motorcycle, this seat offers a distinct aesthetic and ergonomic profile.



An image showing the Ducati Scrambler Full Throttle Racing Seat. The seat is predominantly black with a textured surface for the rider and passenger areas. A prominent yellow panel runs along the left side of the seat, providing a distinct visual accent. The seat is designed for a sleek, racing-inspired profile.

2. SPECIFICATIONS

Attribute	Detail
Brand	Ducati
Model Number	96880141A (FT SEAT)
Color	Black Yellow
Orientation	Rear
Material	Foam
Vehicle Service Type	Motorcycle
Fit Type	SPECIFIC
Item Weight	5 Pounds
OEM Part Number	96880141a
UPC	628586729247

3. SETUP AND INSTALLATION

Proper installation is crucial for the safety and performance of your racing seat. If you are unsure about any step, it is recommended to seek professional assistance from a certified Ducati technician or an authorized service center.

Required Tools:

- Appropriate wrenches or hex keys for your motorcycle's seat mounting bolts.
- Torque wrench (recommended for precise tightening).

Installation Steps:

1. **Preparation:** Ensure your motorcycle is stable and on a level surface. Turn off the engine and remove the ignition key.
2. **Remove Existing Seat:** Locate and remove the bolts or latches securing the current seat to the motorcycle frame. Carefully lift and remove the old seat.
3. **Inspect Mounting Points:** Clean any debris from the seat mounting points on the motorcycle frame. Ensure there are no obstructions.
4. **Position New Seat:** Align the Ducati Scrambler Full Throttle Racing Seat with the mounting points on the motorcycle frame. Ensure all tabs and hooks (if present) engage correctly.
5. **Secure Seat:** Insert and hand-tighten the seat mounting bolts. Once all bolts are in place, tighten them securely. Refer to your motorcycle's service manual for specific torque specifications. *Do not overtighten.*

6. **Verify Security:** After tightening, gently attempt to lift and move the seat to ensure it is firmly secured and does not wobble.

4. OPERATING CONSIDERATIONS

While a seat does not have operational controls, proper use ensures comfort and longevity.

- **Riding Posture:** The racing seat is designed to support a more aggressive riding posture. Ensure you are comfortable and have full control of the motorcycle.
- **Passenger Comfort:** If the seat is designed for a passenger, ensure they are seated securely and comfortably, especially during acceleration and braking.
- **Weight Distribution:** Be mindful of weight distribution, particularly when carrying a passenger or luggage, to maintain motorcycle balance.

5. MAINTENANCE

Regular maintenance will help preserve the appearance and integrity of your racing seat.

Cleaning:

- **Routine Cleaning:** Use a soft, damp cloth with mild soap and water to wipe down the seat surface. Avoid harsh chemicals, abrasive cleaners, or solvents, as these can damage the foam and outer material.
- **Stubborn Stains:** For more stubborn dirt, a dedicated motorcycle seat cleaner or a gentle automotive interior cleaner can be used, following the product's instructions. Test on an inconspicuous area first.
- **Drying:** Allow the seat to air dry completely before riding or covering the motorcycle. Do not use direct heat sources.

Inspection:

- Periodically inspect the seat for any signs of wear, tears, cracks, or loose stitching.
- Check the mounting bolts for tightness regularly, especially after long rides or off-road use.

Storage:

- When not in use, store the motorcycle in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- If storing outdoors, use a breathable motorcycle cover to protect the seat from elements.

6. TROUBLESHOOTING

If you encounter any issues with your racing seat, consider the following common solutions:

- **Seat Feels Loose:**

Solution: Re-check the mounting bolts. Ensure they are tightened to the manufacturer's specifications. Verify that the seat is correctly aligned with all mounting points and tabs.

- **Unusual Noises (Squeaking/Rattling):**

Solution: This could indicate loose mounting hardware or friction between the seat and the frame. Inspect all contact points and ensure bolts are secure. Applying a small amount of silicone grease to contact points (avoiding areas that affect grip) might help.

- **Material Damage (Tears/Cracks):**

Solution: Small tears can sometimes be repaired with specialized vinyl or leather repair kits. For significant damage, replacement of the seat or professional re-upholstery may be necessary. Preventative measures include proper cleaning and storage.

If problems persist or you are unable to resolve an issue, contact an authorized Ducati service center or the seller for further assistance.

7. WARRANTY AND SUPPORT

For information regarding the warranty coverage for your Ducati Scrambler Full Throttle Racing Seat, please refer to the warranty documentation provided at the time of purchase or contact your authorized Ducati dealer or the original seller.

For technical support, spare parts, or service inquiries, please contact your local authorized Ducati service center or visit the official Ducati website for contact information.

You can also visit the [Ducati Store on Amazon](#) for more product information.

© 2023 Ducati. All rights reserved.

This manual is for informational purposes only. Ducati reserves the right to make changes to its products without prior notice.