

[manuals.plus](#) /› [Lasko](#) /› [Lasko 16-inch Oscillating Stand Fan S16200 User Manual](#)

Lasko S16200

Lasko 16-inch Oscillating Stand Fan S16200 User Manual

Model: S16200

INTRODUCTION

Thank you for choosing the Lasko 16-inch Oscillating Stand Fan, Model S16200. This fan is designed to provide efficient and quiet air circulation for your living spaces, including living rooms and bedrooms. Featuring a durable plastic construction and a stable round base, it offers three speed settings and an oscillating function for widespread cooling. Please read this manual thoroughly before assembly, operation, or maintenance to ensure safe and optimal performance of your fan.



Figure 1: Lasko 16-inch Oscillating Stand Fan (Model S16200) in a typical home environment.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this fan.
- This fan has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug fan before moving, servicing, or cleaning.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not block air openings or exhaust in any manner.

- Do not use outdoors.
- This fan is not intended for use in wet or damp locations.
- Always place the fan on a stable, flat surface during operation to prevent tipping.

PARTS LIST

Before assembly, ensure all parts are present and accounted for. Refer to the diagram below for identification.

- Fan Head Assembly (includes front and rear grilles, fan blade, motor housing)
- Adjustable Height Pole
- Base (round)
- Base Screws/Fasteners
- Power Cord with Fused Safety Plug



Figure 2: Main components of the Lasko S16200 fan. Note: Specific assembly diagrams are not included, but this image shows the assembled product.

SETUP AND ASSEMBLY

Follow these steps to assemble your Lasko 16-inch Oscillating Stand Fan:

1. **Assemble the Base:** Place the adjustable height pole into the round base. Secure it using the provided screws or fasteners from the underside of the base. Ensure it is firmly attached and stable.
2. **Attach the Fan Head:** Carefully place the fan head assembly onto the top of the adjustable height pole. Align the connection points and secure it according to the design (usually a screw or a locking mechanism).
3. **Adjust Height:** Loosen the height adjustment collar on the pole, extend or retract the pole to your desired height, and then tighten the collar securely.
4. **Positioning:** Place the assembled fan on a firm, level surface, away from curtains or other objects that could obstruct airflow or be drawn into the fan blades.
5. **Plug In:** Insert the polarized plug into a 120V AC wall outlet.

OPERATING INSTRUCTIONS

Your Lasko S16200 fan is simple to operate:

- **Power On/Off:** Locate the control knob or buttons on the fan head. Turn the knob or press the power button to turn the fan on or off.

- **Speed Settings:** The fan features three quiet speeds. Adjust the control knob or press the speed button repeatedly to cycle through Low, Medium, and High settings.
- **Oscillation:** To activate the oscillation feature, push down the oscillation knob located on top of the motor housing. The fan head will then sweep from side to side, distributing air over a wider area. To stop oscillation, pull the knob up.
- **Tilt Adjustment:** The fan head can be tilted up or down to direct airflow. Gently push or pull the fan head to the desired angle.

MAINTENANCE

Regular cleaning and proper storage will ensure the longevity and efficient operation of your fan.

- **Cleaning:**

- Always unplug the fan from the power outlet before cleaning.
- Use a soft, damp cloth to clean the exterior surfaces of the fan.
- Do not use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the fan.
- For dust accumulation on the grilles, use a vacuum cleaner with a brush attachment to gently remove dust.
- The fan blades are not designed to be easily removed for cleaning. Do not attempt to disassemble the fan head beyond what is necessary for basic cleaning.

- **Storage:**

- When not in use, store the fan in a cool, dry place.
- It is recommended to store the fan in its original carton or cover it to protect it from dust.

TROUBLESHOOTING

If your fan is not operating as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Fan does not operate.	No power to the fan.	Ensure the fan is plugged into a working electrical outlet. Check the household fuse/circuit breaker.
Fan suddenly stops.	Overheating or tripped safety fuse.	Unplug the fan immediately. Wait 10 minutes for the motor to cool down. If the fan has a fused safety plug, check the fuse and replace if necessary (refer to plug instructions). Ensure there is no obstruction to airflow.
Fan is noisy.	Loose parts or dust accumulation.	Check that all assembly screws are tight. Clean the fan grilles and blades to remove any dust or debris. Ensure the fan is on a stable, level surface.
Oscillation not working.	Oscillation knob not engaged.	Push down the oscillation knob firmly on top of the motor housing.

SPECIFICATIONS

Brand	Lasko
-------	-------

Model Number	S16200
Fan Type	Oscillating Stand Fan / Pedestal Fan
Blade Diameter	16 Inches
Number of Blades	3
Blade Material	Plastic
Speeds	3 (Low, Medium, High)
Special Features	Oscillating, Adjustable Height, Tilt-back feature
Power Source	Corded Electric
Item Weight	Approximately 7.43 pounds (3.37 kg)
Recommended Use	Air Circulation for Living Room, Bedroom

WARRANTY AND SUPPORT

Lasko products are manufactured with quality materials and craftsmanship. For information regarding warranty coverage, product registration, or technical support, please visit the official Lasko website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may visit the Lasko Store on Amazon: [Lasko Official Store](#)