

[Manuals.plus](#) /

› [URPOWER](#) /

› URPOWER Essential Oil Diffuser User Manual

URPOWER OD-101

URPOWER Essential Oil Diffuser User Manual

Model: OD-101
Brand: URPOWER

INTRODUCTION

The URPOWER 2nd Version Essential Oil Diffuser is an upgraded ultrasonic aroma diffuser designed to enhance your home or office environment. It features adjustable mist modes, waterless auto shut-off for safety, and 7 color LED lights to create a soothing ambiance. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

PRODUCT FEATURES

- **Enhanced Mist Output:** The 2nd generation model produces more mist compared to previous versions, effectively adding moisture and fragrance to small bedrooms, hotel rooms, tabletops, and workplace cubicles.
- **Ultrasonic Technology:** Utilizes ultrasonic technology to diffuse essential oils without heating, preserving the therapeutic properties of the oils. Safe for use with 100% pure essential oils.
- **Adjustable Mist Settings:** Offers two mist settings: continuous and intermittent (30 seconds on, 30 seconds off), allowing you to control the intensity and duration of diffusion.
- **Waterless Auto Shut-Off:** Automatically turns off when the water level is low or runs out, protecting the device and ensuring safety.
- **7 Color LED Lights:** Features 7 color-changing LED lights that can cycle automatically or be set to a single preferred color. Can also function as a nightlight.
- **Whisper-Quiet Operation:** Designed for quiet operation, ensuring it does not interfere with sleep or work.

PACKAGE CONTENTS



- 1x carton
- 1x Aroma Diffuser
- 1x Charger Adaptor
- 1x User Manual

Image: Package contents showing the diffuser, user manual, charger adapter, and carton.

- 1x URPOWER Essential Oil Diffuser (Model: OD-101)
- 1x Charger Adapter
- 1x User Manual

SPECIFICATIONS

Brand	URPOWER
Model Name	2nd Version Essential Oil Diffuser
Capacity	100 Milliliters

Material	PP Hard plastic
Working Time	Up to 6 hours (continuous mode)
Auto Shutoff	Yes (when water runs out)
Light Source Type	LED (7 colors)
Product Dimensions	3.1"L x 3.1"W x 5.5"H
Item Weight	4.9 ounces



"Mist" Button:

- ✿ Press mist button to turn on the diffuser
- ✿ Press mist button again to change mist setting

"Light" Button:

- ✿ Press light button to turn on LED light,color changes automatically
- ✿ Press light button once again to change LED color manually

Image: Product dimensions and button labels for Mist and Light functions.

SETUP AND INSTALLATION

1. **Unpack:** Carefully remove the URPOWER Essential Oil Diffuser and all accessories from its packaging.
2. **Placement:** Place the diffuser on a flat, stable surface away from direct sunlight, heat sources, and electronic devices.
3. **Open Lid:** Gently lift the top cover of the diffuser. The 2nd version features an upgraded design without buckles for easier opening.



Image: Comparison of old and new diffuser lid designs, showing the new version is easier to open.

4. **Add Water:** Fill the water tank with clean tap water up to the maximum water line (100ml). Do not exceed the MAX line, as this may prevent mist production.



Image: Step 1 of maintenance, showing adding a small amount of water to the diffuser.

5. **Add Essential Oil:** Add 2-3 drops of your favorite 100% pure essential oil directly into the water tank. Adjust the number of drops based on desired fragrance intensity. Avoid essential oils with corrosivity.
6. **Close Lid:** Replace the top cover securely.
7. **Connect Power:** Plug the power adapter into the diffuser's power input, then plug the adapter into a standard electrical outlet. Ensure the outlet voltage does not exceed the maximum voltage specified for the device.

OPERATION

The diffuser features two control buttons: **MIST** and **LIGHT**.

Mist Control:

- Press the **MIST** button once to turn on the diffuser in **continuous mist mode**. The indicator light will be **red**. In this mode, the diffuser will run for approximately 3 hours.
- Press the **MIST** button a second time to switch to **intermittent mist mode** (30 seconds on, 30 seconds off). The indicator light will be **green**. In this mode, the diffuser can run for up to 6 hours.
- Press the **MIST** button a third time to turn off the mist function.



Red light

Continuous Mode

Mist continuously ✿
3 hours working time ✿



Green light

Intermittent Mode

Intermittent mist ✿
(30 seconds on and off)
6 hours working time ✿

Image: Mist settings indicated by red (continuous) and green (intermittent) lights.

Light Control:


- Press the **LIGHT** button once to turn on the LED lights. The lights will automatically cycle through 7 colors.
- Press the **LIGHT** button again to pause the color cycle and set the light to its current color.
- Continue pressing the **LIGHT** button to cycle through the individual colors.
- Press and hold the **LIGHT** button for 2 seconds to turn off the lights.

7 LED MOOD LIGHTS

Auto Color Changing



Adjustable Brightness
between Bright & Dim

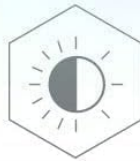

Select between 7 soothing
colors, to match your mood
or décor of the room .

Image: The diffuser showcasing its 7 LED mood light options.



Image: The URPOWER diffuser with its light on, highlighting the control buttons.

Regular cleaning of your diffuser is essential to ensure optimal performance and extend its lifespan. It is recommended to clean the diffuser after every 5-6 uses or every 3-5 days, especially when changing essential oils.

1. **Disconnect Power:** Always unplug the diffuser from the power outlet before cleaning.
2. **Empty Water:** Remove the top cover and carefully pour out any remaining water from the water tank. Ensure water is poured from the side opposite the air outlet to avoid damaging internal components.



Image: Steps for cleaning the diffuser, including pouring out water and wiping with a soft brush.

3. **Wipe Clean:** Use a soft cloth or cotton swab to wipe the inside of the water tank and the ultrasonic vibration plate. For stubborn residue, add a small amount of white vinegar (about 1 teaspoon) to the tank, let it sit for 5-10 minutes, then drain and wipe clean.
4. **Dry Thoroughly:** Allow all parts to air dry completely before reassembling or storing the diffuser.

Important Note: Do not use corrosive cleaners or harsh chemicals, as they can damage the diffuser. Do not immerse the base unit in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output.	Insufficient water in the tank. Water level exceeds MAX line. Ultrasonic plate is dirty. Lid not properly closed.	Add water to the tank, ensuring it is below the MAX line. Empty excess water if above MAX line. Clean the ultrasonic plate as per maintenance instructions. Ensure the top cover is securely placed.
No power.	Power adapter not connected. No power from outlet.	Check if the power adapter is securely plugged into both the diffuser and the wall outlet. Test the outlet with another device.

Weak or no scent.	Not enough essential oil added. Poor quality essential oil. Room size too large.	Add a few more drops of essential oil. Use 100% pure essential oils. Consider using multiple diffusers for larger spaces.
-------------------	--	---

Safety Information and Precautions

- Always place the diffuser on a stable, level surface.
- Do not move the diffuser while it is operating or contains water.
- Do not touch the ultrasonic vibration plate directly with your hands.
- Keep out of reach of children and pets.
- Avoid direct skin contact with undiluted essential oils.
- Ensure proper ventilation during use.
- Only use the original power adapter provided with the device.
- Do not disassemble or attempt to repair the unit yourself. Contact customer support for assistance.
- Do not block the mist outlet.
- Unplug the device when not in use or before cleaning.

© 2024 URPOWER. All rights reserved.

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

