

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER WP-8831H Screen Clips with Screws Instruction Manual

BLACK+DECKER WP-8831H

BLACK+DECKER WP-8831H Screen Clips with Screws Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the proper installation, operation, and maintenance of your BLACK+DECKER WP-8831H Screen Clips with Screws. Please read this manual thoroughly before beginning installation to ensure safe and effective use of the product. Retain this manual for future reference.

PRODUCT OVERVIEW

The BLACK+DECKER WP-8831H Screen Clips are designed to securely hold screens in place. Made from durable nylon and supplied with screws, these brown clips offer a reliable solution for various household screening needs. This pack contains 50 clips and accompanying screws.

- **Sturdy and Secure Construction:** Engineered for reliable screen retention.
- **High Quality Product:** Manufactured from durable nylon material.
- **Versatile Use:** Suitable for various household screening applications.



Figure 1: An individual brown screen clip, made of nylon, shown alongside a silver screw. The clip features a small hole for screw insertion and a spring-like mechanism to hold the screen frame.

SETUP AND INSTALLATION

Follow these steps to properly install the screen clips:

1. **Gather Tools:** You will need a screwdriver (appropriate for the provided screws) and potentially a drill with a small bit for pre-drilling pilot holes, especially if installing into hard materials.
2. **Position the Screen:** Place the screen frame into its desired opening. Ensure it is flush and properly aligned.
3. **Mark Clip Locations:** Determine the optimal placement for the clips around the screen frame. Typically, clips are placed at regular intervals, usually two on each side for smaller screens, or more for larger screens, ensuring even pressure. Mark the screw hole location for each clip on the frame or wall.
4. **Pre-Drill (Optional but Recommended):** If installing into wood or metal, pre-drilling a small pilot hole can prevent splitting and make screw insertion easier. Ensure the pilot hole is smaller than the screw's diameter.
5. **Attach the Clips:** Align each clip with its marked location. Insert a screw through the clip's designated hole and fasten it securely using the screwdriver. Do not overtighten, as this can damage the clip or the mounting surface.
6. **Test Security:** Gently push on the screen frame to ensure it is held firmly in place by the installed clips. Adjust clip positions or add more clips if the screen feels loose.

OPERATING

Once installed, the BLACK+DECKER WP-8831H Screen Clips function by holding the screen frame securely against the window or door frame. To remove the screen, gently pull the screen frame away from the clips. The flexible design of the nylon clips allows for temporary screen removal when needed, such as for cleaning or storage.

MAINTENANCE

Regular maintenance ensures the longevity and effectiveness of your screen clips:

- **Cleaning:** Periodically wipe the clips with a damp cloth to remove dust and dirt. Avoid harsh chemical cleaners that may degrade the nylon material.
- **Inspection:** Regularly check the clips for any signs of wear, cracking, or damage. Ensure screws remain tight.
- **Replacement:** If a clip becomes damaged or loses its holding strength, replace it immediately with a new BLACK+DECKER WP-8831H Screen Clip to maintain screen security.

TROUBLESHOOTING

Here are some common issues and their solutions:

- **Screen is Loose:**
 - Check if all clips are securely fastened. Tighten any loose screws.
 - Ensure clips are properly aligned with the screen frame.
 - If the screen is still loose, consider adding more clips for increased stability.
- **Clip is Damaged:**

- If a clip is cracked or broken, it needs to be replaced. Remove the old clip and install a new one following the "Setup and Installation" instructions.
- **Screw Will Not Tighten:**
 - If the screw spins freely, the pilot hole may be too large, or the material is stripped. Try using a slightly larger screw (if safe for the clip) or relocate the clip to a new position.

SPECIFICATIONS

Attribute	Detail
Brand	BLACK+DECKER (Manufactured by World & Main)
Model Number	WP-8831H
Part Number	WP-8831H
Material	Nylon
Color	Brown
Item Weight	3.36 ounces
Product Dimensions	6 x 4 x 7 inches (Packaging)
Item Package Quantity	1 (containing 50 clips and screws)

WARRANTY AND SUPPORT

For specific warranty information or product support, please refer to the original purchase documentation or visit the official BLACK+DECKER website. You may also contact the retailer where the product was purchased for assistance.

Online Support: [Visit the BLACK+DECKER Store on Amazon](#)