 


[Manuals.plus](#) /

› [GE](#) /

› GE WD28X10410 Upper Dishrack Instruction Manual

GE WD28X10410



GE WD28X10410 Upper Dishrack Instruction Manual

Model: WD28X10410

INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of the GE WD28X10410 Upper Dishrack. This is an O.E.M. authorized replacement part designed to fit various GE dishwasher models. Please read these instructions carefully before proceeding with installation or use.

SAFETY INFORMATION

Always prioritize safety when working with appliances. Disconnect power to the dishwasher before attempting any installation or maintenance. Wear appropriate personal protective equipment, such as gloves, to prevent injury. Keep small parts away from children. If you are unsure about any step, consult a qualified technician.

WHAT'S IN THE BOX

- GE WD28X10410 Upper Dishrack Assembly
- Appliance Parts & Accessories (general category, specific items not detailed)

Inspect all components upon receipt to ensure they are intact and undamaged.

INSTALLATION INSTRUCTIONS

Before beginning, ensure the replacement part is compatible with your specific dishwasher model. Many replacement parts may appear similar but are not interchangeable. Verify your dishwasher's model number before proceeding.

Does your part fit?



Many replacement parts
look the same
but won't fit your model.

Don't be fooled!

Check your
model number
before you buy.

Image: A stop sign graphic emphasizing the importance of checking the model number for part compatibility.

1. **Preparation:** Disconnect the dishwasher from its power supply. Open the dishwasher door and remove the lower dishrack.
2. **Remove Old Upper Dishrack:** Carefully detach the existing upper dishrack. Note how the water supply tubing (spray arm assembly) is connected to the old rack. It is recommended to take photos of the connections for reference. Keep any fasteners or clips from the old rack, as they may be needed for the new installation.
3. **Transfer Components:** Transfer the spray arm assembly and any necessary fasteners or clips from the old dishrack to the new GE WD28X10410 Upper Dishrack. Ensure all connections are secure.
4. **Install New Upper Dishrack:** Slide the new upper dishrack into the dishwasher tracks. Ensure it moves smoothly and is properly seated. Reconnect the water supply tubing to the spray arm assembly on the new rack, using your reference photos if needed.
5. **Test Functionality:** Gently pull and push the rack to ensure it slides correctly. Reconnect the dishwasher to its power supply. Run a short cycle without dishes to check for proper water spray and drainage.



Image: The GE WD28X10410 Upper Dishrack, showing its design and structure.

Installation typically takes approximately 15 minutes. If you encounter difficulties, refer to your dishwasher's main instruction manual or contact GE customer support.

OPERATING THE DISHRACK

The upper dishrack is designed to hold smaller items such as glasses, cups, saucers, and small plates. Ensure items are placed securely to prevent them from falling or obstructing the spray arms during the wash cycle. Avoid overloading the rack, as this can hinder proper cleaning and water circulation.

- Place glasses and cups upside down.
- Position bowls and small plates at an angle for better water access.
- Ensure no items protrude below the rack, which could block the spray arm.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your upper dishrack, follow these maintenance guidelines:

- **Regular Cleaning:** Periodically wipe down the dishrack with a damp cloth to remove any food residue or mineral deposits.
- **Inspect for Damage:** Check for any signs of wear, cracks, or broken tines. Replace the dishrack if significant damage is observed to prevent potential issues with dishwashing performance or damage to other dishes.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals on the dishrack, as these can damage the coating or material.

TROUBLESHOOTING

If you encounter issues with your GE WD28X10410 Upper Dishrack, consider the following:

- **Rack Not Sliding Smoothly:** Check the roller wheels on the rack and the tracks inside the dishwasher for any obstructions or damage. Ensure the rack is properly aligned on the tracks.
- **Poor Cleaning Performance:** Verify that dishes are loaded correctly and not obstructing the spray arm. Ensure the spray arm itself is clean and free of debris (as noted in a customer review, debris in the spray arm can significantly impact cleaning).
- **Rack Damage:** If the rack arrives with broken pieces or becomes damaged during use, contact GE customer support for assistance.

SPECIFICATIONS

Brand Name	GE
Model Info	WD28X10410
Item Weight	1 pounds
Product Dimensions	7 x 7 x 7 inches
Part Number	WD28X10410
First Available	November 28, 2013

WARRANTY AND SUPPORT

For warranty information regarding the GE WD28X10410 Upper Dishrack, please refer to the official GE Appliances website or contact GE customer service directly. Specific warranty terms may vary.

For technical support or further assistance, please visit the official GE Appliances support page or contact their customer service department. Always provide your product model number (WD28X10410) when seeking support.

GE Appliances Official Website: www.geappliances.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00Y5V05F0>

More documents and user manuals: <https://manuals.plus/>