

[Manuals.plus](#) /

› [Russell Hobbs](#) /

› Russell Hobbs RJK1000S 1 Litre Electric Kettle User Manual

Russell Hobbs RJK1000S

Russell Hobbs RJK1000S 1 Litre Electric Kettle User Manual

Model: RJK1000S | Brand: Russell Hobbs

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The kettle must only be used with the stand provided.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

PRODUCT OVERVIEW

The Russell Hobbs RJK1000S electric kettle is designed for efficient water boiling with safety features. It features a stainless steel body, a comfortable handle, and a power base.



Image: The Russell Hobbs RJK1000S electric kettle, showcasing its stainless steel body and black handle on a kitchen counter.

Key Components:

- **Kettle Body:** Stainless steel construction with a 1-litre capacity.
- **Lid:** Lockable lid for secure pouring and safety.
- **Handle:** Ergonomically designed for comfortable grip.
- **Power Switch:** On/off switch with an indicator light.
- **Power Base:** 360-degree rotational base for easy placement.
- **Spout:** Designed for controlled pouring.

BEFORE FIRST USE

Before using your new Russell Hobbs RJK1000S electric kettle for the first time, it is recommended to clean it thoroughly.

1. Fill the kettle with clean water up to the maximum fill line.
2. Boil the water.
3. Discard the boiled water.
4. Repeat this process two to three times to remove any manufacturing residues.

SETUP

Setting up your electric kettle is straightforward.

1. Place the power base on a stable, flat, and dry surface.
2. Ensure the power cord is not dangling where it can be tripped over or pulled by children.
3. Plug the power base into a suitable wall outlet.
4. Place the kettle securely onto the power base.

OPERATING INSTRUCTIONS

Follow these steps to safely operate your Russell Hobbs RJK1000S electric kettle.

1. **Fill the Kettle:** Remove the kettle from its base. Open the lid and fill with the desired amount of fresh water. Do not fill below the minimum mark or above the maximum mark.
2. **Close the Lid:** Ensure the lid is securely closed before placing the kettle back on its base.
3. **Place on Base:** Position the kettle firmly on the power base.
4. **Switch On:** Press the power switch down. The indicator light will illuminate, showing that the kettle is heating.
5. **Automatic Shut-Off:** The kettle will automatically switch off once the water has boiled. The indicator light will turn off.
6. **Pouring:** Carefully lift the kettle from the base and pour the hot water. Be cautious of steam escaping from the spout.
7. **Re-boiling:** If you need to re-boil, wait a few moments for the automatic shut-off mechanism to reset before pressing the switch again.



Image: Close-up view of the Russell Hobbs RJK1000S electric kettle's power switch and indicator light.

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your kettle.

Exterior Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure the power base and electrical connections remain dry.

Interior Cleaning and Descaling:

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. Descaling is recommended periodically.

1. Fill the kettle with a mixture of one part white vinegar and two parts water.
2. Bring the mixture to a boil and then let it stand for at least 30 minutes, or longer if the limescale is heavy.
3. Pour out the mixture and rinse the interior thoroughly with fresh water several times.
4. For stubborn deposits, a non-abrasive descaling solution designed for kettles can be used following the product's instructions.

Note: Never immerse the kettle body or power base in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your kettle, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; power switch not pressed; kettle not properly seated on base; power outage.	Check power connection; press power switch; ensure kettle is correctly placed on base; check household power supply.
Kettle switches off before boiling.	Kettle is underfilled; limescale buildup.	Ensure water level is above the minimum mark; descale the kettle.

Problem	Possible Cause	Solution
Water tastes unusual or has particles.	New kettle residue; limescale buildup.	Perform initial cleaning steps (boil and discard water several times); descale the kettle.
Kettle leaks.	Overfilled; lid not closed properly; damage to kettle.	Do not fill above the maximum mark; ensure lid is securely closed; if damaged, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Technical details for the Russell Hobbs RJK1000S Electric Kettle.

Model: RJK1000S

Capacity: 1 Litre

Wattage: 1350 W

Material: Stainless Steel (Body), Plastic (Handle/Base)

Special Features: Automatic Shut-Off, Boil Dry Protection, Lockable Lid, Wider Mouth

Power Supply: 220-240V ~ 50/60Hz (Assumed standard for region)

Dimensions: Approximately 32.52 cm (width) x 33.34 cm (height)



Image: Diagram showing the approximate dimensions of the Russell Hobbs RJK1000S electric kettle.

WARRANTY AND SUPPORT

Your Russell Hobbs RJK1000S Electric Kettle comes with a **2-year warranty** from the date of purchase.

This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

For warranty claims, technical support, or service inquiries, please contact Russell Hobbs customer service. Keep your purchase receipt as proof of purchase.

You can find contact information for Russell Hobbs customer support on their official website or through your retailer.

