

[manuals.plus](#) /› [Sami](#) /› [Sami RS-2929 AC/DC Portable 3-Band Radio Instruction Manual](#)

Sami RS-2929

Sami RS-2929 AC/DC Portable 3-Band Radio Instruction Manual

Model: RS-2929

1. INTRODUCTION

Thank you for purchasing the Sami RS-2929 Portable 3-Band Radio. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

Important Safety Information

- Do not expose the radio to rain or moisture to prevent fire or electric shock.
- Do not open the radio casing. Refer all servicing to qualified personnel.
- Avoid placing the radio near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Dispose of used batteries responsibly according to local regulations.

2. PRODUCT OVERVIEW

The Sami RS-2929 is a versatile portable radio featuring AM, SW, and FM bands, high-quality reception, and the flexibility of both AC and battery power. It includes a convenient hand strap and a headphone input for personal listening.



Figure 2.1: Front view of the Sami RS-2929 Portable 3-Band Radio, showing the speaker grille, tuning dial, band selector, volume control, and telescopic antenna.



RADIO A PILA Y CORRIENTE PORTÁTIL



RS-2929

Unidades por caja: 48 pzs.
Dimensiones: 180 x 95 x 40 mm

Sami audio

Figure 2.2: Sami RS-2929 Portable 3-Band Radio highlighting key features such as 3-band AM/FM/SW, high-quality reception, hand strap, headphone input, powerful sound, and AC/battery power options.

Controls and Components

- **Telescopic Antenna:** For improved FM and SW reception.
- **Tuning Dial:** To select desired radio frequencies.
- **Band Selector Switch:** To choose between AM, SW, and FM bands.
- **Volume Control:** To adjust the audio output level.
- **Speaker:** For audio output.
- **Headphone Input:** 3.5mm jack for private listening.
- **AC Power Input:** For connecting to mains power.
- **Battery Compartment:** For installing batteries.
- **Hand Strap:** For easy portability.

3. SETUP

3.1 Powering the Radio

The Sami RS-2929 radio can be powered by either AC mains electricity or batteries.

Battery Installation

1. Locate the battery compartment cover on the back or side of the radio.
2. Slide or unclip the cover to open the compartment.
3. Insert two (2) 'UM-1' (D-size) batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment. (Batteries are not included).
4. Close the battery compartment cover securely.

AC Power Connection

1. Ensure the radio is switched off.
2. Connect the AC power cord (not included, if applicable) to the AC power input jack on the radio.
3. Plug the other end of the AC power cord into a standard wall outlet.
4. When using AC power, the batteries are automatically disconnected. Remove batteries if the radio will be unused for an extended period while connected to AC power.

4. OPERATION

4.1 Powering On/Off

Rotate the Volume Control knob clockwise to turn the radio on. Rotate it counter-clockwise until it clicks to turn the radio off.

4.2 Band Selection

Slide the Band Selector switch to choose your desired frequency band: AM, SW (Shortwave), or FM.

4.3 Tuning to a Station

1. Extend the telescopic antenna fully for optimal FM and SW reception. For AM, the internal antenna is usually sufficient, but rotating the radio may improve reception.
2. Slowly rotate the Tuning Dial to scan through the frequencies.
3. Stop rotating when you hear your desired station clearly. Fine-tune for the best reception.

4.4 Volume Adjustment

Adjust the Volume Control knob to increase or decrease the sound level to your preference.

4.5 Using Headphones

To listen privately, plug a standard 3.5mm stereo headphone jack into the Headphone Input. The radio's speaker will automatically mute when headphones are connected.

5. MAINTENANCE

5.1 Cleaning

- Wipe the exterior of the radio with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

5.2 Storage

- If the radio will not be used for an extended period, remove the batteries to prevent leakage and

corrosion.

- Store the radio in a cool, dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter any issues with your Sami RS-2929 radio, please refer to the following common problems and solutions:

- **No Power:**

- Check if batteries are inserted correctly with the right polarity.
- Replace old or depleted batteries with new ones.
- If using AC power, ensure the power cord is securely plugged into both the radio and the wall outlet.
- Verify the wall outlet is functional.

- **Poor Reception / Static:**

- Fully extend and adjust the telescopic antenna for FM and SW bands.
- Rotate the radio for better AM reception.
- Try moving the radio to a different location, away from potential interference sources (e.g., computers, TVs, large metal objects).
- Fine-tune the tuning dial slowly for clearer reception.

- **No Sound from Speaker (Headphones not connected):**

- Ensure the volume is turned up.
- Check if headphones are accidentally plugged in.
- Verify the radio is powered on and tuned to a station.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Brand	Sami
Model	RS-2929 (also known as 639)
Color	Silver
Radio Bands	AM, SW, FM (3-band)
Tuner Technology	Analog
Power Source	AC (Mains) / Battery (2 x 'UM-1' / D-size, not included)
Special Feature	Portable
Connectivity Technology	Auxiliary (Headphone Output)
Compatible Devices	Headphones, (Auxiliary input for Smartphone, MP3 player, Laptop - if an Aux-in port is present, otherwise refers to headphone output)

Dimensions (approx.)	180 x 95 x 40 mm
Global Trade Item Number (GTIN)	08435128416730

8. WARRANTY AND SUPPORT

The Sami RS-2929 radio comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact your retailer or the Sami customer service department. Contact information can typically be found on the product packaging or the manufacturer's official website.

© 2023 Sami. All rights reserved.