

Acctim UTST6165_1

Acctim Palma Beep Beep Alarm Clock - Instruction Manual

Model: UTST6165_1

1. INTRODUCTION

Thank you for purchasing the Acctim Palma Beep Beep Alarm Clock. This manual provides important information regarding the setup, operation, and maintenance of your new alarm clock. Please read it thoroughly before use and keep it for future reference. This alarm clock features a crisp design with a crescendo beep alarm, a backlight, and luminous hands for easy time-telling in the dark.

2. SAFETY INFORMATION

WARNING: Please read all product packaging literature and product labels carefully before use to ensure safe operation. Failure to do so may result in damage to the product or personal injury.

- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Keep out of reach of small children.
- Do not attempt to disassemble or modify the clock. This will void the warranty.
- Dispose of batteries responsibly according to local regulations.

3. PRODUCT OVERVIEW

Key Features:

- Crescendo beep alarm with snooze function
- Luminous tipped hands for visibility in low light conditions
- Backlight for temporary illumination
- Accurate quartz movement
- Compact and classic design

Components:



Figure 3.1: Front view of the Acctim Palma alarm clock, showing the analog dial with numbers 1-12, hour, minute, and second hands, and the 'acctim' logo.



Figure 3.2: Back view of the alarm clock, illustrating the 'ALARM' setting knob, 'TIME' setting knob, 'ALM ON/OFF' switch, and the battery compartment.

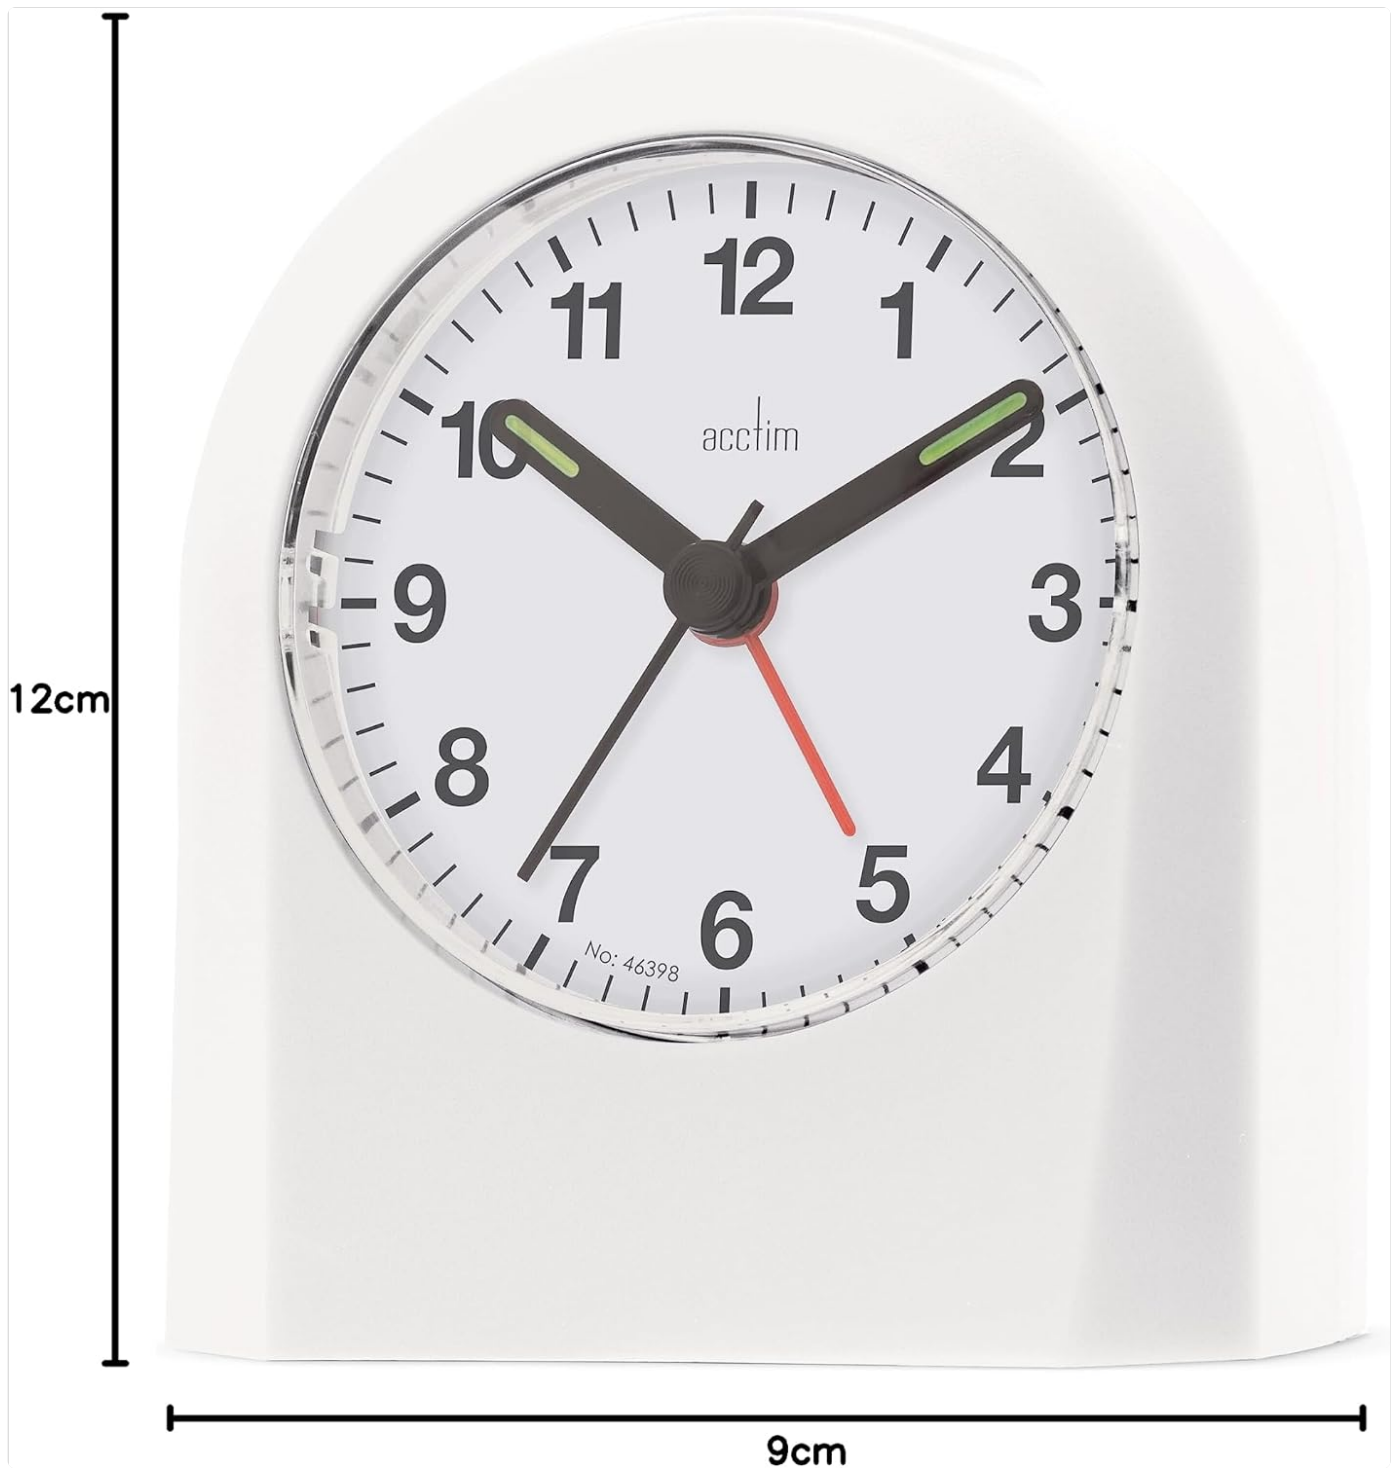


Figure 3.3: Front view of the alarm clock with approximate dimensions: 12cm height and 9cm width.

4. SETUP

4.1 Battery Installation:

1. Locate the battery compartment cover on the back of the clock (refer to Figure 3.2).
2. Slide the cover downwards to open the compartment.
3. Insert one AA battery (not included) into the compartment, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

4.2 Setting the Time:

1. Locate the "TIME" setting knob on the back of the clock (refer to Figure 3.2).

- 2. Rotate the "TIME" knob clockwise or counter-clockwise to set the current time. The hour and minute hands will move accordingly.
- 3. Ensure you set the correct AM/PM time if applicable, especially when setting the alarm.

5. OPERATING INSTRUCTIONS

5.1 Setting the Alarm:

- 1. Locate the "ALARM" setting knob on the back of the clock (refer to Figure 3.2).
- 2. Rotate the "ALARM" knob to set your desired alarm time. The small alarm hand on the dial will move.
- 3. Ensure the "ALM ON/OFF" switch (refer to Figure 3.2) is in the "ON" position to activate the alarm.
- 4. The alarm will sound at the set time with a crescendo beep, gradually increasing in volume.

5.2 Using the Backlight:

To temporarily illuminate the clock face in the dark, press the button located on the top of the clock. The backlight will remain on as long as the button is pressed.

5.3 Snooze Function:

When the alarm sounds, press the button on the top of the clock to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes (typically 5-9 minutes, exact duration may vary). To turn off the alarm completely, slide the "ALM ON/OFF" switch to the "OFF" position.

6. MAINTENANCE

Cleaning:

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish.

Battery Replacement:

When the clock starts losing time or the alarm weakens, it is time to replace the battery. Follow the battery installation steps in Section 4.1.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Battery is dead or incorrectly installed.	Check battery polarity or replace with a new AA battery.
Alarm not sounding	Alarm switch is OFF; Alarm time not set correctly; Battery is low.	Ensure "ALM ON/OFF" switch is ON. Re-set alarm time. Replace battery.
Backlight not working	Battery is low or dead.	Replace battery.

8. SPECIFICATIONS

Attribute	Detail
Brand	Acctim

Attribute	Detail
Model Number	UTST6165_1
Color	White
Product Dimensions (L x W x H)	7.8 x 3.81 x 9 cm
Weight	40 g
Material	Plastic
Display Type	Analog
Power Source	Battery (1x AA, not included)
Special Features	Crescendo Alarm, Luminous Hands, Backlight, Quartz Movement

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Acctim website. Keep your purchase receipt as proof of purchase.

Acctim Official Website: www.acctim.com (Note: This is a placeholder URL as no specific support link was provided in the input data.)

© 2024 Acctim. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question