

[Manuals.plus](#) /

› [De'Longhi](#) /

› De'Longhi FH1163 MultiFry Low Oil Fryer Air Fryer and Multi Cooker Instruction Manual

De'Longhi FH1163

De'Longhi FH1163 MultiFry Low Oil Fryer and Multi Cooker Instruction Manual

Model: FH1163

INTRODUCTION

The De'Longhi FH1163 MultiFry is an innovative cooking appliance designed for low-oil frying and multi-cooking. It utilizes the exclusive SCS (Surround Cooking System) technology to ensure even heat distribution for optimal cooking results. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the main components of your De'Longhi MultiFry FH1163.



Figure 1: De'Longhi FH1163 MultiFry with French fries cooking inside. This image shows the appliance from a top-down angle, highlighting the transparent lid and the food basket.



Figure 2: Side view of the De'Longhi FH1163 MultiFry. This image displays the overall compact design of the appliance.



Figure 3: Disassembled components of the De'Longhi FH1163 MultiFry, including the removable bowl, mixing paddle, and transparent lid. This illustrates the ease of cleaning and assembly.



Figure 4: Close-up of the control panel on the De'Longhi FH1163 MultiFry, showing the power level dial and other indicators.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the appliance.
2. **Cleaning:** Before first use, wash the lid, mixing paddle, and cooking bowl with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the MultiFry on a stable, heat-resistant, and level surface, away from walls or other appliances to ensure proper ventilation.
4. **Assembly:**
 - Insert the cooking bowl into the main unit.
 - Attach the mixing paddle if required for your recipe (e.g., for fries). The paddle fits onto a central pin in the bowl.
 - Close the transparent lid securely.
5. **Power Connection:** Ensure the appliance is switched off before plugging it into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The De'Longhi MultiFry offers versatile cooking options. Follow these steps for general operation.

General Cooking Procedure:

1. **Prepare Food:** Place your ingredients into the cooking bowl. Add a small amount of oil if the recipe requires it.
2. **Close Lid:** Ensure the transparent lid is securely closed.
3. **Select Power Level:** Use the power level dial (refer to Figure 4) to select the desired heat setting (1-4).
 - Level 1: Approximately 300°F (150°C)
 - Level 2: Approximately 340°F (170°C)
 - Level 3: Approximately 360°F (180°C)
 - Level 4: Approximately 370°F (185°C)
4. **Activate Heating Elements:** Press the power button to turn on the appliance. If your recipe requires bottom heating (e.g., for baking or specific frying), press the lower element button.
5. **Set Timer:** Use the removable timer to monitor cooking time. The timer does not automatically turn off the appliance.
6. **Monitor Cooking:** The transparent lid allows you to monitor the cooking process without opening the appliance. If using the mixing paddle, it will automatically stir the food.
7. **Finish Cooking:** Once cooking is complete, turn the power level dial to "off" and unplug the appliance. Carefully open the lid and remove the cooked food.

Using the Mixing Paddle:

The removable mixing paddle is ideal for dishes that require constant stirring, such as French fries or roasted vegetables. To install, align the paddle with the central pin in the cooking bowl and press down until it clicks into place. To remove, pull it straight up from the pin after the appliance has cooled.

Cooking without the Mixing Paddle:

For delicate foods, baking, or dishes that do not require stirring (e.g., pizza, cakes, fish fillets), remove the mixing paddle before placing food in the bowl. This allows for a flat cooking surface.

Video Demonstration:

Your browser does not support the video tag.

Video 1: Official product video demonstrating the De'Longhi FH1163 MultiFry in operation, showcasing its features and cooking capabilities. This video provides a visual guide to using the appliance.

CARE AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your MultiFry.

1. **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Removable Parts:** The lid, mixing paddle, and cooking bowl are removable and dishwasher safe. Alternatively, wash them by hand with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.

4. **Heating Elements:** Gently wipe the upper and lower heating elements with a dry cloth to remove any food residue. Do not use water or cleaning solutions directly on the heating elements.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store in a cool, dry place.

TROUBLESHOOTING GUIDE

Refer to this guide for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the lid is properly closed and the bowl is correctly inserted.
Food not cooking evenly.	Overfilling the bowl; mixing paddle not used (for stir-fry items); incorrect temperature setting.	Do not overfill the cooking bowl. Ensure the mixing paddle is installed for foods requiring stirring. Adjust the power level as per recipe recommendations.
Smoke coming from the appliance.	Excess oil or food residue; food burning.	Unplug immediately. Allow to cool and clean thoroughly. Use less oil. Reduce cooking time or temperature.
Lid not closing properly.	Obstruction; parts not aligned.	Check for any food particles or foreign objects preventing the lid from closing. Ensure the cooking bowl is correctly seated.

If the problem persists after attempting these solutions, please contact customer support.

TECHNICAL SPECIFICATIONS

- **Model:** FH1163
- **Brand:** De'Longhi
- **Capacity:** 3.3 Pounds
- **Output Wattage:** 1500 Watts
- **Voltage:** 110 Volts
- **Control Method:** Touch (for power), Dial (for temperature)
- **Special Features:** Innovative Heating System (SCS), Removable Mixing Paddle
- **Dishwasher Safe Parts:** Lid, Paddle, Bowl
- **Material:** Plastic (Inner/Outer)
- **Item Weight:** 11.16 Pounds

WARRANTY INFORMATION

De'Longhi products are manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official De'Longhi website. Keep your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

For assistance, product registration, or to find authorized service centers, please visit the De'Longhi website or contact their customer service department. Contact information can typically be found in the packaging or on the official brand website.

Online Support: www.delonghi.com

