

[Manuals.plus](#) /

> [De'Longhi](#) /

> De'Longhi Magnifica Smart Espresso & Cappuccino Maker User Manual

De'Longhi ECAM23260SB

De'Longhi Magnifica Smart Espresso & Cappuccino Maker

Model: ECAM23260SB

Brand: De'Longhi

PRODUCT OVERVIEW

The De'Longhi Magnifica Smart Espresso & Cappuccino Maker is a fully automatic coffee machine designed to deliver barista-quality beverages at home. It features an intuitive control panel, integrated grinder, and the LatteCrema System for perfect milk foam.



Image: De'Longhi Magnifica Smart Espresso & Cappuccino Maker in black, with a glass of layered coffee.

Key Features

- **Integrated Stainless Steel Burr Grinder:** Features 13 adjustable settings for whole beans, plus a second chamber for pre-ground coffee.
- **LatteCrema System:** Automatically froths milk to create rich, long-lasting foam for cappuccinos and lattes.
- **Intuitive Control Panel:** Rotary knob with icons display for easy selection and brewing.
- **Double Shot Feature:** Brews two espressos simultaneously or larger single servings (8 oz Lungos/Drip Style Coffee, double-sized Cappuccinos/Lattes).
- **60 oz Water Tank:** Equipped with a water level indicator and filtration system.
- **Easy Maintenance:** Designed for minimal cleaning time compared to other brands, with automatic cleaning cycles.



Image: Banner displaying the De'Longhi logo and the text "Espresso Made Right" alongside various coffee beverages.

SETUP

1. Unpacking

1. Remove all packaging materials from the machine and its components.
2. Place the machine on a stable, flat surface.
3. Ensure all accessories are present: water tank, drip tray, milk carafe, cleaning brush, and measuring scoop.

2. Initial Cleaning

1. Wash the water tank, drip tray, and milk carafe with warm water and mild detergent. Rinse thoroughly.
2. Wipe the exterior of the machine with a damp cloth.

3. First Use

1. Fill the water tank with fresh cold water up to the MAX level. Insert it back into the machine.
2. Plug the machine into a power outlet.
3. Place a container under the coffee spouts.
4. Turn on the machine using the power button. The machine will perform an automatic rinse cycle.
5. Once the rinse cycle is complete and the indicator lights stabilize, the machine is ready for use.

OPERATING INSTRUCTIONS

Control Panel Overview

Icon	Function
Power Button	Turns the machine On/Off.
Select Drink Knob	Rotates to select desired coffee type (Espresso, Lungo, Coffee, Cappuccino, Latte).
Brew Button	Starts the brewing process for the selected drink.
2x Button	Activates the double shot function for two espressos or larger drinks.
Coffee Bean Icon	Indicates whole bean coffee selection.
Pre-Ground Coffee Icon	Indicates pre-ground coffee selection.
Water Tank Empty Icon	Indicates the water tank needs refilling.
Descaling Icon	Indicates the machine needs descaling.

Brewing Espresso

1. Ensure the water tank is filled and coffee beans are in the hopper.
2. Place a cup under the coffee spouts.
3. Rotate the 'Select Drink' knob to the Espresso icon.
4. Press the 'Brew' button. The machine will grind the beans and brew your espresso.

Brewing Lungo

1. Follow steps 1 and 2 for brewing Espresso.
2. Rotate the 'Select Drink' knob to the Lungo icon.
3. Press the 'Brew' button.

Brewing Drip Style Coffee

1. Follow steps 1 and 2 for brewing Espresso.
2. Rotate the 'Select Drink' knob to the Drip Style Coffee icon.
3. Press the 'Brew' button.

Preparing Cappuccinos and Lattes (LatteCrema System)

1. Fill the milk carafe with fresh cold milk. Attach it to the machine.
2. Place a suitable cup under the coffee and milk spouts.
3. Rotate the 'Select Drink' knob to the Cappuccino or Latte icon.
4. Press the 'Brew' button. The machine will automatically froth the milk and then dispense the coffee.
5. After dispensing, the machine may prompt for milk carafe cleaning. Follow the on-screen instructions or refer to the maintenance section.

Using the 2x Function

The unique 2x function allows you to brew two espresso shots simultaneously or larger servings of other coffee types.

1. Place two cups under the coffee spouts for two espressos, or a larger mug for a double-sized lungo/drip coffee.
2. Select your desired drink using the 'Select Drink' knob.
3. Press the '2x' button. The corresponding icon will illuminate.
4. Press the 'Brew' button to start brewing.

Video: Official product video demonstrating the features and operation of the De'Longhi Magnifica Smart Espresso & Cappuccino Maker, including brewing various coffee types and using the LatteCrema system.

MAINTENANCE

Daily Cleaning

- Empty and rinse the drip tray daily.
- Wipe down the coffee spouts and exterior of the machine with a damp cloth.

Milk Carafe Cleaning

- After each milk-based drink, the machine will prompt for cleaning. Follow the instructions on the display.
- Regularly disassemble and thoroughly clean all components of the milk carafe with warm water and mild detergent.

Descaling

The machine will indicate when descaling is required (Descaling Icon illuminates). Regular descaling is crucial for optimal performance and longevity.

1. Use only De'Longhi descaling solution.
2. Follow the detailed instructions provided in the full user manual or on the descaling solution packaging.
3. The descaling process typically takes about 20 minutes.

Brew Unit Cleaning

The brew unit should be removed and rinsed under running water at least once a month.

1. Turn off and unplug the machine.
2. Open the brew unit access door (usually on the side).
3. Press the two red release buttons and pull the brew unit out.
4. Rinse thoroughly under tap water until no coffee residue is visible.
5. Allow to air dry completely before reinserting.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee is not hot enough.	Cups are cold; machine not preheated.	Preheat cups with hot water; allow machine to fully preheat.
No coffee is dispensed.	Water tank empty; brew unit clogged.	Refill water tank; clean brew unit.
Milk does not froth properly.	Milk carafe dirty; milk type unsuitable.	Clean milk carafe thoroughly; use fresh, cold dairy milk (skim milk often works best).
Machine is noisy during grinding.	Foreign object in grinder; beans too oily.	Contact customer support; use less oily beans.
Descaling light remains on.	Descaling cycle not completed correctly.	Repeat the descaling process ensuring all steps are followed.

SPECIFICATIONS

Feature	Detail
Brand	De'Longhi
Model Name	Magnifica Smart
Item Model Number	ECAM23260SB
Color	Black

Feature	Detail
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic
Water Tank Capacity	60 Ounces
Bean Container Capacity	8.8 oz
Grinder Settings	13 adjustable settings
Voltage	220 Volts
Item Weight	25.9 pounds
Product Dimensions	9.37 x 16.93 x 13.39 inches
Included Components	Removable Drip Tray, Removable Brew Unit, 8.8 oz bean container, 60 ounce water tank, De'Longhi ECAM23260SB Magnifica Smart Espresso & Cappuccino Maker, Black

WARRANTY AND SUPPORT

For assistance with setting up and maintaining your De'Longhi Magnifica Smart Espresso & Cappuccino Maker, please utilize De'Longhi's specialized call center.

- **Customer Support:** 866-528-8323 (LatteBest)
- **Warranty Information:** Warranties may not apply to purchases from an unauthorized retailer. Please retain your proof of purchase.

For the most comprehensive information, please refer to the official User Guide (PDF) or User Manual (PDF) available from De'Longhi or the retailer where the product was purchased.