

Nespresso A+C40-US-TI-NE

Nespresso Inissia Espresso Maker with Aeroccino Plus Milk Frother Instruction Manual

Model: A+C40-US-TI-NE

1. PRODUCT OVERVIEW

The Nespresso Inissia Espresso Maker with Aeroccino Plus Milk Frother offers a compact and efficient solution for preparing espresso and milk-based coffee beverages. This manual provides essential information for safe and effective use of your appliance.

TROUBLESHOOTING	
Aeroccino does not start	→ Make sure that the main ON-OFF switch is ON (specific to Aeroccino 3). → Make sure to position the jug correctly on a clean base. → Make sure to attach the whisk to the jug correctly.
Quality of milk froth not up to standard	→ Make sure to use whole or semi-skimmed milk at refrigerator temperature (about 6-8 °C) → Make sure to use the appropriate whisk → Make sure the jug is clean
Red Button blinking	→ The appliance is too hot. Rinse it under cool water
Milk Overflow	→ Make sure to use the appropriate whisk and check the corresponding indicator level

Figure 1: Nespresso Inissia Espresso Maker with its main components.

2. SETUP

- Unpacking:** Carefully remove all components from the packaging.
- Placement:** Place the machine on a flat, stable, and heat-resistant surface.
- Water Tank:** Fill the removable 24-ounce water tank with fresh drinking water. Ensure it is securely placed at the back of the machine.
- Power Connection:** Plug the power cord into a grounded electrical outlet.
- Initial Rinse:** Before first use, perform an initial rinse cycle without a capsule to clean the internal system. Fill the water tank, place a container under the coffee outlet, and press either the Espresso or Lungo button. Repeat this process 2-3 times.

3. OPERATING INSTRUCTIONS (ESPRESSO MAKER)

3.1 Brewing Espresso or Lungo

- Power On:** Press either the Espresso or Lungo button to turn on the machine. The buttons will blink while heating up (approximately 25 seconds). They will glow steadily when ready.
- Fill Water Tank:** Ensure the water tank is filled with fresh water.
- Insert Capsule:** Lift the handle, insert a Nespresso OriginalLine capsule, and close the handle firmly.
- Place Cup:** Place your desired cup under the coffee outlet. The folding cup tray can be adjusted for different cup sizes.
- Select Beverage:** Press the Espresso button for a short shot or the Lungo button for a longer shot. The machine will automatically stop when the programmed volume is reached.
- Eject Capsule:** After brewing, lift the handle to eject the used capsule into the internal container.

3.2 Programming Cup Volume

The machine features 2 programmable buttons for Espresso and Lungo preparation. To customize the volume:

- Start Brewing:** Insert a capsule and press the button you wish to program (Espresso or Lungo).
- Adjust Volume:** Keep the button pressed until the desired coffee volume is dispensed into your cup.
- Save Setting:** Release the button. The volume is now programmed for future use.

3.3 Video Demonstration: Nespresso Inissia Operation

Your browser does not support the video tag.

Video 1: Demonstration of Nespresso Inissia Espresso Machine operation, including capsule insertion and brewing.

Your browser does not support the video tag.

Video 2: Another demonstration of Nespresso Inissia brewing process.

4. OPERATING INSTRUCTIONS (AEROCCINO PLUS MILK FROTHER)

The Aeroccino Plus Milk Frother is designed for rapid one-touch preparation of hot or cold milk froth.

- Whisk Selection:** Use the appropriate whisk for your desired froth. The frothing whisk creates dense foam, while the stirring whisk creates hot milk without foam.
- Fill Milk:** Pour fresh, cold milk (whole or semi-skimmed, ideally 6-8°C) into the Aeroccino. Do not exceed the 'MAX' level indicator for frothing or the 'MAX MILK' indicator for hot milk.
- Hot Froth/Milk:** Press the button briefly (less than 1 second). The indicator light will turn red. The frother will automatically stop when ready.
- Cold Froth:** Press and hold the button for approximately 2 seconds. The indicator light will turn blue. The frother will automatically stop when ready.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your Nespresso machine and Aeroccino frother.

5.1 Espresso Machine Cleaning

1. **Daily Cleaning:** Empty and rinse the drip tray and used capsule container daily. Wipe the machine exterior with a damp cloth.
2. **Water Tank:** Clean the water tank regularly with mild detergent and rinse thoroughly.
3. **Descaling:** Descale the machine every 3 months or after 300 capsules, whichever comes first, using a Nespresso descaling kit. Follow the instructions provided with the kit.

5.2 Aeroccino Plus Cleaning

1. **After Each Use:** Immediately after each use, rinse the Aeroccino jug and whisk with cold water.
2. **Deep Cleaning:** Wash the jug, lid, and whisk with warm water and mild detergent. Do not immerse the base in water.

5.3 Video Demonstration: Cleaning the Nespresso Inissia

Your browser does not support the video tag.

Video 3: Demonstration of Nespresso Inissia cleaning process, including drip tray and capsule container.

6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.



Figure 2: Aeroccino Troubleshooting Guide.

7. SPECIFICATIONS

- **Brand:** Nespresso
- **Model Number:** A+C40-US-TI-NE
- **Color:** Titan
- **Coffee Maker Type:** Espresso Machine
- **Special Feature:** Drip Tray
- **Style:** Nespresso with Aeroccino Plus Milk Frother
- **Specific Uses For Product:** Cappuccino, Espresso, Latte
- **Included Components:** Milk Frother
- **Operation Mode:** Fully Automatic
- **Voltage:** 120 Volts
- **Number of Items:** 1
- **Human Interface Input:** Buttons
- **Unit Count:** 1.0 Count
- **Coffee Input Type:** Capsule
- **Product Dimensions:** 12.6 x 4.7 x 9 inches
- **Item Weight:** 6.9 pounds
- **Capacity:** 1.5 Pounds (Water Tank: 24 ounces)
- **Pressure Pump:** 19 Bar high pressure pump
- **Preheating Time:** 25 seconds
- **Energy Efficiency:** A Class energy rating; Automatic power off after 9 minutes of inactivity

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Nespresso website. Keep your proof of purchase for any warranty claims.