

Solwave MW1000T

Solwave Commercial Microwave Oven Instruction Manual

MODEL: MW1000T

Brand: Solwave

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Solwave MW1000T Commercial Microwave Oven. Please read this manual thoroughly before using the appliance and retain it for future reference.

SETUP AND INSTALLATION

Safety Precautions

- Ensure the microwave is placed on a stable, level surface.
- Do not operate the oven if it is damaged or malfunctioning.
- Maintain adequate ventilation around the unit. Do not block air vents.
- This appliance must be properly grounded.

Unpacking

Carefully remove the microwave oven from its packaging. Inspect the oven for any signs of damage during transit. Remove all packing materials from inside the oven cavity and from the turntable assembly.

Placement

Place the microwave oven on a flat, stable countertop or surface that can support its weight. Ensure there is at least 4

inches (10 cm) of clearance on the top, back, and sides for proper ventilation.

Electrical Requirements

The Solwave MW1000T operates on 120V, 60Hz, and requires a dedicated 15-amp circuit. Do not use extension cords or multi-outlet adapters. Consult a qualified electrician if you are unsure about your electrical supply.

OPERATING INSTRUCTIONS

Control Panel Overview

The Solwave MW1000T features a user-friendly push-button control panel for easy operation.



Image: Front view of the Solwave MW1000T Commercial Microwave Oven, showing the stainless steel exterior, door handle, and the digital display with push-button controls on the right side. The control panel includes a numeric keypad (0-9), dedicated function buttons (Hold, Defrost, Medium, Med-Hi, Time Entry), and Start/Stop buttons.

The control panel includes:

- **Digital Display:** Shows cooking time, power level, and program indicators.
- **Numeric Keypad (0-9):** Used to enter cooking times and program settings.
- **Pre-programmed Buttons:** Dedicated buttons for common power levels or functions (e.g., Hold 0%, Defrost 20%, Medium 50%, Med-Hi 70%).
- **Time Entry Button:** For manually setting cooking time.
- **Stop Button:** To cancel cooking or clear settings.
- **Start Button:** To begin cooking or a program.

Basic Microwave Cooking

1. Place food in a microwave-safe container inside the oven.
2. Close the oven door securely.
3. Press the 'Time Entry' button.
4. Use the numeric keypad to enter the desired cooking time (e.g., '1' '0' '0' for 1 minute 00 seconds).
5. Press the 'Start' button to begin cooking.

Using Pre-programmed Settings

The microwave features programmable settings for various power levels:

- **Hold 0%:** For holding food at a warm temperature without further cooking.
- **Defrost 20%:** For gentle defrosting of frozen items.
- **Medium 50%:** For cooking delicate foods or simmering.
- **Med-Hi 70%:** For general cooking and reheating.

To use a pre-programmed setting, simply press the corresponding button. The oven will automatically start cooking at the preset power level. You may need to enter a time after selecting the program, depending on the specific program's design.

Manual Defrost

For manual defrosting, place the frozen food in the oven. Select the 'Defrost 20%' button, then enter the desired defrosting time using the numeric keypad, and press 'Start'. Turn food over periodically for even defrosting.

CARE AND MAINTENANCE

Cleaning

- **Interior:** Clean the oven interior regularly with a mild detergent and a soft cloth. Do not use abrasive cleaners or scouring pads.
- **Exterior:** Wipe the exterior surfaces with a damp cloth. For stainless steel, use a specialized stainless steel cleaner to maintain its luster.
- **Turntable:** The glass turntable can be removed and washed with warm, soapy water or in a dishwasher. Ensure it is completely dry before placing it back in the oven.
- Always unplug the microwave before cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Ensure door is latched; Check power connection; Reset circuit breaker or replace fuse.
Food not heating	Incorrect cooking time/power level; Microwave-safe dish not used.	Adjust time/power; Use appropriate cookware.
Display not working	Power interruption.	Unplug and re-plug the unit after a few minutes.

If the problem persists after attempting these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Solwave
Model	MW1000T
Power Output	1000 Watts
Voltage	120 Volts
Capacity	1 Cubic Feet
Installation Type	Countertop
Material	Stainless Steel (Inner and Outer)
Special Features	Programmable
Controller Type	Button
Included Components	Turntable

WARRANTY INFORMATION

This Solwave microwave oven is covered by a limited manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, parts, or service inquiries, please contact Solwave customer support. Refer to the contact information provided on the product packaging or the official Solwave website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question