

Smoby 7600001733

Smoby Masha and the Bear First Kitchen Play Set Instruction Manual

INTRODUCTION

Welcome to the world of imaginative play with your new Smoby Masha and the Bear First Kitchen Play Set. This manual provides essential information for assembly, safe operation, maintenance, and troubleshooting to ensure a fun and lasting experience for your child. Please read these instructions carefully before assembly and use.

PRODUCT OVERVIEW

The Smoby Masha and the Bear First Kitchen Play Set is designed to inspire creativity and role-playing in young children. It features a compact design with various kitchen elements and accessories, allowing children to mimic cooking activities.

Key Features:

- Engaging Masha & Bear themed kitchen for learning through play.
- Includes a sink, stove, and shelves for interactive play.
- Easy assembly process.
- Comes with over 14 accessories.
- Dimensions: 66.5 cm (L) x 49 cm (W) x 28.5 cm (H).
- Suitable for children aged 18 months and older.

Components:

The play set includes the main kitchen unit, a pot with lid, salt and pepper shakers, plates, cutlery, and other food-related accessories.



An image showing the fully assembled Smoby Masha and the Bear First Kitchen Play Set, featuring its pink and green color scheme, stove, sink, and overhead storage.



A close-up image displaying the various accessories included with the kitchen play set, such as a pot, lid, salt and pepper shakers, a cup, a pie, and cutlery, totaling over 14 pieces.

Your browser does not support the video tag.

An official product video demonstrating the features and play possibilities of the Smoby Masha and the Bear First Kitchen Play Set, showcasing how to interact with the oven, refrigerator, and various accessories.

SETUP INSTRUCTIONS

Unpacking:

- Carefully remove all components from the packaging.
- Verify that all main kitchen parts and 14+ accessories are present. Refer to the packaging image for a visual guide.



The product packaging box for the Smoby Masha and the Bear First Kitchen Play Set, illustrating the assembled kitchen and some of its features.

Assembly:

The kitchen play set is designed for easy assembly. Follow these general steps:

1. Connect the base unit to the main kitchen structure.
2. Attach any side panels or shelves as indicated by the design.
3. Place the sink and stove components into their designated slots.
4. Hang the utensils on the provided hooks.
5. Arrange the accessories as desired for play.

No tools are typically required for assembly, as parts are designed to snap or fit together securely.

OPERATING INSTRUCTIONS

This play set encourages imaginative role-play. Here are some ways to interact with its features:

Stove Top:

- Place the pot on the stove burner.
- Pretend to cook various dishes using the included accessories.

Sink Area:

- Use the sink for pretend washing of dishes and cutlery.
- The faucet is for imaginative water play (does not dispense real water).

Oven/Refrigerator:

- Open the oven door to "bake" pretend food.
- Open the refrigerator door to store play food items.

Accessories:

- Utilize the plates, cutlery, and other accessories to serve and enjoy pretend meals.
- The salt and pepper shakers add to the realistic play experience.

MAINTENANCE

To ensure the longevity and hygiene of your play set, follow these maintenance guidelines:

- **Cleaning:** Wipe down all surfaces with a damp cloth and mild soap. Avoid abrasive cleaners.
- **Drying:** Ensure all parts are thoroughly dry before storing.
- **Storage:** Store the play set in a clean, dry place away from direct sunlight to prevent fading and material degradation.
- **Inspection:** Periodically check for any loose or damaged parts. Discontinue use if any damage is found until repaired or replaced.

TROUBLESHOOTING

If you encounter any issues with your Smoby Masha and the Bear First Kitchen Play Set, please refer to the following common solutions:

Missing Parts:

- Carefully re-check all packaging materials.
- If parts are genuinely missing, contact Smoby customer support with your model number and purchase details.

Assembly Difficulties:

- Review the assembly steps in this manual.
- Ensure all pieces are oriented correctly before attempting to connect them.
- Do not force parts together; they should fit snugly.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	7600001733
Brand	Smoby
Material	Plastic
Color	Pink, Green, White, Grey (as seen in product images)
Style	Masha and the Bear
Recommended Age	18 months and up
Product Dimensions (L x W x H)	66.5 x 49 x 28.5 cm
Number of Accessories	14+

SAFETY INFORMATION

Please observe the following safety guidelines to ensure a safe play environment:

- **Choking Hazard:** Contains small parts. Not suitable for children under 18 months without direct adult supervision.
- **Adult Supervision:** Always ensure children are supervised during play to prevent accidents.
- **Assembly:** Adult assembly is required. Ensure all parts are securely fastened before allowing children to play.
- **Cleaning:** Use only mild, non-toxic cleaning agents.
- **Placement:** Place the play set on a stable, flat surface to prevent tipping.

WARRANTY AND SUPPORT

Smoby products are manufactured to high-quality standards. For any questions regarding product assembly, missing parts, or warranty claims, please contact Smoby customer service. Keep your proof of purchase for warranty purposes.

For further assistance, please visit the official Smoby website or contact your local retailer.