

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Flexson](#) /

> [Flexson TV Mount Attachment for Sonos Beam FLXBTV1021 Instruction Manual](#)

Flexson FLXBTV1021

Flexson TV Mount Attachment for Sonos Beam

Model: FLXBTV1021 Instruction Manual

INTRODUCTION

Thank you for choosing the Flexson TV Mount Attachment for Sonos Beam. This product is designed to seamlessly integrate your Sonos Beam soundbar with your television, allowing it to move in sync with your TV when using a full-motion wall mount. This manual provides detailed instructions for safe installation, operation, and maintenance of your new TV mount attachment.

SAFETY INFORMATION

Please read all instructions carefully before installation. Failure to do so may result in personal injury or damage to your equipment. Keep this manual for future reference.

- Ensure the mounting surface can safely support the combined weight of the TV, TV mount, Sonos Beam, and the Flexson TV Mount Attachment.
- Do not exceed the maximum weight capacity of your existing TV mount.
- Always use appropriate tools and follow all installation steps precisely.
- If you are unsure about any part of the installation process, seek professional assistance.
- Keep children and pets away from the installation area.

PACKAGE CONTENTS


Carefully unpack the box and ensure all items are present and undamaged. If any parts are missing or damaged, do not attempt to install and contact your retailer.

- Flexson TV Mount Attachment for Sonos Beam
- Mounting Hardware (various screws, washers, spacers)
- Instruction Manual (this document)

SETUP AND INSTALLATION

This mount is designed to attach to an existing TV wall mount with VESA patterns ranging from 100x100mm to 400x400mm, suitable for 32 to 65 inch TVs. Ensure your TV and existing mount meet these specifications.

1. **Prepare Your TV and Existing Mount:** Ensure your TV is securely mounted to its wall mount. If not, install your TV wall mount according to its manufacturer's instructions first.
2. **Attach the Flexson Mount to the TV Mount:**

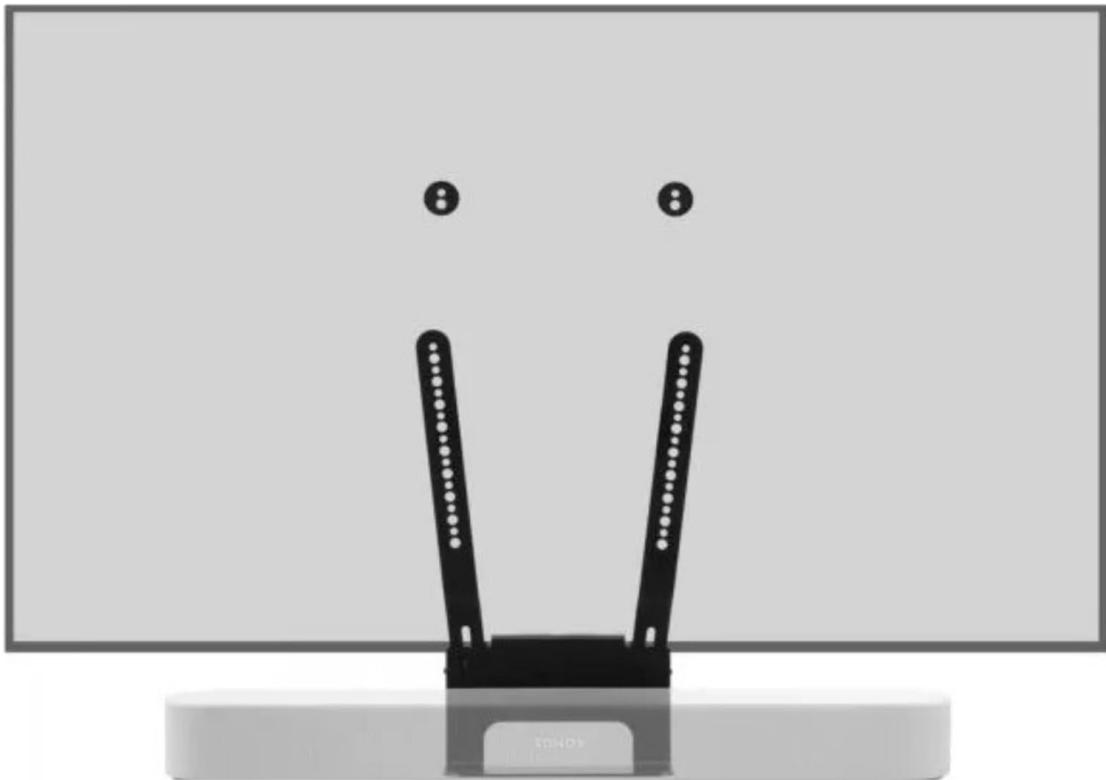

Attach to any TV wall mount



Moves with your TV when using a full-motion mount

Image: The Flexson TV Mount Attachment connected to the back of a television, illustrating how it integrates with an existing TV wall mount. This setup allows the Sonos Beam to move with the TV.

Align the Flexson TV Mount Attachment's vertical arms with the VESA mounting holes on the back of your TV or the vertical arms of your existing TV mount. Use the provided screws, washers, and spacers to securely fasten the Flexson mount. Ensure all connections are tight and stable.

3. Secure the Sonos Beam:



Quick & easy installation

Vertical and horizontal adjustment allows for proper alignment with your display

Image: The Flexson TV Mount Attachment holding a Sonos Beam soundbar, positioned below a television. This image highlights the quick and easy installation process and the ability for vertical and horizontal adjustment to achieve perfect alignment with the display.

4. **Adjust Alignment:** Once the Sonos Beam is secured, you can make vertical and horizontal adjustments to perfectly align the soundbar with your TV screen. Loosen the adjustment screws slightly, position the Sonos Beam as desired, and then re-tighten the screws to lock it in place.
5. **Cable Management:** Route any necessary cables (power, HDMI) neatly to avoid strain and maintain a clean appearance.

OPERATING

The Flexson TV Mount Attachment is a passive device designed to hold your Sonos Beam. Its primary operational feature is its ability to move with your TV when your TV is mounted on a full-motion wall

mount. This ensures the soundbar always faces the same direction as your screen, optimizing audio delivery.

- **Movement:** If your TV is on a full-motion mount, the Sonos Beam will move with the TV as you adjust its position.
- **Adjustments:** Periodically check the vertical and horizontal alignment. If adjustments are needed, follow step 3 of the 'Setup and Installation' section.

MAINTENANCE

Regular maintenance will ensure the longevity and continued performance of your Flexson TV Mount Attachment.

- **Cleaning:** Use a soft, dry cloth to wipe down the mount. Avoid abrasive cleaners or solvents, which may damage the finish.
- **Periodic Checks:** Every 6-12 months, inspect all screws and connections to ensure they remain tight and secure. Re-tighten if necessary.
- **Damage:** If any part of the mount becomes damaged, discontinue use and replace the affected component or the entire mount.

TROUBLESHOOTING

If you encounter any issues with your Flexson TV Mount Attachment, refer to the following common solutions:

Problem	Possible Cause	Solution
Sonos Beam is not level.	Uneven installation or adjustment.	Re-check vertical and horizontal adjustments. Ensure the TV itself is level.
Mount feels loose.	Screws are not fully tightened.	Carefully re-tighten all mounting screws connecting the Flexson mount to the TV mount, and the Sonos Beam to the Flexson mount.
Mount does not fit my TV/TV mount.	Incompatibility with VESA pattern or TV size.	Verify your TV's VESA pattern and size against the product specifications (100x100 to 400x400mm VESA, 32-65" TVs).

SPECIFICATIONS

- **Model:** FLXBTV1021
- **Compatibility:** Sonos Beam soundbar
- **TV Size Compatibility:** 32 to 65 inches
- **VESA Compatibility:** 100x100mm to 400x400mm
- **Adjustments:** Vertical and Horizontal
- **Product Dimensions:** 6 x 2.63 x 6.75 inches (approximate)
- **Item Weight:** 6.3 ounces (approximate)
- **Material:** Steel

WARRANTY AND SUPPORT

Flexson products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Flexson website. For technical support or assistance with installation, please contact Flexson customer service through their official channels.

Online Support: www.flexson.com