

[Manuals.plus](#) /

> [Acer](#) /

> Acer X113PH SVGA 3D DLP Projector User Manual

Acer X113PH

Acer X113PH SVGA 3D DLP Projector User Manual

Model: X113PH

INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Acer X113PH SVGA 3D DLP Home Theater Projector. This projector is designed for displaying presentations, lectures, photographs, movies, and games with clear visuals and balanced colors. It features DLP 3D readiness for enhanced visual depth.



Image: Front-right view of the Acer X113PH projector, showcasing its lens and ventilation grilles.

SETUP

1. Unpacking

Carefully remove the projector and all accessories from the packaging. Retain the original packaging for future

transport or storage.

2. Placement

Position the projector on a stable, flat surface or mount it securely. For optimal viewing, ensure the projector is aligned with the screen. The projector can display a screen size range of 59 inches from 8 feet distance, up to 88 inches from 12 feet distance.

3. Connecting Devices

Connect your video source (e.g., computer, Blu-ray player) to the projector using the appropriate cables. The Acer X113PH supports various connectivity options:

- **Analog RGB/Component Video (D-sub):** For connecting to computers or older video equipment.
- **S-Video:** For standard definition video sources.
- **HDMI:** For high-definition digital video and audio.



Image: Rear view of the Acer X113PH projector, showing the various input ports including HDMI, D-sub, and S-Video.

4. Powering On

Connect the power cord to the projector and then to an electrical outlet. Press the power button on the projector or remote control to turn it on. The power indicator light will illuminate.

5. Initial Adjustments

- **Focus:** Rotate the focus ring on the lens until the image is sharp and clear.
- **Zoom:** Adjust the zoom ring on the lens to achieve the desired image size.
- **Keystone Correction:** If the image appears trapezoidal, use the keystone correction function (available via the projector's menu or dedicated button) to square the image.



Image: Top view of the Acer X113PH projector, highlighting the control panel buttons and the focus and zoom rings on the lens.

OPERATING THE PROJECTOR

1. Input Source Selection

Press the "Source" button on the projector's control panel or remote control to cycle through available input sources (HDMI, D-sub, S-Video). Select the input corresponding to your connected device.



Image: Top view of the Acer X113PH projector, showing the full control panel with buttons for power, menu, source selection, and navigation.

2. Picture Adjustments

Access the projector's On-Screen Display (OSD) menu by pressing the "Menu" button. Navigate using the arrow keys to adjust settings such as:

- **Brightness:** Adjusts the overall lightness or darkness of the image.
- **Contrast:** Controls the difference between the lightest and darkest parts of the image.
- **Color Mode:** Select from preset modes (e.g., Presentation, Movie, sRGB) or customize settings for color, tint, and saturation.

3. 3D Functionality

The Acer X113PH is DLP 3D ready. To experience 3D content, you will need compatible 3D source material, a 3D-capable player, and active DLP Link 3D glasses (sold separately). Refer to your 3D source device's manual for specific setup instructions.

MAINTENANCE

1. Lamp Replacement

The projector lamp has an estimated life of 5000 hours in Standard mode and 6000 hours in ECO mode. When the lamp reaches the end of its life, a warning message will appear. Refer to the full service manual for detailed lamp replacement instructions. Always allow the projector to cool down completely before attempting lamp replacement.

2. Cleaning

- **Lens:** Gently wipe the lens with a soft, lint-free cloth specifically designed for optical surfaces. Do not use abrasive cleaners.
- **Projector Casing:** Use a soft, damp cloth to clean the exterior. Avoid harsh chemicals.
- **Air Filter:** Regularly check and clean the air filter to ensure proper ventilation and prevent overheating. Refer

to the full service manual for filter access and cleaning procedures.

TROUBLESHOOTING

If you encounter issues with your projector, consult the following common problems and solutions:

- **No Image Displayed:**
 - Ensure the projector is powered on and the power indicator is lit.
 - Verify that the video cable is securely connected to both the projector and the source device.
 - Confirm the correct input source is selected on the projector.
 - Check if the source device is powered on and outputting a signal.
- **Poor Image Quality:**
 - Adjust the focus and zoom rings on the lens.
 - Perform keystone correction if the image is distorted.
 - Check the resolution settings on your source device; ensure it is compatible with the projector's native resolution (800 x 600).
 - Clean the projector lens if it appears smudged.
- **Projector Overheating:**
 - Ensure the projector's ventilation openings are not blocked.
 - Clean the air filter.
 - Operate the projector in an environment with adequate airflow.

For more complex issues, refer to the comprehensive user manual available on the Acer support website or contact Acer customer support.

SPECIFICATIONS

Acer X113PH Projector Key Specifications

Feature	Detail
Brand	Acer
Model Number	X113PH
Display Type	DLP
Native Resolution	800 x 600 (SVGA)
White Brightness	3000 ANSI Lumens (Standard), 2400 ANSI Lumens (ECO)
Contrast Ratio	13000:1
Screen Size Range	59-inches from 8 feet, 88-inches from 12 feet
Keystone Correction	Yes
Lamp Life	5000 Hours (Standard), 6000 Hours (ECO)
Connectivity	Analog RGB/Component Video (D-sub), S-Video, HDMI

Feature	Detail
Special Features	3D-Ready
Item Weight	5.5 pounds
Product Dimensions	12.4 x 8.8 x 13.7 inches

WARRANTY INFORMATION

The Acer X113PH projector comes with a 3-year limited warranty. For detailed terms and conditions, including coverage and service procedures, please refer to the warranty card included with your product or visit the official Acer support website.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact Acer customer support. You can find contact information and additional resources on the official Acer website: www.acer.com/support.

© 2024 Acer Inc. All rights reserved. Information in this document is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

