

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sauter](#) /

› [Sauter SPI4662B Induction Hob Instruction Manual](#)

Sauter SPI4662B

Sauter SPI4662B Induction Hob Instruction Manual

Model: SPI4662B

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Sauter SPI4662B induction hob. Please read these instructions carefully before installation, operation, or maintenance. Keep this manual for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, burns, or injury. This appliance is designed for domestic use only.

- Ensure the appliance is properly earthed.
- Do not touch hot surfaces. Use handles or knobs.
- Supervise children when the appliance is in use.
- Do not operate the appliance with a damaged cord or plug.
- Unplug from outlet when not in use and before cleaning.
- Only use cookware suitable for induction hobs.
- Avoid placing metallic objects on the hob surface when not in use.
- The hob features a "Pack 10 sécurités" (10 safety features) system, including residual heat indicators and central locking.

SETUP AND INSTALLATION

The Sauter SPI4662B is an integrated induction hob designed for built-in installation. Professional installation is recommended.

Dimensions and Clearance

Ensure adequate space and ventilation around the hob. Refer to the diagram below for precise measurements.

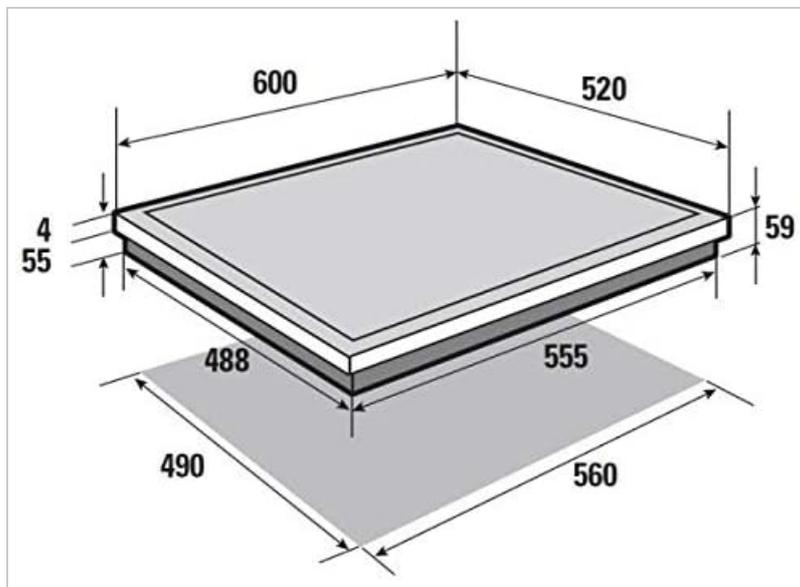


Image: Technical drawing illustrating the dimensions for installation. The overall product dimensions are 600mm (width) x 520mm (depth). The cutout dimensions for installation are 560mm (width) x 490mm (depth). The height above the countertop is 4mm, and the depth below is 55mm. The total height including the glass is 59mm.

- **Product Dimensions (LxP):** 60 cm x 52 cm
- **Cutout Dimensions (LxPxE):** 56 cm x 49 cm x 5.2 cm
- **Dimensions above countertop (HxLxP):** 4 mm x 600 mm x 520 mm
- **Dimensions below countertop (HxLxP):** 55 mm x 555 mm x 488 mm

Electrical Connection

The appliance requires a dedicated electrical connection. It is supplied without a plug.

- **Maximum Electrical Power:** 7.2 kW
- **Current:** 32 A
- **Voltage:** 220-240 V
- **Frequency:** 50/60 Hz
- **Cord Length:** 130 cm

OPERATING INSTRUCTIONS

The Sauter SPI4662B induction hob features touch-sensitive controls for precise cooking.

Control Panel

Each cooking zone has dedicated touch controls with 14 power positions, allowing for fine temperature adjustments. The hob also includes 3 direct access settings, one of which is a Booster function.

- **Power On/Off:** Press the main power button to activate or deactivate the hob.
- **Zone Selection:** Select the desired cooking zone by touching its corresponding control.
- **Power Adjustment:** Use the +/- controls or slide bar (if applicable) to set the power level from 1 to 14.
- **Booster Function:** Activate the Booster for rapid heating. This function provides maximum power (up to 4000W on the large zone) for a limited time.
- **Direct Access Settings:** Three programmable direct access settings (e.g., 6-10) allow quick selection of frequently used power levels.

Cooking Zones

- **Total Zones:** 3 induction cooking zones.
- **Horizone Area:** This flexible zone can accommodate large cookware like fish kettles or multiple smaller pots. It can also be split into two independent zones while maintaining optimal temperature distribution.
- **Large Zone:** A 28 cm zone with 4000W power, suitable for various cooking needs, from gentle simmering to intense frying.

Timer Function

The electronic timer can be set for up to 99 minutes. It can be used to set a cooking duration for a specific zone, or as a general minute minder.

- **Setting the Timer:** Select the desired cooking zone, then activate the timer function and adjust the duration using the +/- controls.
- **End of Cooking:** An audible signal will sound when the set time expires, and the cooking zone will switch off automatically.

Cookware Detection

The hob automatically detects the presence of suitable induction cookware. If no cookware is detected, or if the cookware is unsuitable, the zone will not activate or will switch off.

- Use cookware with a ferromagnetic base.
- Ensure the base of the cookware covers at least the minimum diameter of the cooking zone.
- Note: Some users have reported issues with cookware smaller than 15 cm in diameter on certain zones.

MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your induction hob.

- **Before Cleaning:** Always ensure the hob is switched off and has cooled down completely. Unplug the appliance if possible.
- **Surface Cleaning:** Clean the tempered glass surface with a soft cloth and a non-abrasive cleaner specifically designed for ceramic or induction hobs. Wipe spills immediately to prevent staining.
- **Stubborn Stains:** For burnt-on food, use a specialized hob scraper, holding it at a shallow angle to avoid scratching the surface.
- **Avoid:** Do not use abrasive sponges, harsh detergents, or steam cleaners.

TROUBLESHOOTING

If you encounter issues with your hob, consult the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; child lock activated.	Check power connection; deactivate central locking.
Cooking zone not heating.	Unsuitable or no cookware; cookware too small; automatic safety shut-off.	Use induction-compatible cookware; ensure cookware base is adequate size (min. 15 cm recommended); reset hob if safety shut-off occurred.

Problem	Possible Cause	Solution
Display shows "H" (flashing).	Residual heat indicator.	The zone is still hot. Exercise caution. This is normal operation.
Display shows "0" (flashing).	Power-on indicator.	Indicates the hob is powered on but no zone is active.
Unusual noise during operation.	Normal induction hum; fan noise; cookware resonance.	A slight hum is normal for induction hobs. Ensure cookware is flat-bottomed. If noise is excessive or unusual, contact service.

TECHNICAL SPECIFICATIONS

Brand	Sauter
Model	SPI4662B
Type of Hob	Induction
Number of Cooking Zones	3
Surface Material	Tempered Glass (Noir)
Control Type	Touch Sensitive
Installation Type	Integrated (Built-in)
Power Source	Electric Cable
Voltage	220-240 V
Maximum Power	7.2 kW
Current	32 A
Special Features	Timer (99 min), 3 Boosters, Horizone (extendable zone), Cookware Detection, Central Locking, 10 Safety Features
Product Dimensions (LxP)	60 cm x 52 cm
Net Weight	14 kg
ASIN	B00YPQSINQ
International Article Code	03660767208193

WARRANTY INFORMATION

The Sauter SPI4662B induction hob comes with a **24-month warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal domestic use. It does not cover damage caused by improper installation, misuse, accident, or unauthorized repairs.

CUSTOMER SUPPORT

For technical assistance, spare parts, or warranty service, please contact Sauter customer support. Have your model number (SPI4662B) and proof of purchase ready when contacting support. Refer to the official Sauter website or your local dealer for contact information.

