

Indesit F088620

Indesit LI7 FF2 W B Freestanding Refrigerator-Freezer User Manual

Model: F088620

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Indesit LI7 FF2 W B freestanding refrigerator-freezer. Please read these instructions carefully before installation and operation, and retain them for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your appliance.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments, unless they are of the type recommended by the manufacturer.
- Unplug the appliance before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. SETUP AND INSTALLATION

3.1 Unpacking

Remove all packaging materials, including tape and protective films. Dispose of packaging responsibly. Check the appliance for any transport damage. If damaged, do not connect it to the power supply and contact your retailer.

3.2 Placement

- Place the appliance on a firm, level surface to prevent vibrations and noise.
- Ensure adequate ventilation around the appliance. Maintain a minimum distance of 10 cm from walls and other furniture.
- Avoid placing the appliance near heat sources such as direct sunlight, radiators, ovens, or cooktops, as this will increase energy consumption.
- The appliance is designed for operation in ambient temperatures between SN, ST, and T climate classes. Refer to the rating plate for specific details.

3.3 Electrical Connection

Before plugging in the appliance, ensure the voltage and frequency indicated on the rating plate match your household power supply. The appliance must be properly grounded. Do not use extension cords or multiple adapters.

3.4 First Use

After installation, wait at least 2-4 hours before plugging in the appliance to allow the refrigerant to settle. Clean the interior of the appliance with a damp cloth and a mild detergent before loading food.



Image 1: Front view of the Indesit LI7 FF2 W B freestanding refrigerator-freezer. This image displays the appliance's white exterior, with the Indesit logo visible on the upper refrigerator door. The design features two distinct doors, with the upper door for the refrigerator compartment and the lower door for the freezer compartment. The handles are integrated into the design, providing a sleek and minimalist appearance.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The temperature inside the refrigerator and freezer compartments is controlled by a thermostat, typically located inside the refrigerator compartment. Turn the dial or press the buttons to adjust the temperature. Higher numbers or colder settings generally indicate lower temperatures.

- **Refrigerator:** Recommended setting for normal use is usually a medium position.
- **Freezer:** For optimal food preservation, set the freezer to -18°C or colder.

4.2 Food Storage Guidelines

- **Refrigerator Compartment (188 Liters):** Store fresh foods such as fruits, vegetables, dairy products, and cooked meals. Ensure food is covered to prevent drying out and odor transfer.
- **Freezer Compartment (90 Liters):** Suitable for long-term storage of frozen foods. Do not place hot food directly into the freezer. Allow food to cool before freezing.
- Avoid overloading the compartments to allow for proper air circulation.
- Do not open the doors unnecessarily to maintain stable internal temperatures and save energy.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain hygiene and efficiency. Always unplug the appliance before cleaning.

- **Interior:** Clean with a solution of warm water and mild detergent. Rinse with clean water and dry thoroughly. Do not use abrasive cleaners or solvents.
- **Exterior:** Wipe with a soft, damp cloth. For stubborn stains, use a mild detergent.
- **Door Seals:** Clean door seals regularly to ensure a tight seal and prevent energy loss.
- **Condenser Coils (rear of appliance):** Periodically vacuum or brush the condenser coils to remove dust and debris, which can improve cooling efficiency.

5.2 Defrosting

- **Refrigerator:** The refrigerator compartment typically defrosts automatically. Defrost water drains into a tray above the compressor where it evaporates. Ensure the drain hole is not blocked.
- **Freezer:** This model may require manual defrosting of the freezer compartment when ice buildup becomes excessive (around 5-10 mm thick).
 1. Unplug the appliance.
 2. Remove all frozen food and store it in a cool place, wrapped in newspaper.
 3. Leave the freezer door open. Place towels or a shallow tray to collect defrost water.
 4. Do not use sharp objects or heating devices to remove ice.
 5. Once defrosted, clean and dry the interior thoroughly before plugging the appliance back in and returning food.

5.3 Extended Absence / Power Outage

- **Short Absence:** Leave the appliance operating.
- **Long Absence:** If you will be away for an extended period, unplug the appliance, empty both compartments, defrost the freezer, clean the interior, and leave the doors ajar to prevent odors.

- **Power Outage:** Keep the doors closed to maintain the internal temperature for as long as possible. Avoid opening the doors.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Appliance does not operate	No power supply; plug not inserted; fuse blown.	Check power connection; check fuse/circuit breaker.
Temperature is not cold enough	Door not closed properly; door opened too frequently; thermostat set too high; too much food loaded; appliance near heat source.	Ensure door is sealed; reduce door openings; adjust thermostat to a colder setting; reduce food load; relocate appliance.
Excessive noise	Appliance not level; contact with wall/furniture; loose parts.	Adjust leveling feet; ensure clearance; check for loose components.
Water on floor/inside	Drain hole blocked; door not sealed.	Clear drain hole; check door seal.

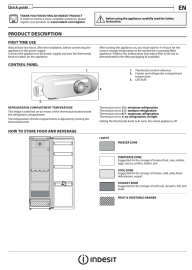 


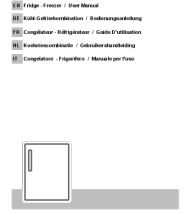 
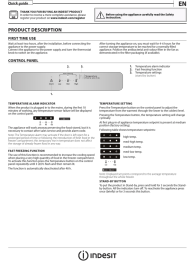 
7. SPECIFICATIONS

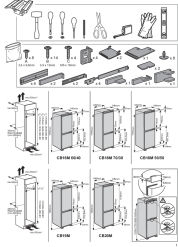 
Feature	Detail
Brand	Indesit
Model Number	F088620
Type	Freestanding Refrigerator-Freezer
Color	White
Refrigerator Capacity	188 Liters
Freezer Capacity	90 Liters
Total Capacity	278 Liters
Dimensions (H x W x D)	178 cm x 60 cm x 63 cm
Energy Efficiency Class	A++
Noise Level	45 dB

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card provided with your appliance or visit the official Indesit website. For technical assistance or spare parts, contact Indesit customer support. When contacting support, please have your model number (F088620) and serial number ready.
You can find more information and support on the [Indesit Brand Store](#).

Related Documents - F088620

	<p>Indesit Refrigerator Quick Guide and User Manual</p> <p>Get started with your Indesit refrigerator. This quick guide covers first-time use, product description, food storage, and troubleshooting. Find comprehensive support and register your appliance at www.indesit.com/register.</p>
	<p>Indesit Refrigerator User Manual</p> <p>This user manual provides comprehensive instructions for the Indesit refrigerator, covering safety, installation, daily use, and troubleshooting to ensure efficient and safe operation.</p>
	<p>Indesit UI6 F2T W Upright Freezer: Quick Start Guide</p> <p>Quick start guide for the Indesit UI6 F2T W upright freezer. Learn about its controls, functions like Party Mode and Eco Night, and how to handle alarms. Features a detailed component list and operational tips.</p>
	<p>Indesit Fridge-Freezer User Manual</p> <p>Comprehensive user manual for the Indesit Fridge-Freezer, providing essential safety instructions, operating guidelines, maintenance tips, and energy-saving advice for optimal use and longevity of the appliance.</p>
	<p>Indesit Quick Guide: Product Description, Setup, and Troubleshooting</p> <p>Concise guide for your Indesit appliance, covering initial setup, control panel functions, temperature settings, food storage, and troubleshooting common issues. Register your product for complete assistance.</p>



[Indesit Integrated Fridge Freezer Installation Guide](#)

Comprehensive installation instructions for Indesit integrated fridge freezers, including models CB16M, CB19M, CB20M, CB18M 70/30, and CB18M 50/50. Covers unpacking, assembly, and mounting procedures.