

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KLARSTEIN](#) /

› [Klarstein Amazonia 6 Argentea Dishwasher User Manual](#)

KLARSTEIN DSM-Amazonia-6-Argen

Klarstein Amazonia 6 Argentea Dishwasher User Manual

MODEL: DSM-AMAZONIA-6-ARGEN

1. Important Safety Instructions

Please read all instructions carefully before using the appliance. Keep this manual for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when the door is open.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after use.

2. Product Overview

The Klarstein Amazonia 6 Argentea is a compact table dishwasher designed for efficiency and convenience. It offers 6 place settings and multiple wash programs to suit various dishwashing needs.



Figure 1: Front view of the Klarstein Amazonia 6 Argentea dishwasher, showing the control panel with symbols and three touch buttons, and the LED display.

3. Setup and Installation

This dishwasher features a freestanding design, making it suitable for placement on countertops or for integration into kitchen cabinets. Installation is simplified by pre-assembled supply and drain hoses.

3.1 Placement

Choose a stable, level surface near a water supply, drain, and electrical outlet. Ensure adequate ventilation around the unit.

3.2 Water Connection

Connect the pre-assembled supply hose to a cold water tap. The integrated Aquastop feature on the inlet hose provides protection against leaks and flooding.

3.3 Drain Connection

Connect the pre-assembled drain hose to a suitable drain point, ensuring it is securely fastened and free from kinks.

3.4 Electrical Connection

Plug the dishwasher into a properly grounded 220V electrical outlet. Do not use extension cords.



Figure 2: The Klarstein Amazonia 6 Argentea dishwasher installed in a kitchen setting, demonstrating its compact size and suitability for under-counter placement.

4. Operating Instructions

The dishwasher is equipped with a user-friendly control panel featuring a display with symbols and three touch buttons for easy program selection and monitoring.

4.1 Loading the Dishwasher

Arrange dishes to allow water to reach all surfaces. Avoid overcrowding. The interior accommodates 6 standard place settings.



Figure 3: Interior view of the dishwasher showing a typical loading arrangement for plates, cups, and cutlery.



Figure 4: Close-up of the dishwasher's racks and cutlery basket, designed for efficient loading of various dish types.

4.2 Adding Detergent and Rinse Aid

Open the detergent dispenser and add the appropriate amount of dishwasher detergent. For optimal drying results, ensure the rinse aid dispenser is filled. Indicator lights on the control panel will signal when refilling of cleaning salt or rinse aid is necessary.



Figure 5: The detergent and rinse aid dispenser located on the inner door of the dishwasher.

4.3 Program Selection

The dishwasher offers six programs. Use the program selection button to cycle through the options. Indicator lights will show the selected program. The LED display shows the remaining program duration.

- **Intensive:** For heavily soiled dishes and cookware, ideal for dried food residues.
- **Quick:** For lightly soiled items such as glasses or cups.
- **ECO:** An energy-efficient program that washes at lower temperatures.
- *Other programs may include Normal, Glass, or 90-minute wash cycles. Refer to the control panel symbols for specific details.*

4.4 Starting a Wash Cycle

Close the dishwasher door firmly. Press the Start/Pause button to begin the selected program.

5. Maintenance and Care

Regular maintenance ensures optimal performance and longevity of your dishwasher.

5.1 Cleaning the Filters

Periodically check and clean the filter system at the bottom of the wash tub to remove food particles and debris. Refer to the diagram in the full manual for filter removal instructions.

5.2 Cleaning the Spray Arms

Ensure the spray arm nozzles are not clogged. Remove and clean them if necessary.

5.3 Cleaning the Interior

Wipe the interior with a damp cloth after each use. For stubborn stains, use a dishwasher cleaner.

5.4 Exterior Cleaning

Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.

5.5 Salt and Rinse Aid Refill

Monitor the indicator lights for dishwasher salt and rinse aid. Refill as needed to prevent limescale buildup and ensure streak-free drying.

6. Troubleshooting

If you encounter issues with your dishwasher, consult the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a wash program.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect program.	Reload dishes correctly, clean spray arms and filters, use appropriate detergent, select a stronger program.
Water leaking	Loose hose connections, damaged door seal, excessive detergent.	Check all hose connections, inspect and clean door seal, reduce detergent amount.
Dishes not drying	No rinse aid, rinse aid dispenser blocked, program without drying cycle.	Refill rinse aid, check dispenser, select a program with a drying phase.
Detergent dispenser not opening	Dishes blocking dispenser, dispenser mechanism faulty.	Ensure dishes do not obstruct the dispenser door. If problem persists, contact support.
Cutlery basket unstable / dishes falling	Improper placement of basket or dishes.	Ensure cutlery basket is securely placed. Arrange dishes to prevent movement during wash cycle.

7. Specifications

Key technical details for the Klarstein Amazonia 6 Argentea Dishwasher:

Feature	Detail
Brand	KLARSTEIN
Model Number	DSM-Amazonia-6-Argen

Feature	Detail
Installation Type	Freestanding / Under Counter
Product Dimensions (D x W x H)	23.62"D x 24.8"W x 21.26"H
Color	Silver
Controls Type	Push Button
Material	Glass (door/panel elements)
Noise Level	49 Decibels
Item Weight	21 Kilograms
Voltage	220 Volts
Place Settings	6
Programs	6 (e.g., Intensive, Quick, ECO)

8. Warranty and Support

Your Klarstein Amazonia 6 Argentea Dishwasher comes with a standard warranty. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase.

8.1 Returns Policy

A 30-day return policy is typically available for this product. Please check with your retailer for exact details.

8.2 Extended Protection Plans

Extended protection plans, such as a 3-Year Protection Plan or a monthly Complete Protect plan, may be available for purchase to cover your appliance beyond the standard warranty period.

8.3 Customer Support

For technical assistance, spare parts, or warranty claims, please contact Klarstein customer support. Contact information can usually be found on the official Klarstein website or in your purchase documentation.