

[Manuals.plus](#) /

› [Timex](#) /

› Timex Expedition Digital CAT 33mm Watch User Manual TW4B02400

Timex TW4B02400

Timex Expedition Digital CAT 33mm Watch User Manual

Model: TW4B02400

1. OVERVIEW

The Timex Expedition Digital CAT 33mm Watch (Model TW4B02400) is a durable and versatile timepiece designed for daily wear and outdoor activities. It features a digital display, Indiglo night-light, and various timekeeping functions. This manual provides instructions for setting up and operating your watch.



Figure 1: Front view of the Timex Expedition Digital CAT 33mm Watch.

2. KEY FEATURES

- **Digital Display:** Clear gray digital display for easy readability.
- **Indiglo Night-Light:** Electroluminescent backlight for visibility in low-light conditions.
- **Water Resistance:** Water-resistant to 100 meters (330 feet), suitable for snorkeling and swimming, but not diving.
- **Chronograph:** 100-hour chronograph with lap and split times.
- **Countdown Timer:** 24-hour countdown timer.

- **Alarms:** Three daily, weekday, or weekend alarms with a 5-minute backup snooze function.
- **Time Zones:** Two time zones for convenient travel.
- **Calendar:** Month, day, and date calendar display.
- **Military Time Mode:** 24-hour military time display option.
- **Strap:** Adjustable black 16mm nylon fast wrap strap with hook & loop closure, fitting up to an 8-inch wrist circumference.



Figure 2: Side view showing watch buttons.

3. SETUP AND OPERATION

3.1 Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting screen appears (usually indicated by flashing digits).
2. Use the **SET** button to select the digit or setting you wish to adjust (e.g., hours, minutes, AM/PM, month, day, year).
3. Use the **START/SPLIT** or **STOP/RESET** buttons to increase or decrease the selected value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

3.2 Using Indiglo Night-Light

To activate the Indiglo night-light, press and hold the **INDIGLO** button (often located on the side or front of the watch). The display will illuminate with a blue-green glow for a few seconds.

3.3 Operating the Chronograph

1. Press the **MODE** button until the chronograph mode is displayed (usually indicated by 'CHRONO' or 'STOPWATCH').
2. Press **START/SPLIT** to begin timing.
3. Press **START/SPLIT** again to record a lap or split time without stopping the main timer.
4. Press **STOP/RESET** to pause the chronograph.
5. Press **STOP/RESET** again to reset the chronograph to zero.

3.4 Setting Alarms

1. Press the **MODE** button until the alarm mode is displayed (usually 'ALM 1', 'ALM 2', or 'ALM 3').
2. Use the **SET** button to select the alarm time (hours, minutes, AM/PM) and alarm type (daily, weekday, weekend).
3. Use the **START/SPLIT** or **STOP/RESET** buttons to adjust the values.
4. Press the **MODE** button to save and exit.

Your browser does not support the video tag.

Video 1: An overview of the Timex Expedition Digital Watch features and functions.

4. MAINTENANCE

4.1 Battery Replacement

The watch uses one Lithium Metal battery (included). When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance is maintained.

4.2 Cleaning and Care

- Clean your watch with a soft, damp cloth.
- Avoid using chemical cleaners, which can damage the watch case or strap.
- Rinse the watch with fresh water after exposure to salt water or chlorine.

4.3 Water Resistance Guidelines

Your watch is water-resistant to 100 meters. This means it is suitable for recreational swimming and snorkeling. It is **not** suitable for scuba diving or high-impact water sports. Do not operate buttons underwater to prevent water ingress.

5. TROUBLESHOOTING

- **Display is blank or dim:** The battery may need replacement.
- **Buttons are unresponsive:** Try resetting the watch by pressing all buttons simultaneously for a few seconds, if applicable, or consult the full manual.
- **Time is incorrect:** Re-set the time and date following the instructions in Section 3.1.

6. SPECIFICATIONS

Feature	Specification
Model Number	TW4B02400
Case Diameter	33 Millimeters
Case Material	Resin
Band Material	Nylon
Band Width	16 Millimeters
Water Resistance Depth	100 Meters (330 Feet)
Display Type	Digital
Movement Type	Quartz
Battery	1 Lithium Metal (included)

Your browser does not support the video tag.

Video 2: Timex Sizing Chart to help determine the appropriate watch size.

7. SAFETY INFORMATION

- Avoid exposing the watch to extreme temperatures or direct sunlight for prolonged periods.
- Keep the watch away from strong magnetic fields, which can affect accuracy.
- Do not attempt to open the watch case yourself, as this may compromise water resistance and void the warranty.

8. WARRANTY AND SUPPORT

This Timex watch is covered by a manufacturer's warranty. For detailed warranty information, service, or support, please refer to the official Timex website or contact Timex customer service. Keep your proof of purchase for warranty claims.