

[Manuals.plus](#) /

› [Contigo](#) /

› Contigo Ashland Water Bottle Instruction Manual

Contigo Ashland Water Bottle

Contigo Ashland Water Bottle Instruction Manual

Model: Ashland Water Bottle

INTRODUCTION

Thank you for choosing the Contigo Ashland Water Bottle. This 24oz water bottle is designed for convenience and durability, featuring a leak-proof AUTOSPOUT straw lid for easy one-handed drinking. This manual provides essential information for the proper use and care of your bottle to ensure optimal performance and longevity.



Image: Front view of the Contigo Ashland Water Bottle, highlighting its design and branding.

SETUP

1. **Initial Cleaning:** Before first use, wash all parts of the water bottle thoroughly. The bottle and lid are top-rack dishwasher safe. For detailed cleaning instructions, refer to the Maintenance section.

2. **Assemble Straw:** Ensure the straw is securely attached to the underside of the lid's spout.
3. **Fill Bottle:** Unscrew the lid and fill the bottle with your desired beverage. Do not overfill.
4. **Secure Lid:** Screw the lid back onto the bottle tightly to prevent leaks.

OPERATING INSTRUCTIONS

Drinking with AUTOSPOUT Technology

The Contigo Ashland Water Bottle features an AUTOSPOUT straw lid for convenient, one-handed drinking.

1. **Open Spout:** Press the AUTOSPOUT button located on the front of the lid. The drinking spout will pop up automatically.
2. **Drink:** Sip directly from the straw.
3. **Close Spout:** Push the spout back down until it clicks into place. This action seals the spout, making the bottle leak-proof when closed.

Spout Lock Feature

For added security and to prevent accidental pressing of the AUTOSPOUT button, use the spout lock.

1. **Engage Lock:** Slide the small button next to the AUTOSPOUT button to the locked position (usually indicated by a visible lock icon or a different color).
2. **Disengage Lock:** Slide the button back to the unlocked position to enable the AUTOSPOUT button.



Image: A close-up view of the bottle's lid, showing the AUTOSPOUT button, drinking spout, and the spout lock mechanism.

Carry Clip

The integrated carry clip allows for easy attachment to bags, backpacks, or gear for convenient transport.

Official Product Video: Contigo Ashland AUTOSPOUT Features

Your browser does not support the video tag.

Video: This video demonstrates the key features of the Contigo Ashland AUTOSPOUT water bottle, including its one-handed operation and leak-proof design.

Official Product Video: Contigo Ashland for Cyclists

Your browser does not support the video tag.

Video: This video showcases the Contigo Ashland water bottle in use by a cyclist, highlighting its portability and ease of use during activities.

MAINTENANCE

Cleaning Instructions

- **Disassembly:** Separate the lid, straw, and bottle.
- **Dishwasher Safe:** The bottle and lid are top-rack dishwasher safe. Place them securely in the top rack.
- **Hand Washing:** For thorough cleaning, especially for the straw and spout area, hand wash with warm, soapy water. Use a bottle brush for the interior of the bottle and a straw brush for the straw.
- **Rinse:** Rinse all components thoroughly with clean water.
- **Dry:** Allow all parts to air dry completely before reassembling or storing to prevent mold and odors.

General Care

- Do not use abrasive cleaners or scrubbers, as these can damage the finish.
- Do not use bleach or cleaners containing chlorine.
- Do not microwave.
- Do not freeze.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bottle is leaking	Lid not screwed on tightly. Spout not fully closed. Spout lock not engaged. Gasket or straw not properly seated.	Ensure lid is securely tightened. Push spout down until it clicks. Engage spout lock for transport. Check that all gaskets and the straw are correctly positioned.
Difficulty drinking from straw	Straw not fully inserted. Air vent blocked. Spout lock engaged.	Push straw firmly into the lid. Ensure the air vent on the lid is clear. Disengage the spout lock.
Unpleasant odor or taste	Improper cleaning or drying.	Thoroughly clean all parts, especially the straw and spout, and allow to air dry completely. Consider using a mixture of baking soda and water for stubborn odors.

SPECIFICATIONS

Feature	Detail
Brand	Contigo
Model Name	AUTOSPOUT
Item Type Name	Ashland Water Bottle
Capacity	24 oz (709 mL)
Material	Tritan, BPA-Free
Color	Smoke (Multicolor variant)
Product Dimensions (W x H)	3.8"W x 10.5"H
Item Weight	0.4 Pounds
Care Instructions	Top-rack dishwasher safe (bottle and lid)
Model Number	2076608
UPC	840276111334, 783322898028, 735343521089



Image: The bottom of the Contigo Ashland Water Bottle, displaying manufacturing details, model information, and UPC.

WARRANTY AND SUPPORT

Contigo products are engineered for durability and performance. For information regarding product warranty, returns, or customer support, please visit the official Contigo website or contact their customer service directly. Keep your

purchase receipt for any warranty claims.
Official Contigo Website: www.gocontigo.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question