

## Mellerware EK02

# Mellerware EK 02 1.5-Litre Cordless Electric Kettle Instruction Manual

Model: EK02

## INTRODUCTION

Thank you for purchasing the Mellerware EK 02 1.5-Litre Cordless Electric Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions thoroughly before first use and retain them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.**

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then remove the plug from the wall outlet.

- Do not use the appliance for other than intended use.
- Ensure the lid is securely closed before operating.
- This kettle is equipped with boil-dry protection. If the kettle is accidentally switched on without water, it will automatically switch off. Allow it to cool down before refilling.
- The kettle must only be used with the power base provided.

## PRODUCT COMPONENTS

Your Mellerware EK 02 Electric Kettle package includes the following items:

- Electric Kettle unit
- Power Base (360-degree cordless)
- Filter Sieve
- Instruction Manual with Warranty Card
- Customer Care List



Image: Mellerware EK 02 1.5-Litre Cordless Electric Kettle. This image displays the complete kettle unit with its power base, showcasing its white and light green design.



Image: Close-up of the kettle lid and the light green power button on top, indicated by a red arrow. This button is used to open the lid for filling.



Image: Close-up of the filter sieve located inside the kettle's spout. This removable filter helps prevent limescale from being poured into your cup.



Image: Close-up of the kettle's lower section and power base, showing the red power indicator light which illuminates when the kettle is boiling.

## SETUP AND FIRST USE

- Unpack:** Carefully remove all packaging materials from the kettle and its power base.
- Clean:** Before first use, fill the kettle with clean water to the maximum level. Boil the water, then discard it. Repeat this process two to three times to remove any manufacturing residues.
- Position:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the counter.
- Cord Storage:** The power base features cord storage. Adjust the cord length as needed to avoid excess cord hanging.

## OPERATING INSTRUCTIONS

- Fill the Kettle:** Press the lid release button (if applicable) or open the lid manually. Fill the kettle with the desired amount of water, ensuring it is between the minimum and maximum fill lines. Do not overfill.
- Close the Lid:** Securely close the lid until it clicks into place. Ensure the lid is properly sealed to prevent steam from escaping during boiling.
- Place on Power Base:** Position the kettle onto the 360-degree cordless power base. Ensure it is seated correctly.
- Connect to Power:** Plug the power base into a suitable 220-240 volt AC electrical outlet.
- Switch On:** Press the ON/OFF switch located on the handle or base of the kettle. The power indicator light will illuminate, indicating that the kettle is heating.
- Boiling Process:** The kettle will begin to heat the water. Once the water reaches boiling point, the kettle will automatically switch off, and the power indicator light will extinguish.

7. **Pouring:** Carefully lift the kettle from its base and pour the hot water. Always pour slowly and steadily to avoid splashing.
8. **Re-boiling:** If you need to re-boil water immediately after it has switched off, allow a few seconds for the internal thermostat to reset before pressing the ON/OFF switch again.

**Boil-Dry Protection:** This kettle is equipped with a safety feature that automatically switches off the heating element if the kettle is accidentally switched on without sufficient water. If this occurs, unplug the kettle, allow it to cool down for several minutes, then refill with water and resume normal operation.

## CARE AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your kettle and ensure optimal performance.

### Cleaning the Exterior

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the surface.
- Never immerse the kettle or its power base in water or any other liquid.

### Cleaning the Interior and Filter Sieve

- **Filter Sieve:** The removable filter sieve can be cleaned by rinsing it under running water. For stubborn deposits, gently brush it with a soft brush. Ensure it is properly re-inserted before use.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. This can affect performance and taste.
  - a. Fill the kettle with a mixture of one part white vinegar and two parts water.
  - b. Bring the mixture to a boil and then let it stand for at least 30 minutes, or longer for heavy deposits.
  - c. Empty the kettle and rinse thoroughly with fresh water several times.
  - d. If necessary, repeat the process. Alternatively, commercial descaling solutions designed for kettles can be used following the manufacturer's instructions.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not switch on.	Not plugged in. Kettle not properly seated on base. Power switch not pressed. No power at outlet.	Ensure plug is securely in the outlet. Place kettle firmly on the power base. Press the ON/OFF switch. Check household fuse/circuit breaker. Test outlet with another appliance.
Kettle switches off before boiling.	Kettle has insufficient water (boil-dry protection activated). Limescale buildup.	Unplug, allow to cool, then refill with water. Descale the kettle as per maintenance instructions.

Problem	Possible Cause	Solution
Water tastes unusual or has particles.	New appliance residue. Limescale buildup. Filter sieve is dirty or dislodged.	Perform initial cleaning steps (boil and discard water several times). Descale the kettle. Clean and properly re-insert the filter sieve.
Automatic shut-off not working correctly.	Lid not closed properly. Excessive limescale buildup affecting sensor. Appliance malfunction.	Ensure the lid is securely closed. Descale the kettle thoroughly. If the issue persists, contact customer service.

## SPECIFICATIONS

<b>Model Number</b>	EK02
<b>Capacity</b>	1.5 Litres
<b>Power</b>	1500 Watts
<b>Operating Voltage</b>	220-240 Volts
<b>Cordless Base</b>	360-degree rotational
<b>Safety Features</b>	Boil-dry protection, Auto shut-off
<b>Heating Element</b>	Concealed
<b>Item Weight</b>	860 g

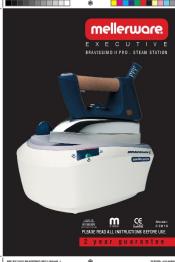
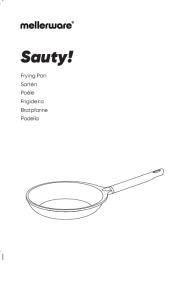
## WARRANTY AND CUSTOMER SUPPORT

Your Mellerware EK 02 Electric Kettle comes with a **1-year warranty** on the product from the date of purchase. Please retain your purchase receipt and warranty card for any warranty claims.

For service, repairs, or any product-related queries, please contact the authorized service center. The product is marketed and serviced by Inalsa Home Appliances.

Refer to the Customer Care List provided with your product for detailed contact information.

**Manufacturer:** Tuareg Marketing Pvt Ltd

	<p><a href="#"><u>Mellerware Executiv Bravissimo II Pro Steam Station User Manual</u></a></p> <p>Comprehensive user manual for the Mellerware Executiv Bravissimo II Pro Steam Station (Model 23810), detailing operation, safety warnings, maintenance, and troubleshooting.</p>
	<p><a href="#"><u>Mellerware Sauty Frying Pan: User Guide and Safety Information</u></a></p> <p>Comprehensive user guide for the Mellerware Sauty frying pan, including essential safety warnings, care instructions, and warranty details. Available in multiple languages.</p>
	<p><a href="#"><u>Mellerware Mixo Hand Mixer 26450 User Manual and Warranty Information</u></a></p> <p>Comprehensive user manual and warranty details for the Mellerware Mixo Hand Mixer (Model 26450), including safety instructions, operating procedures, cleaning, and troubleshooting. Covers extended warranty registration.</p>
	<p><a href="#"><u>Mellerware Egg Master 350W Egg Boiler (Model 27006A) - User Manual and Warranty</u></a></p> <p>Comprehensive user manual and warranty information for the Mellerware Egg Master 350W Egg Boiler (Model 27006A). Learn how to use, clean, and register your appliance.</p>
	<p><a href="#"><u>Mellerware Orion II Steam Iron - User Manual and Warranty Information</u></a></p> <p>Comprehensive guide to the Mellerware Orion II Steam Iron, covering warranty registration, usage instructions, safety precautions, cleaning, and maintenance. Includes details on the 3-year warranty program and product operation.</p>
	<p><a href="#"><u>Mellerware Petto! Eat Small Automatic Pet Feeder Manual</u></a></p> <p>User manual for the Mellerware Petto! Eat Small automatic pet feeder, providing instructions for setup, use, cleaning, and troubleshooting. Includes safety warnings and product specifications.</p>