

DASH DEC012BK

DASH Deluxe Rapid Egg Cooker User Manual

Model: DEC012BK

Brand: DASH

INTRODUCTION

The DASH Deluxe Rapid Egg Cooker is designed to simplify your breakfast routine by perfectly cooking eggs in various styles. This versatile appliance can prepare up to 12 hard-boiled eggs, 7 poached eggs, or individual omelets at a time. Beyond eggs, it also functions as a steamer for vegetables, dumplings, and more, making it a valuable addition to any kitchen.

IMPORTANT SAFETY INFORMATION

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Always read all instructions before using the appliance. Do not touch hot surfaces. Use handles or knobs. Do not immerse cord, plugs, or appliance in water or other liquid. Close supervision is necessary when any appliance is used by or near children. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries. Do not use outdoors. Do not let cord hang over edge of table or counter, or touch hot surfaces. Do not place on or near a hot gas or electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet. Do not use appliance for other than intended use.

PRODUCT OVERVIEW AND COMPONENTS

The DASH Deluxe Rapid Egg Cooker comes with several components designed for versatile cooking:

- Main Unit with Heating Plate
- Measuring Cup with Egg Piercer

- Egg Holder Trays (2 tiers, for up to 12 eggs)
- Poaching Tray (for up to 7 poached eggs)
- Omelet Bowl
- Clear Lid

EGGS-ACTLY WHAT YOU NEED

Everything you need to make breakfast
eggs-traordinary!



Image: All components of the DASH Deluxe Rapid Egg Cooker, showing the main unit, measuring cup, two egg holder trays, a poaching tray, and an omelet bowl. The image also indicates the product dimensions of 8"L x 8"W x 9"H.



Image: The assembled DASH Deluxe Rapid Egg Cooker, black base with clear lid, containing white eggs ready for cooking.

SETUP

1. Before first use, wash all non-electric parts (egg trays, poaching tray, omelet bowl, measuring cup, lid) in warm, soapy water. Rinse thoroughly and dry.
2. Place the main unit on a stable, flat, heat-resistant surface.
3. Ensure the power cord is not touching any hot surfaces and is positioned safely.

OPERATING INSTRUCTIONS

The Dash Deluxe Rapid Egg Cooker features an auto-off function and a buzzer to indicate when cooking is complete, preventing overcooking.

General Operation Steps:

1. Fill the measuring cup with the appropriate amount of water according to the desired egg consistency (soft, medium, or hard-boiled) or recipe. Pour the water directly onto the heating plate of the main unit.
2. For boiled eggs, use the built-in egg piercer on the bottom of the measuring cup to make a small hole in the larger end of each egg. This helps prevent cracking during cooking and makes peeling easier.
3. Place the eggs into the egg holder trays. For 12 eggs, use both tiers. For fewer eggs, you can use just one tier.
4. For poached eggs, lightly grease the poaching tray, crack eggs into the individual sections, and place the tray on top of the egg holder tray.
5. For omelets, whisk eggs with desired ingredients in a separate bowl, pour into the omelet bowl, and place it on top of the egg holder tray.
6. Cover the unit with the clear lid.
7. Plug the appliance into a power outlet and press the power button. The indicator light will illuminate.
8. The cooker will automatically shut off and sound a buzzer when the water has evaporated and the eggs are cooked to the desired consistency.
9. Carefully remove the lid (steam will be hot) and transfer the cooked eggs or other food. For boiled eggs, immediately place them in an ice bath or run under cold water to stop the cooking process and facilitate easier peeling.

Perfect Eggs
IN A DASH!

Boil up to 12 eggs at once *faster* than it takes to boil water on the stove.



Image: A top-down view of the egg cooker showing 12 eggs arranged in the trays, highlighting its rapid cooking capability.

EGG-CITING BREAKFAST

Recipes included for *easy-make* omelettes
& poached eggs plus hard-boiled
deviled eggs & more!



Image: The egg cooker with brown eggs, surrounded by prepared breakfast items like deviled eggs, poached eggs on toast, and fruit, demonstrating its versatility for breakfast meals.



DOUBLE DUTY

Doubles as a *large* capacity steamer for vegetables, dumplings, and more!

Image: The egg cooker demonstrating its "Double Duty" as a steamer for vegetables, dumplings, and potatoes, showcasing its multi-functional use beyond just eggs.

Official Product Video:

Your browser does not support the video tag.

Video: An official product video demonstrating the features and use of the Dash Deluxe Rapid Egg Cooker, including how to prepare hard-boiled eggs, poached eggs, and omelets.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and optimal performance of your egg cooker. All non-electric parts are dishwasher safe.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wash the egg holder trays, poaching tray, omelet bowl, measuring cup, and lid in warm, soapy water or place them on the top rack of your dishwasher.
3. To clean the heating plate: If mineral deposits or discoloration (rust-colored or white spots) appear due to hard water, mix 1 part white vinegar with 9 parts water in the cooker (do not overfill). Heat the solution briefly until it

bubbles, then turn off and unplug the device. Carefully pour out the mixture. Use a wet cloth or sponge to wipe down the heating plate while it is still warm (be cautious). Towel dry thoroughly.

4. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.

QUICK CLEANUP

All accessories go *right* into the dishwasher
for a cleanup that's over easy!



Image: Egg cooker accessories placed in a dishwasher, illustrating the ease of cleanup as all non-electric parts are dishwasher safe.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs not cooked to desired consistency.	Incorrect water amount used.	Refer to the measuring cup markings and instruction manual for precise water levels for soft, medium, or hard-boiled eggs.
Eggs cracking during cooking.	Eggs not pierced before cooking.	Always use the egg piercer on the measuring cup to make a small hole in the larger end of each egg before placing them in the cooker.

Problem	Possible Cause	Solution
White residue or discoloration on heating plate.	Mineral deposits from hard water.	Clean the heating plate with a mixture of white vinegar and water as described in the Maintenance section.
Buzzer does not sound or unit does not shut off.	Unit malfunction or not enough water.	Ensure sufficient water is added. If the issue persists, contact customer support.

SPECIFICATIONS

- **Model:** DEC012BK
- **Brand:** DASH
- **Color:** Black
- **Material:** Plastic
- **Product Dimensions:** 8"L x 8"W x 9"H
- **Item Weight:** 1.8 Pounds
- **Capacity:** 12 eggs (load)
- **Electric:** Yes
- **Manufacturer:** Dash
- **Country of Origin:** China
- **UPC:** 365250766381, 856290005993

WARRANTY AND SUPPORT


The DASH Deluxe Rapid Egg Cooker is backed by a **1-year manufacturer warranty**. For warranty claims or product support, please refer to the contact information provided in your product packaging or visit the official DASH website.






You can also find additional resources and recipes on the [DASH Store on Amazon](#).



© 2024 DASH. All rights reserved.

Related Documents - DEC012BK

	<p>Dash Rapid Egg Cooker DEC005: Instruction Manual and Recipe Guide</p> <p>Comprehensive instruction manual and recipe guide for the Dash Rapid Egg Cooker (Model DEC005), featuring safety instructions, parts identification, usage guides, cleaning tips, troubleshooting, and a variety of egg recipes.</p>
---	--

 <p>DASH RAPID EGG COOKER</p> <p>GET COOKING</p> <p>Place the Dash Rapid Egg Cooker on a flat surface. Plug the power cord into a standard wall outlet. Fill the water reservoir with water to the fill line. Place eggs into the egg slots. Close the lid. Press the power button. The cooker will automatically shut off when the eggs are done.</p> <table><thead><tr><th>STYLE</th><th># OF EGGS</th><th>TIME</th></tr></thead><tbody><tr><td>Soft-Boiled</td><td>1-2</td><td>4-5</td></tr><tr><td>Medium Egg</td><td>1-2</td><td>8-9</td></tr><tr><td>Hard-Boiled</td><td>1-2</td><td>12-15</td></tr></tbody></table>	STYLE	# OF EGGS	TIME	Soft-Boiled	1-2	4-5	Medium Egg	1-2	8-9	Hard-Boiled	1-2	12-15	<p>Dash Rapid Egg Cooker: Quick Start Guide and Instructions</p> <p>Learn how to use your Dash Rapid Egg Cooker for perfect hard-boiled, poached, and omelette-style eggs. Includes cooking times, cleaning instructions, and auto-shutoff features.</p>
STYLE	# OF EGGS	TIME											
Soft-Boiled	1-2	4-5											
Medium Egg	1-2	8-9											
Hard-Boiled	1-2	12-15											
 <p>DASH RAPID EGG COOKER</p> <p>One Touch Cooking 6 Egg Capacity 1040 Watts</p>	<p>Dash Rapid Egg Cooker DEC005: User Manual, Safety, and Recipes</p> <p>Comprehensive guide for the Dash Rapid Egg Cooker (Model DEC005). Includes safety instructions, parts identification, usage guides for boiling, poaching, and omelets, cleaning tips, troubleshooting, and a variety of delicious egg recipes.</p>												
 <p>DASH PEEPS RAPID EGG COOKER</p> <p>Instruction Manual Recipe Guide</p>	<p>Dash PEEPS Rapid Egg Cooker Instruction Manual and Recipe Guide</p> <p>Comprehensive guide for the Dash PEEPS Rapid Egg Cooker, including setup, usage instructions, safety precautions, troubleshooting, and a variety of recipes for boiled eggs, deviled eggs, egg salad, frittatas, and more.</p>												
 <p>DASH DELUXE EGG COOKER</p> <p>Instruction Manual Recipe Guide</p>	<p>Dash Deluxe Egg Cooker Instruction Manual and Recipe Guide</p> <p>Comprehensive guide for the Dash Deluxe Egg Cooker, including important safeguards, parts and features, operating instructions, troubleshooting, and a variety of recipes.</p>												
 <p>DASH RAPID EGG COOKER</p> <p>One Touch Cooking 6 Egg Capacity 1040 Watts</p>	<p>Dash DEC005 Rapid Egg Cooker: User Manual, Features, and Recipes</p> <p>Comprehensive user manual and recipe guide for the Dash DEC005 Rapid Egg Cooker. Learn how to boil, poach, and make omelettes, plus find delicious recipes, troubleshooting tips, and warranty information.</p>												