

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Baby Einstein](#) /
- › [Baby Einstein Rock, Light & Roll Guitar Musical Toy Instruction Manual](#)

Baby Einstein 90680

Baby Einstein Rock, Light & Roll Guitar Musical Toy

Model: 90680

1. PRODUCT OVERVIEW

The Baby Einstein Rock, Light & Roll Guitar Musical Toy is designed to introduce infants aged 3 months and up to music appreciation. This toy features two primary modes of play: strumming a spinning rattle ball and pressing numbered buttons to activate classical melodies and light shows. Its compact design includes an easy-to-grab handle for portability.



The Baby Einstein Rock, Light & Roll Guitar Musical Toy, featuring a blue body, black and white striped neck, and colorful buttons.

2. KEY FEATURES

- Two modes of play: spinning rattle ball for strumming sounds and numbered buttons for melodies.
- Plays 10 classical melodies.
- Integrated flashing light show accompanies music.
- Designed for floor play and on-the-go use.
- Features an easy-to-grab handle for small hands.
- Includes two volume settings and an off switch.

3. PACKAGE CONTENTS

The package contains one Baby Einstein Rock, Light & Roll Guitar Musical Toy. Three AAA batteries are included and pre-installed.



The Baby Einstein Rock, Light & Roll Guitar Musical Toy shown in its retail packaging.

4. BATTERY INSTALLATION

The toy comes with 3 AAA batteries pre-installed. If replacement is needed:

1. Locate the battery compartment on the back of the toy.
2. Using a Phillips head screwdriver, loosen the screw and open the battery compartment cover.
3. Remove the old batteries and insert 3 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the cover and tighten the screw securely.

Note: Always use fresh batteries of the same type. Do not mix old and new batteries or different types of batteries.

5. OPERATING INSTRUCTIONS

To begin using the Baby Einstein Rock, Light & Roll Guitar Musical Toy:

1. **Power On:** Locate the volume switch on the toy's body. Slide the switch to either the low volume or high volume setting to turn the toy on.
2. **Play Music with Buttons:** Press any of the three numbered buttons on the guitar's neck to activate short musical riffs and flashing lights.

3. **Play Music with Strumming:** Strum or spin the clear rattle ball located in the center of the guitar body to play 10 classical melodies and trigger a synchronized light show.
4. **Portability:** The toy features an integrated handle, allowing for easy carrying and play while on the go.
5. **Power Off:** To conserve battery life, slide the volume switch to the 'Off' position when the toy is not in use.



2 Opções de Volume

Para seu filho se divertir a qualquer hora do dia!

A close-up view of the green speaker grille and the two-level volume switch, along with an off switch, located on the toy guitar's body.



A baby sitting on the floor, happily engaging with the Baby Einstein musical guitar toy.

6. CARE AND MAINTENANCE

- Wipe the toy clean with a damp cloth and mild soap. Do not immerse in water.
- Air dry thoroughly before storage or next use.
- Avoid exposing the toy to direct sunlight or extreme temperatures.
- Remove batteries if the toy will not be used for an extended period.

7. TROUBLESHOOTING

- **No Sound/Lights:** Ensure the volume switch is not in the 'Off' position. Check if batteries are correctly installed and not depleted. Replace batteries if necessary.
- **Intermittent Operation:** This may indicate low battery power. Replace batteries.
- **Toy is not responding:** Turn the toy off and then on again to reset. If the issue persists, replace batteries.

8. SPECIFICATIONS

Feature	Detail
Model Number	90680
Product Dimensions	10 x 1.75 x 5.75 inches (approximately 25 x 4.4 x 14.6 cm)
Item Weight	10.6 ounces (approximately 300 grams)
Batteries Required	3 AAA batteries (included)
Battery Type	Alkaline
Target Gender	Unisex
Recommended Age	3 Months +



An illustration showing the approximate dimensions of the toy guitar: 25 cm (height), 16 cm (width), and 3 cm (thickness).

9. SAFETY INFORMATION

- Always supervise infants during play.
- Inspect the toy regularly for any damage or loose parts. Discontinue use if damage is found.

- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries properly according to local regulations.
- This toy is not intended for use in water.

10. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Baby Einstein website. Keep your purchase receipt for warranty claims.